



POWERFACTORY

PowerFactory 2021

Technical Reference

Siemens 7SA511

PF2021

POWER SYSTEM SOLUTIONS
MADE IN GERMANY

Publisher:

DlgSILENT GmbH
Heinrich-Hertz-Straße 9
72810 Gomaringen / Germany
Tel.: +49 (0) 7072-9168-0
Fax: +49 (0) 7072-9168-88
info@digsilent.de

Please visit our homepage at:
<https://www.digsilent.de>

Copyright © 2021 DlgSILENT GmbH

All rights reserved. No part of this
publication may be reproduced or
distributed in any form without written
permission of DlgSILENT GmbH.

November 15, 2019
PowerFactory 2021
Revision 924

Contents

1	Model information	1
2	General description	1
3	Features supported	1
3.1	Measurement and acquisition	1
3.1.1	Available Units and Input Signals	2
3.1.2	Functionality	2
3.1.3	Data input	2
3.2	Main Relay protective elements	3
3.2.1	Available Units	3
3.2.2	Functionality	3
3.2.3	Data input	5
3.3	OOS subrelay	8
3.3.1	Available Units	8
3.3.2	Functionality	8
3.3.3	Data input	8
3.4	Output logic	10
3.4.1	Available Units and Output Signals	10
3.4.2	Functionality	10
3.4.3	Data input	11
4	Features not supported	12
5	References	13

1 Model information

Manufacturer Siemens

Model 7SA511

Variants The Siemens 7SA511 PowerFactory relay model can be used to simulate any version of the Siemens 7SA511 relay. However please consider that the model has been implemented with the features available in the V3.2 firmware version.

2 General description

The Siemens 7SA511 line distance protection terminal is a protective relay for HV and EHV line distance protection applications. Additional protection functionality includes phase overcurrent, residual current and out of step functions.

The Siemens 7SA511 PowerFactory relay model consists of a main relay model and of the OOS (Out Of Step) sub relay. Two model subversions are available, one for each available rated current:

- 7SA511 1A
- 7SA511 5A

The Siemens 7SA511 PowerFactory relay model has been implemented to simulate the most commonly used protective functions.

The main relay contains the measurement and acquisition units, the starting element, the polarizing element, the distance elements, the directional element for the distance elements, the overcurrent elements, the output logic and the out of step sub relay.

The model implementation has been based on the information available in the relay manual [1].

3 Features supported

3.1 Measurement and acquisition

The voltage and the current are measured by one three phase current transformer ("Ct" block) and one three phase voltage transformer ("Vt" block).

Two measurement units ("Measure" and "Delta Measure" block) are fed by this CT and this VT.

An additional three phase/single phase current transformer ("Ct-Mutual" block) is measuring the zero sequence current contribution coming from a close line and is feeding a separate measuring unit ("MeasI0mut" block).

One relay input signal ("yExt") is present and can be used to implement a Permissive Underreach Transfer Trip logic ("PUTT").

3.1.1 Available Units and Input Signals

- One three phase current transformer ("Ct" block).
- One three phase voltage transformer ("Vt" block).
- One three phase/single phase current transformer ("Ct-Mutual" block).
- One three phase measurement block calculating both the phase and voltage values ("Measurement" block).
- One three phase measurement block calculating the phase to phase currents and the phase to phase voltages ("Delta Measure" block).
- One single phase measurement block calculating the mutual zero sequence current ("MeasI0mut" block).
- One relay input signal ("yExt" signal).

3.1.2 Functionality

The input signals are sampled at 80 samples/cycle; for each signal the average values are calculated using groups of 4 samples; the average values are processed by a DFT filter operating over a cycle which calculates then the voltage and current values used by the protective elements.

The "Delta Measure" block is calculating the current and voltage ph-ph values used by the phase loop distance elements.

3.1.3 Data input

The nominal current and the nominal voltage values MUST be entered in all the measurement blocks.

3.2 Main Relay protective elements

The starting element, the polarizing element, the directional element, the reclosing feature and the distance elements work together to simulate the Siemens 7SA511 distance functionalities. The distance elements can be controlled by the reclosing feature and by the power swing feature. Additionally some ancillary overcurrent elements are also available.

3.2.1 Available Units

- One starting element implementing the fault detection logic ("Starting" block).
- One directional element ("Dir-Z" block).
- One polarizing element ("Polarizing" block).
- Four distance trip zones processing both the phase and the ground loop impedances ("Z1", "Z2", "Z3" and "Z1b" block).
- Four timers associated with the distance trip zones ("ZT1", "ZT2", "ZT3" and "ZT1b" block).
- Two additional timers driven by the starting element ("ZT4" and "T5" block).
- One thermal image inverse characteristic element ("Thermal overload" block).
- Two time defined phase overcurrent elements ("Iph>" and "I>>" block).
- One inverse time ground current element ("High resistance IE>" block).
- One time defined ground current element ("IE>" block).
- One reclosing element ("Reclosing" block).

3.2.2 Functionality

Starting element The Siemens 7SA511 relay model starting element simulates the relay fault detection function and can be set to use one of the following criteria:

- Overcurrent fault detection (*Overcurrent I>>* option).
- Voltage controlled fault detection (*Underimpedance U/I* option).
- Impedance fault detection (*Impedance Z* option).

Separate settings are available for the earth fault detection (*Earth Fault detection* tab page). Loop determination rules can be set with different settings for *Earthed Networks* and for *Non-Earthed Networks*.

Directional element The directional element is based on the use of the polarizing voltage and of the operating current calculated by the polarizing block. The 3 phase loops and the 3 ground loops are evaluated separately.

Polarizing elements The polarizing element is calculating the voltage vectors used by the directional element taking care of the zero sequence current and of the *Earth Factor*. The operating current vectors are calculated including the mutual current contribution and the *Mutual Earth Factor*. Moreover the impedance values are calculated and are provided to the starting element and to the distance zone elements.

Distance trip zones The polygonal distance elements monitor both the phase and the ground loops; each loop is evaluated separately. All distance elements are directional and the direction can be set for each distance element. Independent timers are available for each distance element.

The phase loop polygonal distance elements can be blocked by the power swing detection element when a power swing condition has been detected.

The "Z1b" block can be used to implement an acceleration trip zone (the "Reclosing" block should be set to enable the "Z1b" element only during the first trip operation)

Reclosing element The reclosing element can be set to trigger a variable number of reclosing attempts. Different dead times during the first reclosing attempt can be set depending upon the type of fault (single phase-grnd fault or other types of fault). Different dead times can be set for the first reclosing attempt and for the following attempts.

Overcurrent elements Some ancillary overcurrent elements have been implemented in the model to simulate the thermal image element (a time phase inverse time element simulating the IEC 60255-8 equation and including a cooling characteristic), the two time defined phase overcurrent elements and the two ground overcurrent elements. The fuse failure feature is modeled using a three phase undervoltage element ("Fuse failure voltage threshold" block); the time defined ground overcurrent element and the phase overcurrent elements can be blocked when any phase voltage is smaller than a given threshold.

The earth fault inverse time element ("High resistance IE>" block) supports the following inverse characteristics:

- extremely inverse
- inverse
- very inverse

All the inverse time element trip characteristic equations comply with the IEC 60255-3 standards.

Additional timers The "ZT4" and the "T5" timer can be used to trigger a delayed backup trip. They are started after a fault has been detected by the starting element. The trip logic implemented by "ZT4" is controlled by the directional element: the fault must be detected in the direction defined by the *Tripping Direction* parameter of the "Dir-Z" block to trigger the trip after the time specified inside "Zt4" has expired. The trip logic implemented by "T5" is non directional.

3.2.3 Data input

The relationships between the relay settings and the model parameters can be found in the following tables (the relay model parameter names are listed between brackets):

Starting element :

Address	Relay Setting	Model block	Model setting	Note
7813	DIST. F. DET.	Starting	Type of starting (atype)	"Basic data" tab page
1102	SYSTEMSTAR	Starting	System Grounding (isisstar)	"Basic data" tab page
1501	PROG. U/I	Starting	Prog. U/I (iProgUI)	"Underimpedance/Overcurrent" tab page
1503	PROG. ZA	Starting	Prog. ZA (iProgZA)	"Impedance" tab page
1601	Iph>>	Starting	Iph>> (Iphgg)	"Underimpedance/Overcurrent" tab page
1602	Ie>	Starting	Ie> (Ieg)	"Earth Fault Detection" tab page
1611	Iph>	Starting	Iph> (Iphg)	"Underimpedance/Overcurrent" tab page
1612	Uphe (I>>)	Starting	Uphe(I>>) (UpheIgg)	"Underimpedance/Overcurrent" tab page
1613	Uphe (I>)	Starting	Uphe(I>) (UpheIlg)	"Underimpedance/Overcurrent" tab page
1614	Uphph (I>>)	Starting	Uphph(I>>) (UphphIgg)	"Underimpedance/Overcurrent" tab page
1615	Uphph (I>)	Starting	Uphph(I>) (UphphIlg)	"Underimpedance/Overcurrent" tab page
1621	Iph>	Starting	Minimum Iph> (Iphmin)	"Impedance" tab page
1622	X + A	Starting	Reactance Forward (XpA)	"Impedance" tab page
1623	X - A	Starting	Reactance Forward (XmA)	"Impedance" tab page
1624	RA1	Starting	Resistance RA1, Ph-Ph (RA1)	"Impedance" tab page
1625	RA2	Starting	Resistance RA2, Ph-Ph (RA2)	"Impedance" tab page
1626	RA1E	Starting	Resistance RA1E, Ph-E (RA1E)	"Impedance" tab page
1627	RA2E	Starting	Resistance RA2E, Ph-E (RA2E)	"Impedance" tab page
1628	ANGLE PHIA	Starting	Angle PHIA, Ph-Ph (PHIA)	"Impedance" tab page
1629	ANG. PHIAE	Starting	Angle PHIA, Ph-E (PHIAE)	"Impedance" tab page
1701	Ue>	Starting	Ue> grd. (Ue)	"Earth Fault Detection" tab page
1703	PH PHE FLTS PHASE- PHASEONLY	Starting	Ph-Ph-Earth Faults (iPhPhE)	"Fault loop Settings" tab page
1704	3PH FAULTS E/F CON- TROL	Starting	3 Phase-Detection (i3PhDet)	"Fault loop Settings" tab page
1705	1PH FAULTS PHASE- EARTHS	Starting	Single Phase Detection (i1PhFLT)	"Fault loop Settings" tab page
1802	Ue>	Starting	Ue> ungrd. (Ueiso)	"Earth Fault Detection" tab page
1803	PHASE PRE	Starting	Phase Preference for Ph-Ph-E Faults(iPHPRE)	"Fault loop Settings" tab page

Directional element :

No user input is required.

Polarizing element :

3 Features supported

Address	Relay Setting	Model block	Model setting	Note
1117	RE/RL	Polarizing	Re / RI (ReRI)	
1118	XE/XL	Polarizing	Xe / XI (XeXI)	
1119	RM/RL	Polarizing	Rm / RI (RmRI)	
1120	XM/XL	Polarizing	Xm / XI (XmXI)	

Distance trip zones :

Address	Relay Setting	Model block	Model setting	Note
1301	R1	Z1	+R Resistance (Rmax)	
1302	X1	Z1	+X Reach (Xmax)	
1303	R1E	Z1	+R Resistance PH-E (REMax)	
1304	DIREC. Z1	Z1	Tripping direction (idir)	
1305	T1 1PHASE	ZT1	Time Setting (Tdelay)	
1306	T1 >1PHASE	ZT1	Time Setting (Tdelay)	
1311	R2	Z2	+R Resistance (Rmax)	
1312	X2	Z2	+X Reach (Xmax)	
1313	R2E	Z2	+R Resistance PH-E (REMax)	
1314	DIREC. Z2	Z2	Tripping direction (idir)	
1315	T2 1PHASE	ZT2	Time Setting (Tdelay)	
1316	T2 >1PHASE	ZT2	Time Setting (Tdelay)	
1321	R3	Z3	+R Resistance (Rmax)	
1322	X3	Z3	+X Reach (Xmax)	
1323	R3E	Z3	+R Resistance PH-E (REMax)	
1324	DIREC. Z3	Z3	Tripping direction (idir)	
1325	T3	ZT3	Time Setting (Tdelay)	
1401	R1B	Z1b	+R Resistance (Rmax)	
1402	X1B	Z1b	+X Reach (Xmax)	
1403	R1BE	Z1b	+R Resistance PH-E (REMax)	
1404	DIREC. Z1B	Z1b	Tripping direction (idir)	
1405	T1B 1PHASE	ZT1b	Time Setting (Tdelay)	
1406	T1B >1PHASE	ZT1b	Time Setting (Tdelay)	

Reclosing :

Address	Relay Setting	Model block	Model setting	Note
1201	DIST.PROT.	Z1,Z2,Z3,Z1b	Out of Service(outserv)	<p>in this cell in the "Logic" tab page select the "Reclosing" item to make Z1b effective before RAR</p> <p>in this cell in the "Logic" tab page select the "Lockout" item to block the autoreclose for faults inside Z1b</p> <p>Set model parameter = relay setting + 2</p>
1216	RAR->Z1B	Reclosing	"Z1b" row, "Trip1"	
1221	BLK. AR Z1B	Reclosing	"Z1b" row, "Trip1"	
3405	T-RECLAIM	Reclosing	Reset Time (resetime)	
3425	RAR T - 3POL	Reclosing	Reclosing Interval 1 (recltime1)	
3426	RAR T - 1POL	Reclosing	Reclosing int 1 1Ph-Grnd faults (recltime11ph)	
3443	DAR no. 1PH	Reclosing	Operations to lockout (oplock-out)	
3444	DAR no. 3PH	Reclosing		
3447	DAR T3POL2	Reclosing	Reclosing Interval 2 (recltime2)	
3448	DAR T3POL3	Reclosing	Reclosing Interval 3 (recltime3)	

Overcurrent :

Address	Relay Setting	Model block	Model setting	Note
2601	EMERG. O C ON	Iph> I>> IE>	Out of Service (outserv) Out of Service (outserv) Out of Service (outserv)	
2602	I>>	I>>	Pickup Current (Ipsetr)	
2603	T-I>>	I>>	Time Setting (Tset)	
2612	I>	Iph>	Pickup Current (Ipsetr)	
2613	T-I>	Iph>	Time Setting (Tset)	
2642	IE>	IE>	Pickup Current (Ipsetr)	
2643	T-IE>	IE>	Time Setting (Tset)	
2701	THERMAL OL	Thermal overload	Out of Service	
2702	K - FACTOR	Thermal overload	Current Setting (Ipsetr)	
2703	T - CONSTANT	Thermal overload	Time Dial (Tpset)	
2907	UMEAS U<	Fuse failure voltage threshold	Pickup Voltage (Uset)	
3301	E / F I.T.	High re-sistance IE>	Out of Service (outserv)	
3302	E / F CHARAC	High re-sistance IE>	Characteristic (pcharac)	
3303	Ie>	High re-sistance IE>	Current Setting (Ipsetr)	
3304	T - Ie>	High re-sistance IE>	Time Dial (Tpset)	

Additional timers :

Address	Relay Setting	Model block	Model setting	Note
1202	DIR. FD&T4	Dir-Z	Tripping direction (idir)	
1203	T4	ZT4	Time Setting (Tdelay)	
1204	T5	T5	Time Setting (Tdelay)	

3.3 OOS subrelay

This subrelay simulates the feature available in the Siemens 7SA511 power swing supplement (address block 20). The function has the purpose to block the distance elements when a power swing condition is detected. Moreover a out of step tripping can be activated in case of unstable power swings.

3.3.1 Available Units

- impedance zone ("Outer Zone" block).
- One power swing and out of step detection element ("Out Of Step" block).

3.3.2 Functionality

The Power Swing function comprises an inner and an outer impedance measurement characteristic; the inner zone is the relay starting element impedance shape, the outer zone is a twin starting impedance shape (the "Outer Zone" block contained in this subrelay) stretched by the "DELTA R" relay setting impedance. Its principle of operation is based on the measurement of the time it takes a power swing transient impedance to pass through the impedance area between the outer and the inner characteristics. Power swings are identified by transition times longer than the DR / DT timer setting. Out of step conditions are detected by the transient impedance passing through both the outer and the inner characteristic.

3.3.3 Data input

The boundaries of the model outer zone must be set manually and don't have an one to one relationship with the relay settings.

The relationships between the relay settings and the model parameters can be found in the following table (the relay model parameter names are listed between brackets):

Address	Relay Setting	Model block	Model setting	Note
7820	POWER SWING	Out Of Step	Out of service(outserv)	Set the "Out of Step" check box only when the "OUT-OF-STEP TRIP" item is set in the relay
2002	P / S PROGR.	Out Of Step	Blocking Configuration (iblock-conf)	
2002	P / S PROGR.	Out Of Step	Out of Step (ioos)	
2003	Delta R	Outer zone	RA1	RA1 = "Starting RA1" (address 1624) + "Delta R"
		Outer zone	RA2	RA1 = "Starting RA2" (address 1625) + "Delta R"
2004	dR / dT	Out Of Step	tP1 (tp1)	In the "Timers" tab page
2005	P / S T-ACT	Out Of Step	tH (tH)	In the "Timers" tab page
		Outer zone	lph>> (lphgg)	Set equal to lph>> (lphgg) of the Starting block
		Outer zone	lph> (lphmin)	Set equal to lph> (lphmin) of the Starting block
		Outer zone	Reactance Forward (XpA)	Set equal to Reactance Forward (XpA of the Starting block + "Delta R"

3 Features supported

Address	Relay Setting	Model block	Model setting	Note
		Outer zone	Reactance Forward (XmA)	Set equal to Reactance Forward (XmA) of the Starting block + "Delta R"
		Outer zone	Angle PHIA, Ph-Ph (PHIA)	Set equal to Angle PHIA, Ph-Ph (PHIA) of the Starting block

3.4 Output logic

The output logic is the interface between the relay and the power system. A set of relay output signals can be used to simulate the control logics.

3.4.1 Available Units and Output Signals

The trip logic is implemented by the "Logic" block located in the main relay. The "Closing Logic" block controlled by the reclosing feature ("Reclosing" block) has the purpose of generating a closing command for the power breaker when a reclosing attempt is triggered.

Twelve relay output signals are available:

- *forward* The directional block forward signal (on when a forward fault has been detected).
- *reverse* The directional block reverse signal (on when a reverse fault has been detected).
- *yZ1b* The extension distance zone starting signal.
- *yZ3* The third distance zone starting signal.
- *yZ2* The second distance zone starting signal.
- *yZ1* The first distance zone starting signal.
- *yTZ1b* The extension distance zone tripping signal.
- *yTZ3* The third distance zone tripping signal.
- *yTZ2* The second distance zone tripping signal.
- *yTZ1* The first distance zone tripping signal.
- *yout* The "Logic" block output signal.
- *yClose* The "Closing Logic" block output signal.

3.4.2 Functionality

The "Logic" block located in the main relay is operating the breaker.
The relay output signal which is used to operate the breaker is "yout".

Moreover it implements the Permissive Underreach Transfer Trip logic ("PUTT").
For this purpose the "yExt" relay input signal is used in accordance with the following logic:

A PUTT condition is declared and the breaker is operated when

- The PUTT logic is active ("PUTT" parameter).
- The PUTT input signal (*yExt*) is on.
- The relay has started (the *Starting* element picked up).

3.4.3 Data input

Please disable the "Logic" block in the main relay to disable the relay model's ability to open the power circuit.

To enable the PUTT logic set the "PUTT " parameter in the "Logic" tab page of the "Logic" block dialog equal to TRIP. This is disabled (NOTRIP) by default.

4 Features not supported

The following features are not supported:

- Overreach zone Z1L.
- Synchronism and voltage check.
- Fault location.
- User definable logic functions.
- Permissive Overreach Transfer Trip and other teleprotection scheme. (POTT scheme, directional comparison, unblocking etc.).
- Dead fault protection.
- Distance zone Z1, Z1b and Z2 delays , multiphase faults (address 1305, 1315, 1405).
- High resistance earth fault protection directional characteristic (address block 31 and 32).

5 References

- [1] Siemens, AKTIENGESELLSCHAFT, Dept EV S SUP 21, D-13623 Berlin. *Numerical Distance Protection Relay SIPROTEC 7SA511 V3.2 Order n. C53000-G1176-C98-6*, 1995.