


# Matlab4sensicam

## Before starting...

The following conditions have to be fulfilled to enable the operation from sensicam family, dicam pro family and hsfc pro family of pco camera systems:

- [1] the pci board of the camera is installed properly
- [2] the corresponding drivers from the CD or the website and the corresponding SDK from the CD or the website are installed
- [3] Matlab operation has been checked with Matlab v6.5.0 and Image Processing Toolbox v4.0 and higher
- [4] The GenericDLL.exe has to be installed properly, (see the information given by The Mathworks at the end of this manual)
- [5] the directories where the M-files from this zip.file are unpacked as well as the directory where the pco SDK is installed have to be added with the "Set Path" function of Matlab (see image below) to announce them to Matlab:

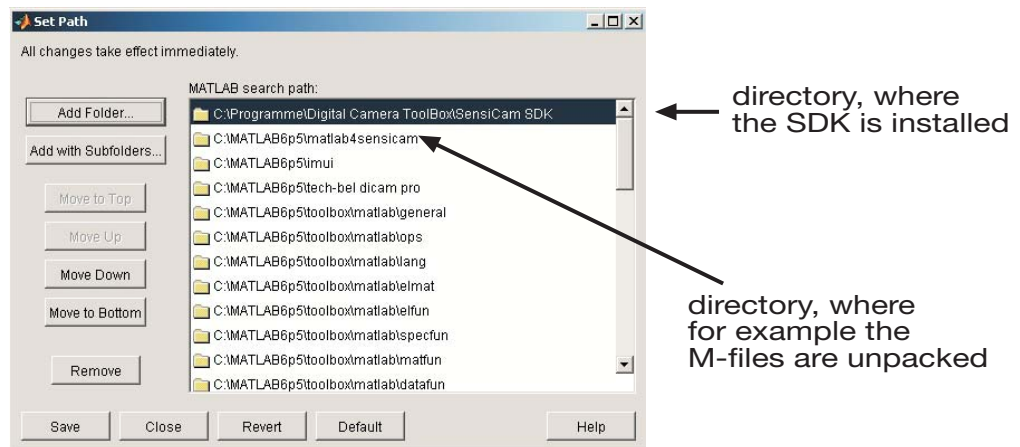

## The functions...

The presented M-files to control and access the PCO sensicam, dicam pro & hsfc pro camera family represent a subset of commands, which is available with the PCO SDK (software development kit, can be downloaded for free at [www.pco.de](http://www.pco.de)). It uses the GenericDLL interface of Matlab and contains therefore only the SDK functions, which do not use Windows handles.

The structure for the naming for the functions always corresponds to the used name in the SDK and adding the letters "sc" in front, therefore the SDK function "GET\_IMAGE\_SIZE" becomes for Matlab "scGET\_IMAGE\_SIZE". The help text of the Matlab functions given as M-files contain information about calling convention, differences to the original SDK calling and page numbers of the SDK manual. The parameter and value transfer is a little bit changed compared to the SDK functions, mainly to suit the way Matlab acts.

If you find errors in the scripts or something is not working as described, it would be nice to inform [support@pco.de](mailto:support@pco.de) about it. We'll try to check and improve if possible and necessary.

Corresponding to the advice on page 6 in the SDK manual a simple program, which describes how to record an image with a camera, and a simple GUI-application is added in the zip-file. For more detailed information please have a look into the SDK manual.

The application files are:

simpleMatlab4sensicam.m - this is a simple take one image application

Matlab4sensicam.m - this is a GUI application to show some of the functionality of the camera, Matlab4sensicam.fig - corresponding GUI figure file





# Matlab4sensicam

## scRUN\_COC

Processing of the COC is started with scRUN\_COC. The COC program describes the read out procedure for the CCD image sensor as well as the delay and exposure times for capturing an image. In continuous mode the COC program is starting repeatedly until a scSTOP\_COC command is executed.

Note: scRUN\_COC does not transfer images to the image buffers of the PCI interface board as long as there are all buffers occupied by images! In order to release buffers call scREAD\_IMAGE... (releases one buffer) or scSTOP\_COC (releases all buffers) or scCLEAR\_BOARD\_BUFFER (releases one buffer). run\_mode = 4 (single) should not be called in simultaneous mode, otherwise this causes the camera and DLL to make some processing, which will decrease performance.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 26}

syntax error\_code = scRUN\_COC(run\_mode)

input run\_mode [int32]: 0 - continuous  
1 - single

output error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

## scSTOP\_COC

This function interrupts a running exposure (execution of the COC program, COC = camera operation code). It can be used as a break option, e.g. in case of very long delay and exposure times. Additionally, the image buffers of the PCI interface board are released and stored images are lost!

Note: After scSTOP\_COC is called the BUSY signal of the PCI interface board indicates "busy state, not ready for taking images" until scSET\_COC is called again. For description of the BUSY signal see description of the PCI interface board.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 27}

syntax error\_code = scSTOP\_COC

input none

output error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

## scGET\_STATUS

This function gets status information from the camera and the PCI interface board and read the temperature of the camera circuits and of the CCD image sensor.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 28}

syntax [cam\_type, temp\_ele, temp\_ccd, error\_code] = scGET\_STATUS

input none

output cam\_type [int32]: camera status information, for explanation of  
bit meaning see SDK manual p.28

temp\_ele [int32]: temperature value of camera electronic  
valid range -30...+65°C (-22...+149°F)

temp\_ccd [int32]: temperature value of CCD-chip  
valid range -30...+65°C (-22...+149°F)

error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

## scGET\_CAMERA\_CCD

This function reads the CCD image sensor type of the camera.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 29}

syntax [ccd\_type, error\_code] = scGET\_CAMERA\_CCD(board\_number)

input board\_number [int32]: number of PCI interface board  
-1 - board selected with the last  
scSET\_BOARD call

output ccd\_type [int32]: 0..3  
1 VGA black & white  
2 VGA color... for more information  
see SDK manual p.29

error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

# Matlab4sencicam

## scGET\_CAMERA\_TYP

This functions determines the camera type

{pco SDK for sensicam, dicam pro, hsfc pro manual page 29}

syntax [camera\_type, error\_code] = scGET\_CAMERA\_TYP(board\_number)

input board\_number [int32]: number of PCI interface board  
-1 - board selected with the last  
scSET\_BOARD command

output camera\_type [int32]: 0..3  
type of camera  
1 - fast shutter  
2 - long exposure  
3 - dicam pro

error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

## scGET\_IMAGE\_SIZE

This function reads the actual image size. The image size depends on the binning and ROI settings, which have been set by the last scSET\_COC() command and on the CCD image sensor type. In "double shutter" mode or cameras the height of the double image (2..2048) is returned.

Note: this function returns invalid values, if it is called after a LOAD\_USER\_COC() command.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 30}

syntax [image\_width, image\_height, error\_code] = scGET\_IMAGE\_SIZE

input none

output image\_width [int32]: width of image in pixel  
image\_height [int32]: height of image in pixel

error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

## scGET\_CCD\_SIZE

This function gets the total available pixel number of the CCD image sensor.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 30}

syntax [ccd\_size, error\_code] = scGET\_CCD\_SIZE

input none

output ccd\_size [int32]: number of pixel of the CCD chip  
307200 (VGA)  
1310720 (SVGA)  
1431040 (QE)

error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

## scGET\_IMAGE\_STATUS

This function gets the current image status.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 31}

syntax [image\_status, error\_code] = scGET\_IMAGE\_STATUS

input none

output image\_statusd [int32]: status of camera  
bit 0 = 0: no scREAD\_IMAGE... function  
is running  
bit 0 = 1: busy, scREAD\_IMAGE... is  
running  
bit 1 = 0: image data are available in PCI  
board buffers  
bit 1 = 1: no image data are available  
bit 2 = 0: COC is idle, not running  
bit 2 = 1: COC is running  
bit 3 = 0: none or one buffer is full  
bit 3 = 1: both buffers are full

error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

# Matlab4sensicam

## scGET\_COC\_SETTING

This function reads the actual camera settings, which have been set using the `scSET_COC()` command. The returned values have the same format as described for `scSET_COC()`.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 32}

syntax [mode, trig, roix1, roix2, roiy1, roiy2, hbin, vbin, table,...  
error\_code] = scGET\_COC\_SETTING(table\_in)

input table\_in [char array]: gives table of delay and exposure times in  
Milliseconds (sensicam) as strings,  
see SDK manual p. 10-24

output mode [int32]: mode, defines camera type, gain status & operational  
behavior

trig [int32]: sets camera trigger mode

roix1 [int32]: start value for horizontal ROI

roix2 [int32]: end value for horizontal ROI

roiy1 [int32]: start value for vertical ROI

roiy2 [int32]: end value for vertical ROI

hbin [int32]: set horizontal binning

vbin [int32]: set vertical binning

table [char array]: table that contains delay and exposure times  
in Milliseconds (sensicam) as strings

error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code

## scGET\_COCTIME

This function gives the COC time in [μs].

{pco SDK for sensicam, dicam pro, hsfc pro manual page 32}

syntax coc\_time = scGET\_COCTIME

input none

output coc\_time [single]: COC time in [μs]

## scGET\_BELTIME

This function gives the total time: delay + exposure time in [μs].

{pco SDK for sensicam, dicam pro, hsfc pro manual page 32}

syntax total\_exposure\_time = scGET\_BELTIME

input none

output total\_exposure\_time [single]: delay + exposure time in [μs]

## scGET\_EXPTIME

This function gives the exposure time in [μs].

{pco SDK for sensicam, dicam pro, hsfc pro manual page 32}

syntax exposure\_time = scGET\_EXPTIME

input none

output exposure\_time [single]: exposure time in [μs]

## scGET\_DELTIME

This function gives the exposure time in [μs].

{pco SDK for sensicam, dicam pro, hsfc pro manual page 32}

syntax delay\_time = scGET\_DELTIME

input none

output delay\_time [single]: delay time in [μs]

## scLOAD\_OUTPUT\_LUT

This function copies values of the look-up-table (LUT) into the internal look-up-table (LUT) memory used by the black & white convert functions of the SDK, which convert the pixel values from 12bit to 8bit, e.g. `scREAD_IMAGE_8BIT()`. The size of the allocated memory for the look-up-table must be at least 4kByte. Only the first 4kByte of the look-up-table are copied.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 33}

syntax error\_code = scLOAD\_OUTPUT\_LUT(look\_up\_table)

input look\_up\_table [uint8]: 1-dimensional vector containing the 4096  
values for a valid look-up-table

output delay\_time [single]: delay time in [μs]

error\_code [int32]: zero on success, nonzero indicates failure,  
returned value is the error code



- 7 -

# Matlab4sensicam

## scCONVERT\_BUFFER\_12TOCOL

When this function is called, a 16bit memory area (12bit pixel) with a size "width x height" in pixel is converted into a COLOR memory area with 3 colors of 8bit each (BGR) using internal LUTs (look-up-tables) , which have been loaded with scLOAD\_COLOR\_LUT or scLOAD\_PSEUDO\_COLOR\_LUT. The missing intermediate values of colors red, green and blue are interpolated.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 35}

**syntax** [color\_image, error\_code] = scCONVERT\_BUFFER\_12TOCOL(...  
convert\_mode, image\_12bit)

**input** convert\_mode [int32]: convert mode, combination of the following flags  
0x0000 - normal  
0x0001 - flip (change columns)  
0x0008 - mirror (change rows)

**output** image\_12bit [uint16]: input image, 16bit  
color\_image [uint8]: output image, 8bit, converted  
error\_code [int32]: zero on success, nonzero indicates failure, returned value is the error code

## scREAD\_IMAGE\_8BIT

This function reads an image with the selected "width" and "height" (in pixel) from the PCI interface board buffer, converts the data from 12bit to 8bit using the internal LUT (look-up-table) loaded with the scLOAD\_OUTPUT\_LUT. If the function was successful, the PCI interface board buffer containing the image is released and the image can't be read again. The number of bytes which are read equals "width x height". In "double shutter" mode the two half images are read as one data set of double height, when this function is called.

{pco SDK for sensicam, dicam pro, hsfc pro manual page 36}

**syntax** [result\_image, error\_code] = scREAD\_IMAGE\_8BIT(...  
read\_image\_mode, image\_width,...  
image\_height)

**input** read\_image\_mode [int32]: convert mode, combination of the following flags  
0x0000 - normal  
0x0001 - flip (change columns)  
0x0008 - mirror (change rows)

image\_width [int32]: horizontal size of image  
image\_height [int32]: vertical size of image

**output** result\_image [uint8]: 8bit image, which has been read  
error\_code [int32]: zero on success, nonzero indicates failure, returned value is the error code

## scREAD\_IMAGE\_12BIT

This function reads an image with the selected "width" and "height" (in pixel) from the PCI interface board buffer, converts the data from 12bit to 8bit using the internal LUT (look-up-table) loaded with the scLOAD\_OUTPUT\_LUT. If the function was successful, the PCI interface board buffer containing the image is released and the image can't be read again. The number of bytes which are read equals "width x height". In "double shutter" mode the two half images are read as one data set of double height, when this function is called.

(for differences in Win95/98 and WinNT/2000 see SDK manual, p.37)

{pco SDK for sensicam, dicam pro, hsfc pro manual page 37}

**syntax** [result\_image, error\_code] = scREAD\_IMAGE\_12BIT(...  
read\_image\_mode, image\_width,...  
image\_height)

**input** read\_image\_mode [int32]: convert mode, combination of the following flags  
0x0000 - normal  
0x0001 - flip (change columns)  
0x0008 - mirror (change rows)

image\_width [int32]: horizontal size of image  
image\_height [int32]: vertical size of image

**output** result\_image [uint16]: 12bit image, which has been read  
error\_code [int32]: zero on success, nonzero indicates failure, returned value is the error code



- 9 -

# Matlab4sencicam

## Simple Matlab program...

```
% load library "Senntcam.dll" & corresponding Header-File "Sencam.h"
loadlibrary('Senntcam','Sencam');
% set board number, in this case one board is installed => 0
% only necessary if multiple boards are used
board_number=0;
error_code = scSET_BOARD(board_number);
% in case a process is running, stop everything by scSET_INIT(0)
init_mode_terminate = int32(0);
error_code = scSET_INIT(init_mode_terminate);
% initialization of the camera and of the hardware
init_mode_initcam = int32(1);
error_code = scSET_INIT(init_mode_initcam);
% call scGET_STATUS for reading the camera type as well as the CCD &
% electronics temperatures
[cam_type, temp_ele, temp_ccd, error_code] = scGET_STATUS;
% it makes sense to call a scTEST_COC before the scSET_COC is called,
% because in case of false value input, the corresponding return values
% will contain allowed values....
roix1 = 1; % horizontal left limit of ROI
roix2 = 40; % horizontal right limit of ROI
roiyl = 1; % vertical lower limit of ROI
roiyl2 = 32; % vertical upper limit of ROI
hbin = int32(1); % horizontal binning
vbin = int32(1); % vertical binning
exposure_str = num2str(1); % exposure time in ms as a string
delay_str = num2str(0); % delay in ms as a string
exposure_table = [delay_str, ',', exposure_str, ',', -1, -1'];
set_type = int32(4);
set_gain = int32(1);
set_submode = int32(0);
trig = int32(0);
[r_type, r_gain, r_submode, r_trig, r_roix1, r_roix2, r_roiyl, r_roiyl2,...
    r_hbin, r_vbin, r_table, error_code] = scTEST_COC(set_type,...
    set_gain, set_submode, trig, roix1, roix2,...
    roiyl, roiyl2, hbin, vbin, exposure_table);
% write back the results
set_type = int32(r_type);
set_gain = int32(r_gain);
set_submode = int32(r_submode);
trig = r_trig;
roix1 = r_roix1;
roix2 = r_roix2;
roiyl = r_roiyl;
roiyl2 = r_roiyl2;
hbin = r_hbin;
vbin = r_vbin;
exposure_table = r_table;
% set the camera adjustments
error_code = scSET_COC(set_type, set_gain, set_submode, trig, roix1,
roix2,...
    roiyl, roiyl2, hbin, vbin, exposure_table);

% start an exposure
run_mode = 4; % single exposure
error_code = scRUN_COC(run_mode);
% Check for image status, to be sure that image is ready
image_busy = uint32(1); % if b0001, then camera is busy
no_image_available = uint32(2); % if b0010, then buffer empty
COC_runs = uint32(4); % if b0100, then COC running
both_buffers_full = uint32(8); % if b1000, then both buffers are full
bit_test = 1;
lower8bit_mask=uint32(255);
image_status = int32(99);
[ret_image_status, error_code] = scGET_IMAGE_STATUS;
while bit_test == 1
    [ret_image_status, error_code] = scGET_IMAGE_STATUS;
    ret_image_status = bitand(ret_image_status, lower8bit_mask);
    image_busy_test = bitand(ret_image_status, image_busy);
    no_image_available_test = bitand(ret_image_status, no_image_available);
    COC_runs_test = bitand(ret_image_status, COC_runs);
    both_buffers_full_test = bitand(image_status, both_buffers_full);
    if (no_image_available_test == 0) & (image_busy_test == 0)
        bit_test=0;
    end
end
```

# Matlab4sensicam


## Simple Matlab program continued...

```
% if an image is available
% read the resulting image size
[image_width, image_height, error_code] = scGET_IMAGE_SIZE;
% read the image data
read_image_mode = int32(0);
[result_image, error_code] = scREAD_IMAGE_12BIT(read_image_mode, image_width,
image_height);
show_image = double(result_image);
show_image = mat2gray(show_image, [0 4095]);
%imview(show_image);
imshow(show_image);
% stop an exposure and reset image memory
error = scSTOP_COC;
% in case of presentation of a b/w image on the display
% ...scLOAD_OUTPUT_LUT
% ...scCONVERT_BUFFER_12TO8
% in case of an RGB image
% ...scLOAD_COLOR_LUT
% ...scCONVERT_BUF_12TOCOL
% or use scREAD_IMAGE_8BIT or scREAD_IMAGE_COL instead
% stop everything by scSET_INIT(0)
init_mode_terminate = int32(0);
error_code = scSET_INIT(init_mode_terminate);
```

## Simple Matlab GUI program...

The simple Matlab GUI program is just a simple example for the integration of the camera functions with a small amount of image processing functions using the Matlab image processing toolbox. The following screen views describe the integrated functionality in the 2 files: matlab4sensicam.fig (the GUI-file) and matlab4sensicam.m (the necessary M-files with all functions):

matlab4sensicam - main window

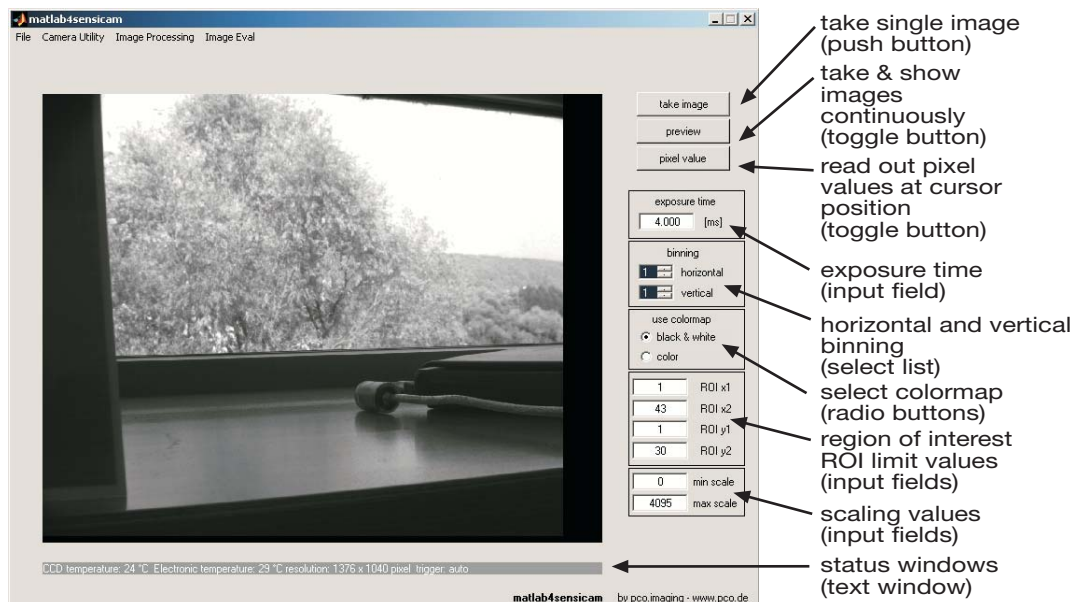

# Matlab4sensicam

## matlab4sensicam - menus

### file menu



#### **Open**

opens and reads TIFF-files for display and processing


#### **Save**

saves actual image in TIFF, JPEG or PNG format

#### **Quit**

exits program matlab4sensicam

### camera utility menu

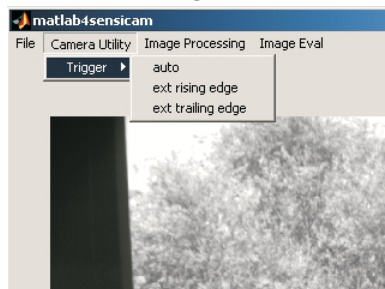

#### **Trigger - auto**

sets trigger mode to automatic (see SDK manual)


#### **Trigger - ext rising edge**

sets trigger mode to external rising edge trigger (see SDK manual)

#### **Trigger - ext trailing edge**

sets trigger mode to external trailing edge trigger (see SDK manual)

### Image Processing menu

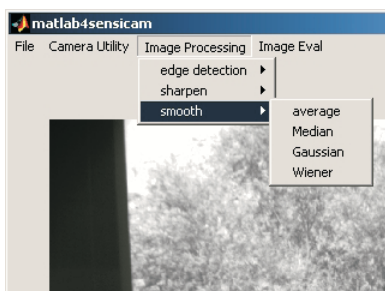

#### **edge detection**

Sobel or Prewitt operator applied to the current image


#### **sharpen**

unsharp masking applied to the current image

#### **smooth**

the current image is smoothed either by an average, Median, Gaussian or Wiener filter

### Image Evaluation menu

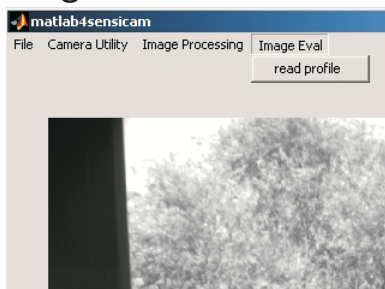

#### **read profile**

calls improfile to read out pixel values along the profile, which is defined by cursor position and mouse click, a double click ends the profile selection

# Matlab4sensicam

## Troubleshooting...

In case you get the following error message by Matlab, when you try to load the libraries:

```
>> lcc preprocessor warning: c:\programme\digital camera toolbox\sensicam
sdk\Sencam.h:650 EOF inside comment
lcc preprocessor warning: c:\programme\digital camera toolbox\sensicam
sdk\Sencam.h:650 No newline at end of file
```

please open the Sencam.h in the corresponding directory:

```
"C:\Programme\Digital Camera ToolBox\SensiCam SDK"
```

with a standard text editor, scroll down to the end of the last line and press the carriage return / enter key of your keyboard twice and store the file onto the old one. Next time, the error message is disappeared.

### please note - disclaimer:

The presented software is a free offer to pco ag customers and should facilitate the integration of pco camera systems into applications, which should use Matlab as controlling and image processing software.

pco ag assumes no responsibility for errors or omissions in these materials.

These materials are provided "as is" without warranty of any kind, either express or implied, including but not limited to, the implied warranties of merchantability, fitness for a particular purpose, or non-infringement.

pco ag further does not warrant the accuracy or completeness of the information, text, graphics, links or other items contained within these materials. pco shall not be liable for any special, indirect, incidental, or consequential damages, including without limitation, lost revenues or lost profits, which may result from the use of these materials. The information in this manual is subject to change without notice and does not represent a commitment on the part of pco ag in the future.

# Matlab4sensicam

## Information given by The Mathworks about how to install the GenericDLL.exe

As of MATLAB 6.5 (R13), it is possible to access functions defined in Windows standard dynamic linked libraries (.dll) through the MATLAB command line. This feature is only available for Windows 98/NT/2000/XP. If you are using MATLAB 6.5 (R13), you should download files needed to add this new functionality from the following site:

**`ftp://ftp.mathworks.com/pub/tech-support/solutions/s33513/genericDll.exe`**

To install:

1)Quit any current MATLAB sessions.

2)Download the genericDll.exe file (112 K). The download consists of a self-extracting executable that installs the necessary files into your MATLAB directory.

3)Save the downloadable to your local hard disk.

4)Double-click the executable to start the installation on your local PC. The WinZip Self-Extractor dialog opens, indicating the version of the update.

5)Read the comments in the WinZip Self-Extractor dialog, and then click OK. A dialog opens with the default location for MATLAB root as C:\MATLAB6p5. If MATLAB is installed in a different directory on your machine, specify that location instead.

6)Click the Unzip button to install the interface files in the appropriate directories. After the files are extracted and installed, a new dialog box opens and displays a message indicating that files have been successfully unzipped. The installation is complete. Click OK to close.

7)Exit the installation program by clicking Close in the WinZip Self-Extractor dialog box. Your interface to shared libraries is now ready for use.

8)If you have toolbox caching enabled, or if you obtain the following warning messages when you launch MATLAB

**%%BEGIN ERROR%%**

**\\System\MATLAB\toolbox\toolboxname not found in Toolbox Path Cache**

**Warning: MATLAB Toolbox Path Cache is out of date and is not being used.**

**%%END ERROR%%**

you will need to update the toolbox cache. For information on how to update the toolbox cache, refer to the following website:

**`http://www.mathworks.com/support/solutions/data/32237.shtml`**

The new feature allows you to load a Windows standard DLL into the MATLAB memory space and then access any of its functions. Because the DLL may contain functions programmed in languages other than C, the DLL must provide a C interface so that you can load and use the functions from within MATLAB.

Although data types differ between MATLAB and the C language environment used to program the DLL, in most cases, you can seamlessly pass MATLAB types to the functions in the library. MATLAB handles most of the data conversions necessary to marshal data to and from the DLL.

### **There are some limitations and restrictions that must be noted:**

1)Currently, the MATLAB Interface to Shared Libraries is supported on Windows systems only. Windows shared library files have the file extension .dll.

2)Passing a void \*\* argument (that is, a pointer to a VOID pointer) to a function in a shared library is not supported in this release.

3)Passing a complex structure argument (that is, a structure constructed from other structures) to a shared library function is not supported in this release.

4)MATLAB does not currently support manipulation (e.g., addition, subtraction) of pointers returned by functions in a shared library.

For more information on how to use MATLAB to load and call shared library functions, and for specifics on data conversion, consult the PDF documentation shipped with the files. It is automatically installed in the \$MATLAB/toolbox/matlab/general directory (where \$MATLAB is your root MATLAB directory). The file is called shared\_library\_doc.pdf.