



R2 must be "small" because when booting the pull-up resistor of the ESP32 is briefly active and would unlock the COIL.

BSD 2-Clause License
hugo3132

Sheet: /
File: EmlaLockSafe_Controller_Board.sch

Title: EmlaLockSafe Controller Module

Size: A4 Date: 2021-12-10
KiCad E.D.A. kicad (5.1.12)-1

Rev: 2.0
Id: 1/1