



**Note:** please do not expose the machine to the strong light, and do not keep the machine in the environment of high temperature and humidity, because of this device has many optical sensors.

3. Please open the back cover and clean the parts including back aisle, CIS with brush, fabric and cotton swap.

Note: you can take out this part when do cleaning

2. Please clean the parts including reset sensor, stacker with brush, fabric and cotton swap

1. Please clean the parts including start sensor, hopper with brush, cloth and cotton swap.

Please refer to below procedure to clean the parts including hopper, stacker, back aisle and CIS.

The Cleaning of each parts (hopper, sensor, back aisle and CIS)

color changed, damaged or even cannot work properly.

Do not use the neutral detergent, dilution water, wax etc. as it will cause the machine



Notice:

affected or damaged by the spray.

2. Do not use the inflammable spray when cleaning, as the electronic component will be

1. Must power off before doing the internal cleaning in case of any damage, electric shock or injury.




Warning:

machine after 3-5days of usage, or after counting around 30,000pcs of notes.

If there is some dust or dirty things cover the sensors, it may influence the working performance, so please clean the

## 6 Maintenance

2

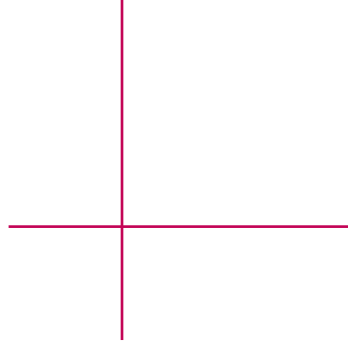



**Note:** please do not expose the machine to the strong light, and do not keep the machine in the environment of high temperature and humidity, because of this device has many optical sensors.

3.Please open the back cover and clean the parts including back aisle, CIS with brush, fabric and cotton swap.  
Note: you can take out this part when do cleaning

2.Please clean the parts including reset sensor, stacker with brush, fabric and cotton swap  
1.Please clean the parts including start sensor, hopper with brush, cloth and cotton swap.

Please refer to below procedure to clean the parts including hopper, stacker, back aisle and CIS.  
The Cleaning of each parts (hopper, elevator, back aisle and CIS)

color changed, damaged or even cannot work properly.  
Do not use the neutral detergent, dilution water, wax etc. as it will cause the machine



affected or damaged by the spray.

2. Do not use the inflammable spray when cleaning, as the electronic component will be

1. Must power off before doing the internal cleaning in case of any damage, electric shock or injury.



**Warning:**  
If there is some dust or dirty things cover the sensors, it may influence the working performance, so please clean the machine after 3-5days of usage, or after counting around 30,000pcs of notes.

## 6 Maintenance

2

