



PocketJet

PJ-722/PJ-723/PJ-762/PJ-763/PJ-763MFi/PJ-773

User’s Guide  
English

Thank you for purchasing the Brother PocketJet PJ-722/PJ-723/PJ-762/ PJ-763/PJ-763MFi/PJ-773 thermal mobile printer.  
We recommend that you keep this document nearby for future reference. To download the latest manuals, please visit the Brother Solutions Center ([support.brother.com](http://support.brother.com)) where you can also download the latest drivers and applications for your printer, read FAQs and troubleshooting tips and learn about special printing solutions.


Available Manuals

You can download the latest manuals from the Brother Solutions Center at [support.brother.com](http://support.brother.com).

Product Safety Guide <sup>1, 2</sup>	This guide provides safety information; read it before you use the printer.
User's Guide <sup>1, 2</sup>	This guide provides basic information about using the printer along with detailed troubleshooting tips.
Online User's Guide <sup>2</sup>	This guide includes the contents of the <i>User's Guide</i> , and additional information about the printer settings and operations, network connection and settings, troubleshooting tips, and maintenance instructions.
AirPrint Guide <sup>2</sup>	This guide provides information for using AirPrint to print from a Mac or iOS device.
Google Cloud Print Guide <sup>2</sup>	This guide provides details on how to use Google Cloud Print™ services for printing over the Internet.
Mobile Print/Scan Guide for Brother iPrint&Scan <sup>2</sup>	This guide provides useful information about printing from your mobile device when the printer and the device are connected using Bluetooth or Wi-Fi®.
P-touch Template Manual <sup>2</sup>	This manual provides information on P-touch Template.
Raster Command Reference <sup>2</sup>	This manual provides information about printer control commands for controlling the printer directly.

<sup>1</sup> Printed manual in the box  
<sup>2</sup> PDF manual on the Brother Solutions Center website


General Description

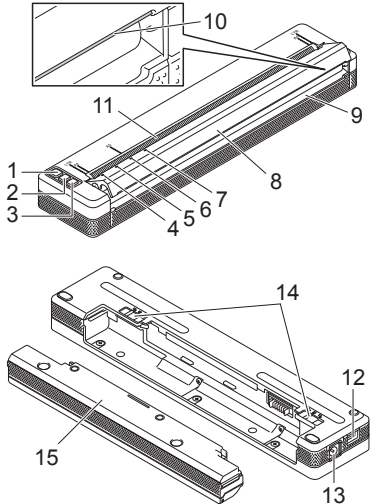


- 1 (Power) button
- 2 (Feed) button
- 3 (Bluetooth) button (PJ-762/PJ-763/PJ-763MFi only)
- 4 (Wi-Fi) button (PJ-773 only)
- 4 POWER indicator
- 5 DATA indicator
- 6 STATUS indicator
- 7 (Bluetooth) indicator (PJ-762/PJ-763/PJ-763MFi only)
- 8 (Wi-Fi) indicator (PJ-773 only)
- 8 Release cover
- 9 Paper outlet slot
- 10 Tear bar
- 11 Paper input slot
- 12 USB port
- 13 DC connector
- 14 Battery latches
- 15 Battery cavity mounting block

LED Indicators


PJ-722/PJ-723

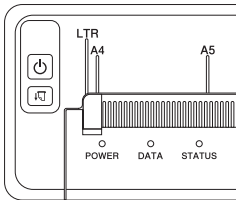

PJ-762/PJ-763/PJ-763MFi

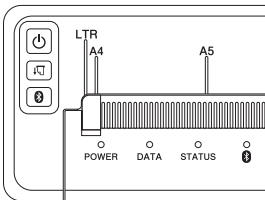

PJ-773

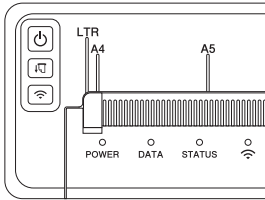

The indicators light and flash to indicate the printer's status. Each indicator may light or flash in green, red, orange or blue.

Button Functions

(Power) button function	Operation
Turn the printer on	Press and hold the button for about one second until the POWER indicator turns on.
Turn the printer off	Press and hold the button for about one second or press it quickly two times depending on the printer setting (see the <i>Online User's Guide</i> for more information).

(Feed) button function	Operation
Feed paper	Load the paper and press the button to feed the paper.
Print the printer settings	To print the printer settings without connecting the printer to a computer or mobile device: 1 Turn the printer on and make sure no paper is loaded. 2 Press and hold the button until the DATA indicator lights in red. 3 Load paper.


(Bluetooth) button function (PJ-762/PJ-763/PJ-763MFi only)	Operation
Enable/disable the Bluetooth function	Press and hold the button for one second to enable or disable the Bluetooth function of the printer.

(Wi-Fi) button function (PJ-773 only)	Operation
Enable/disable the Wi-Fi function	Press and hold the button for one second to enable or disable the Wi-Fi function of the printer.
Use WPS to configure Wi-Fi settings easily	Press and hold the button for about five seconds to configure the Wi-Fi settings using WPS.

Use the Rechargeable Li-ion Battery (Optional)


Installing the Rechargeable Li-ion Battery

- Move battery latch 1 to the unlock position.
- While holding battery latch 2 in the unlock position, remove the battery cavity mounting block.

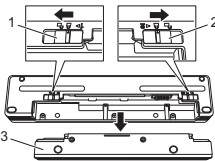


- 1 Battery latch 1
- 2 Battery latch 2
- 3 Battery cavity mounting block

- Release battery latch 2. Battery latch 2 moves back to the lock position.
- Insert the battery into the battery cavity until it locks into place.

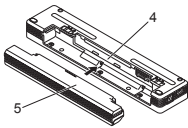


- 4 Battery cavity
- 5 Rechargeable Li-ion battery

 - Move battery latch 1 to the lock position.



Removing the Rechargeable Li-ion Battery

 - Move the battery latches to the unlock position, and then remove the battery.



- 1 Battery latches


- Insert the battery cavity mounting block into the battery cavity until it locks into place.
- Move battery latch 1 to the lock position.

Charging the Rechargeable Li-ion Battery

NOTE

- Charge the battery immediately after purchase using the following procedure.
- Up to three hours are needed to fully charge the rechargeable Li-ion battery. When fully charged, the battery will print about 600 pages.

- Turn the printer off and install the battery.
- Use the AC adapter and AC power cord to connect the printer to an AC power outlet, or use the car adapter to connect the printer to a DC power outlet.

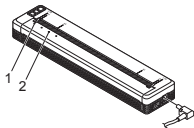

- 1 POWER indicator
- 2 STATUS indicator

- When the battery is fully charged, the STATUS indicator turns off. Disconnect the AC adapter or car adapter from the DC connector.

Stopping Rechargeable Li-ion Battery Charging

To stop the battery charging, disconnect the AC adapter or car adapter from the DC connector.

Notes on Using the Rechargeable Li-ion Battery

- Fully charge the battery before use. Do not use it before it is fully charged.
- High density (dark) printing discharges the battery faster than low density printing. Adjust the print density setting in the printer driver's dialog box or Printer Setting Tool (see the *Online User's Guide*).
- The battery charging must take place in 32°F - 104°F (0°C - 40°C) environments, otherwise the battery will not be charged, and the STATUS indicator will remain lit.
- If you use the printer when both the battery is installed and the AC adapter or car adapter is connected, the STATUS indicator may turn off and charging may stop even if the battery has not been fully charged.

Rechargeable Li-ion Battery Characteristics

To ensure the highest performance and longest life from your the battery:

- Do not use or store the battery in a location exposed to extreme high or low temperatures as it may discharge more quickly. This may happen when using a rechargeable Li-ion battery with a high charge (charged 90% or more) in a location exposed to high temperatures.
- Remove the battery when storing the printer for long periods of time.
- Store batteries with less than a 50% charge in a cool dry place out of direct sunlight.
- Recharge the battery every six months if it is stored for long periods of time.