 


Water Flosser

User Manual

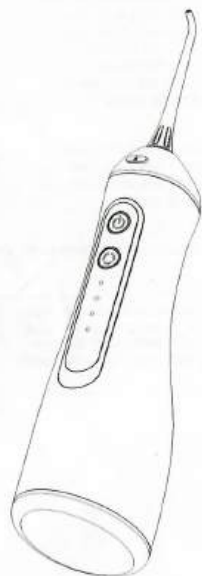 


Please keep this instruction in a safe place and read it carefully before using it.

WARNING

- Don't dismantle the product(s) or change the spare parts of the product without permission in order not to damage the product(s) or cause electric shock. Otherwise the warranty is invalid.
- Don't fill the container with water above 40°C to clean your mouth to avoid scorching. If the product(s) falls into water during charging, please first unplug the power adapter from the power socket and then take out the product(s) to avoid electric shock hazard.
- Don't throw the product(s) into the fire or heat it. Don't charge the product(s) in a hot or humid place. Don't place the product in these places for a long time and meantime, avoid direct sunlight.
- During charging, don't unplug the power plug and the charging plug with wet hands.
- The product(s) is not equipped with a power adapter. The customer's own adapter shall select output voltage of DC5V, such as the mobile phone power adapter. Before use, please check whether the voltage indicated on the power adapter meets the requirements of local voltage.
- If the product(s) is not used for a long time, please unplug the power plug and the charging plug to avoid fire or other hazards.
- This product(s) is not to be used by children or by individuals with low capabilities including physical, sensory and mental capabilities unless under direct supervision from individual with relevant knowledge to safely use this product.
- Avoid using this product(s) if you have oral ulcers, recent oral surgical procedure, very sensitive gums and teeth without dentists' approval. May cause bleeding or further damage.
- If you notice any bleeding after using the product(s) then consult your dentist.
- Do not turn the power on of the water flosser without inserting the nozzle in the mouth to avoid unnecessary splashing of water.
- Products has Li-Ion batteries. Dispose them appropriately in the electronic waste disposal areas.
- Do not charge the product(s) direct or with the charging base when wet or in the shower.
- Do not leave the product(s) in direct sunlight.
- Product(s) is waterproof and can be used during showers.
- In case of having a pacemaker please consult your doctor before use for any interference.
- Ensure that the charging port is dry and free of water during charging.

Product Introduction

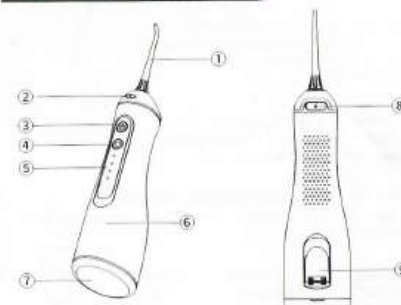

- ① Nozzle
- ② Nozzle release key
- ③ Power button
- ④ Mode button
- ⑤ Mode Indicator Light
- ⑥ Main Body
- ⑦ Bottom Cover Of Water Tank
- ⑧ Type-C Charging Interface
- ⑨ Water Tank Cap

Product basic parameters

Product name: Water Flosser

Products size: 278*84*64mm

Rated voltage: 3.7V ---


Charging voltage: 5V ---

Rated power: 6W

How to use


1 Nozzle mounting

Insert the nozzle into the nozzle holder on the top of the main unit until it clicks.

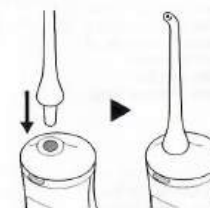

2 Injection of cleaning solution

Open the lid of the water tank filling port, inject clean water into the tank and then cover the water filling port lid.

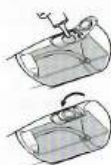


If you are using a concentrated type of mouth wash, the please dilute it with water and fill the mouth wash.

Usable cleaning solution

- Tap water
 - Warm water (40°C or lower)
 - Mouthwash
- On the right is a list of liquids that can be put into the can and used for cleaning. Do not use any other liquids as this may cause malfunction.

3 Mode settings

Press the mode switch button on the front of the main unit and select the desired water pressure. Every time it is pressed it switches in the order of Pulse→Soft→Normal→Power. Check the set mode with the corresponding mode indicator lamp.

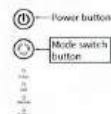

4 Power on

Insert the tip of the nozzle into the mouth and press the power button. The indicator lights up to indicate that cleaning has started.



5 Cleaning

By leaning forward and opening your mouth slightly during cleaning, you can flush cleaning water from your mouth.



*Please note that if you open your mouth wide and use it, the washing water will splatter around.

The main body is equipped with a waterproof mechanism, so you can use it with confidence even if it gets wet with washing water.



The direction of the nozzle can be freely rotated 360°. Please use it by adjusting it to the direction that is easy to use.

*If the tip of the water supply hose inside the tank rises above the water surface, washing water will not come out. Adjust the direction of the main body and use it with the tip of the hose submerged.

Point of care

Aim for the water between the teeth and between the gums, then move slowly along the gums from the molars (back teeth) to the front teeth. Clean the surfaces and backs of teeth.




6 Stop

When you want to stop the operation of the main unit, such as when the cleaning water is used up, press the power button again.



7 How to remove the nozzle

Pull the nozzle up while pressing the nozzle release button.

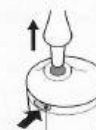


About charging

If you stop or press the power button during operation, and the four mode indicators flash at the same time, the remaining battery power is low and needs to be charged.

How to charge

- Connect the USB-C port of the supplied charging cable please remove the cap of the charging port of the main unit and connect it to the charging port. Connect the other end (USB-A) connector of the charging cable to your USB output charging adapter.

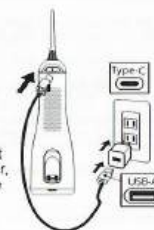

* If the charging port of the main unit gets wet with washing water or water, please wipe it with a dry cloth before connecting the charging cable and start charging after drying.

- When you start charging, the four mode indicator lamps light up one after another to indicate that charging is in progress.



Charging

- When charging is completed the four mode display lamps will light up at the same time.



Fully charged

Care and Maintenance

- After use, open the tank and discard the remaining water in the tank each time. After that, press the power button to activate this product, and drain the remaining water from the nozzle. When water stops coming out, press the power button to stop using.



- If dirt adheres to the inside of the tank, put a small amount of lukewarm water of 40°C or less in the tank and wash it a little, then perform the above.

- To keep it clean, rinse the nozzle with water after each use and let it dry.

If no water sprays out for a long time, please unplug the nozzle and press the water valve in the water outlet intermittently. With a tool with a diameter of less than 6mm until water sprays out.

