

USER MANUAL

Wireless Control Home Automation System V.1

1. System Specifications
 - a. Supports Bluetooth Communication
 - b. Supports WiFi communication
 - c. Supports Internet Communication
 - d. Comes with ultrasonic sensing that covers 6cm to 40cm.
 - e. It comes with integrated doorbells that trigger when someone is present at the door.
 - f. Comes with a DC lamp that can be powered without an AC source.
 - g. At least 12 hours of power backup without powering DC lamp
 - h. At least 5 hours power backup with DC lamp plugged
 - i. An automatic charging system is used when connected to an AC power source.
 - j. Come with indicators to know if the system is connected and receives a signal.
 - k. 4 AC output for controlling Fan, Bulb, Socket, and TV.

2. How to communicate with the device using Bluetooth mode.
 - i. Download Activator mobile app from <https://github.com/i-am-the-robot/Home-automation-apps>.
 - ii. Install the mobile app on your phone.
 - iii. Power on the system by pressing the red button twice. (it will come up after around 2 seconds).
 - iv. Go to your phone Bluetooth settings, then search and connect your Bluetooth to the device (**HC-05**).
 - v. Input the password "**1234**".
 - vi. Open the Activator mobile app and click on the *Select Bluetooth device* button.
 - vii. Select **HC-05** from the bluetooth list.
 - viii. The blinking blue LED indicator will stop blinking.
 - ix. Your device is ready to be used.

3. How to communicate with the devices using WiFi mode.

- i. Download Activator mobile app from <https://github.com/i-am-the-robot/Home-automation-apps>.
- ii. Install the mobile app on your phone.
- iii. Power on the system by pressing the red button twice. (it will come up after around 2 seconds).
- iv. Change your phone hotspot **SSID** to **Huawei y5 lite**.
- v. change the **password** to **2fea2e972c8d**.
- vi. Restart the home automation system and it will automatically connect to your phone hotspot.
- vii. If the WiFi mode is automatically activated, the blue LED will change to the orange LED. If not
- viii. Open the Activator app connect to Bluetooth and click on the Wi-Fi icon to switch to the WiFi mode.
- ix. The blue LED will change to the orange LED and the WiFi communication interface will display.
- x. The device is ready to be used.

4. How to communicate with the devices using WiFi mode.

- i. Download and install blynk app from Google play store
- ii. Power on the system by pressing the red button twice. (it will come up after around 2 seconds).
- iii. Change your phone hotspot **SSID** to **Huawei y5 lite**.
- iv. change the **password** to **2fea2e972c8d**.
- v. Restart the home automation system and it will automatically connect to your phone hotspot.
- vi. If the WiFi mode is automatically activated, the blue LED will change to the orange LED. If not
- vii. Open the Activator app connect to Bluetooth and click on the Wi-Fi icon to switch to the WiFi mode.

- viii. The blue LED will change to the orange LED and the WiFi communication interface will display.
- ix. On the WiFi interface, click on Internet.
- x. Open the Blynk app and sign in.
- xi. The device is ready to be used.

5. Contact.

For further enquiries contact us at ktitilola@gmail.com