



# iUNIKER

## Raspberry Pi 4 B

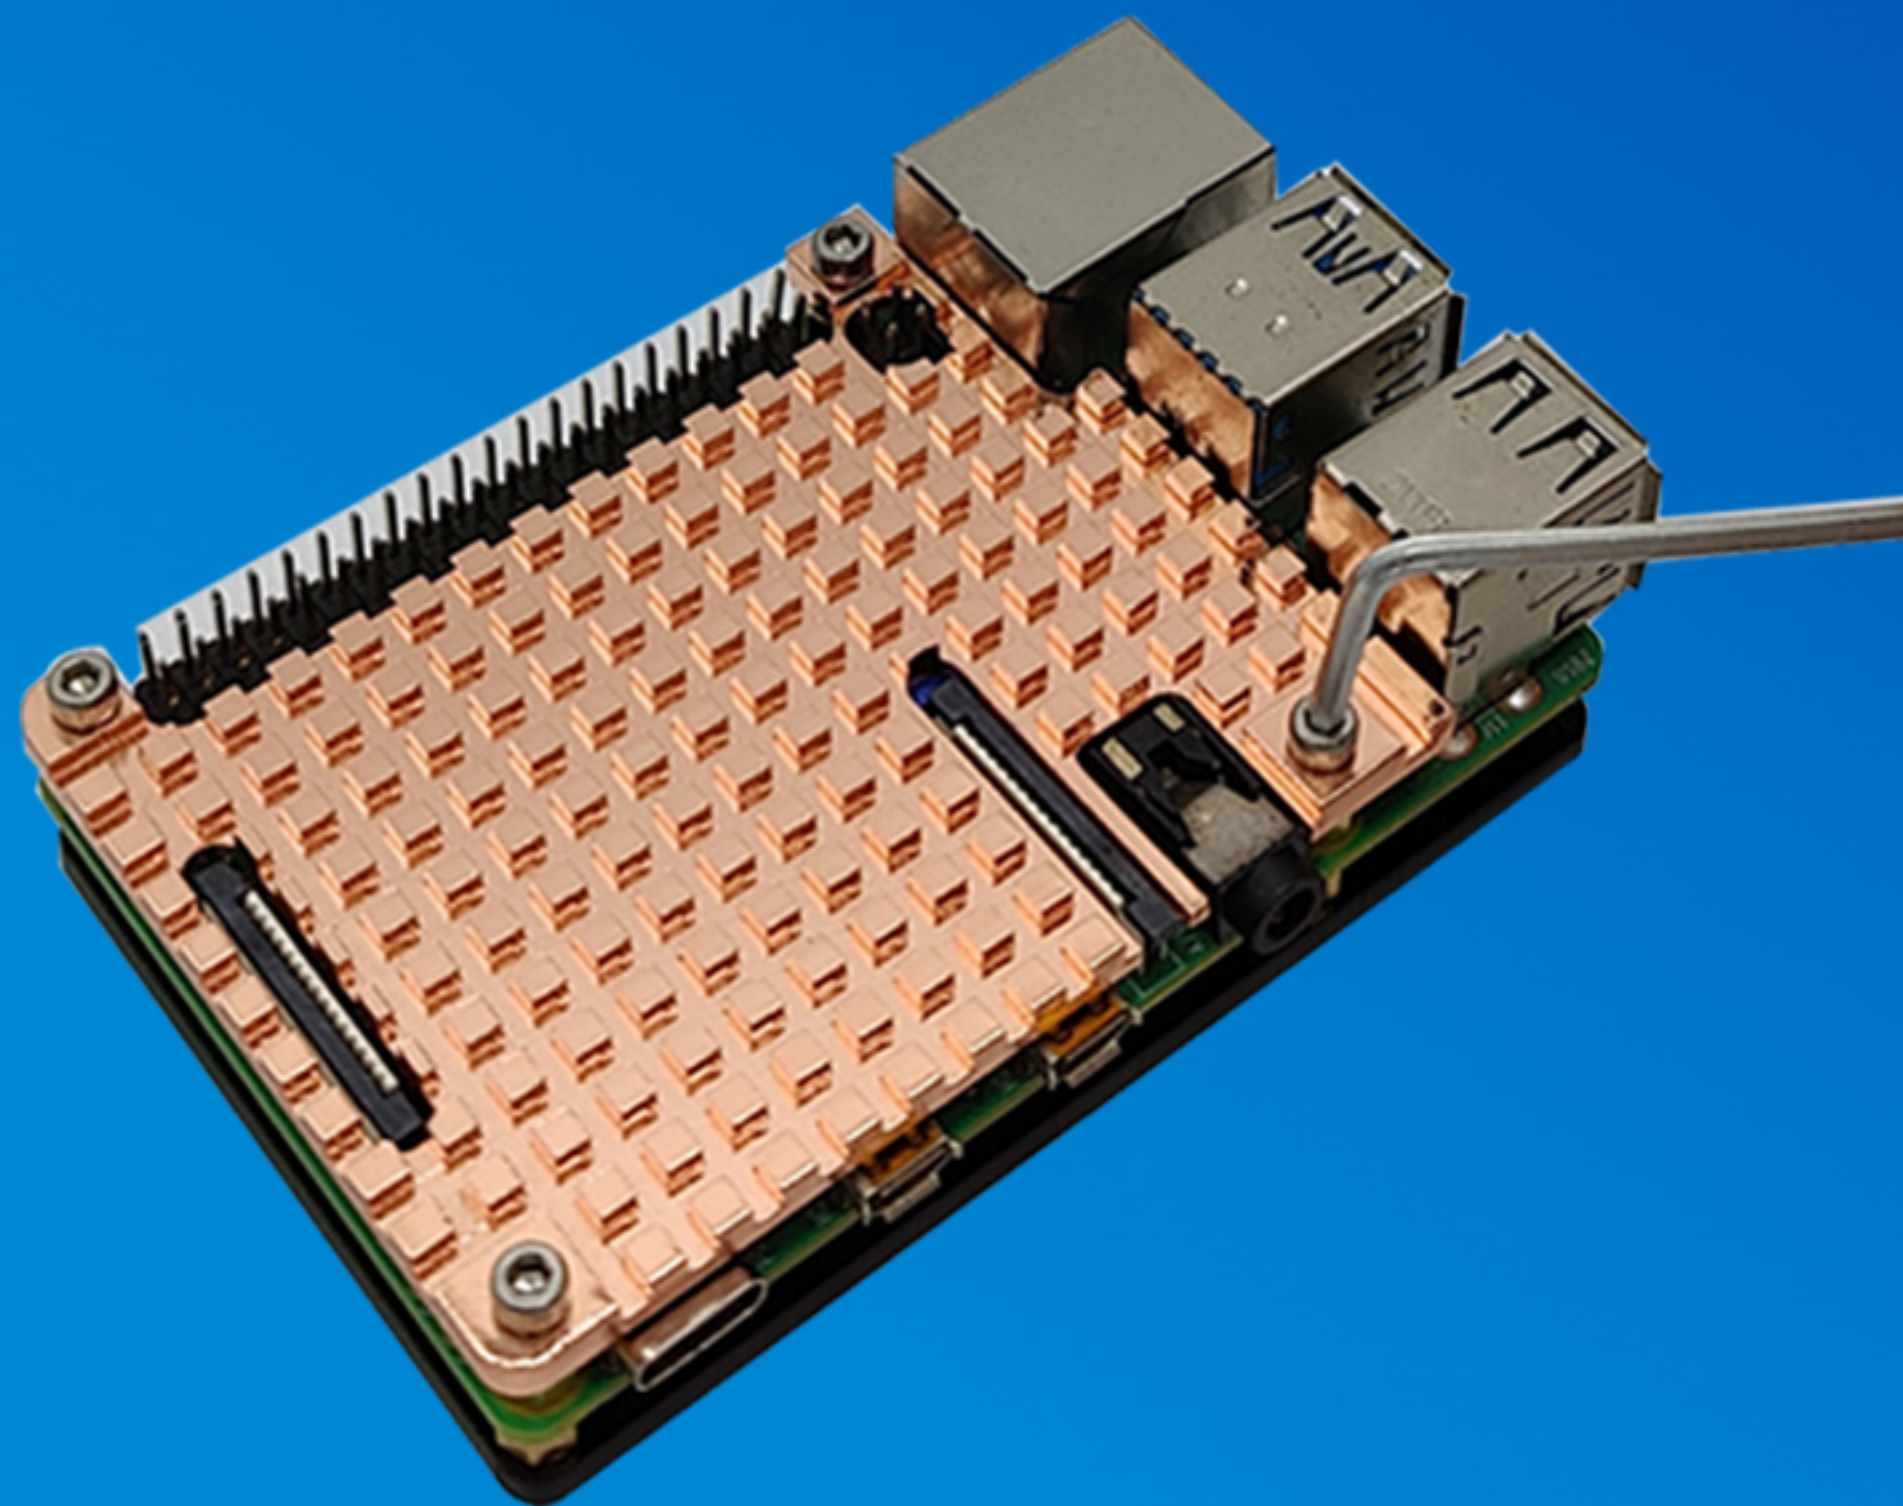

If you have any problems,  
Please Contact US


Email: [iUniker@yeah.net](mailto:iUniker@yeah.net)

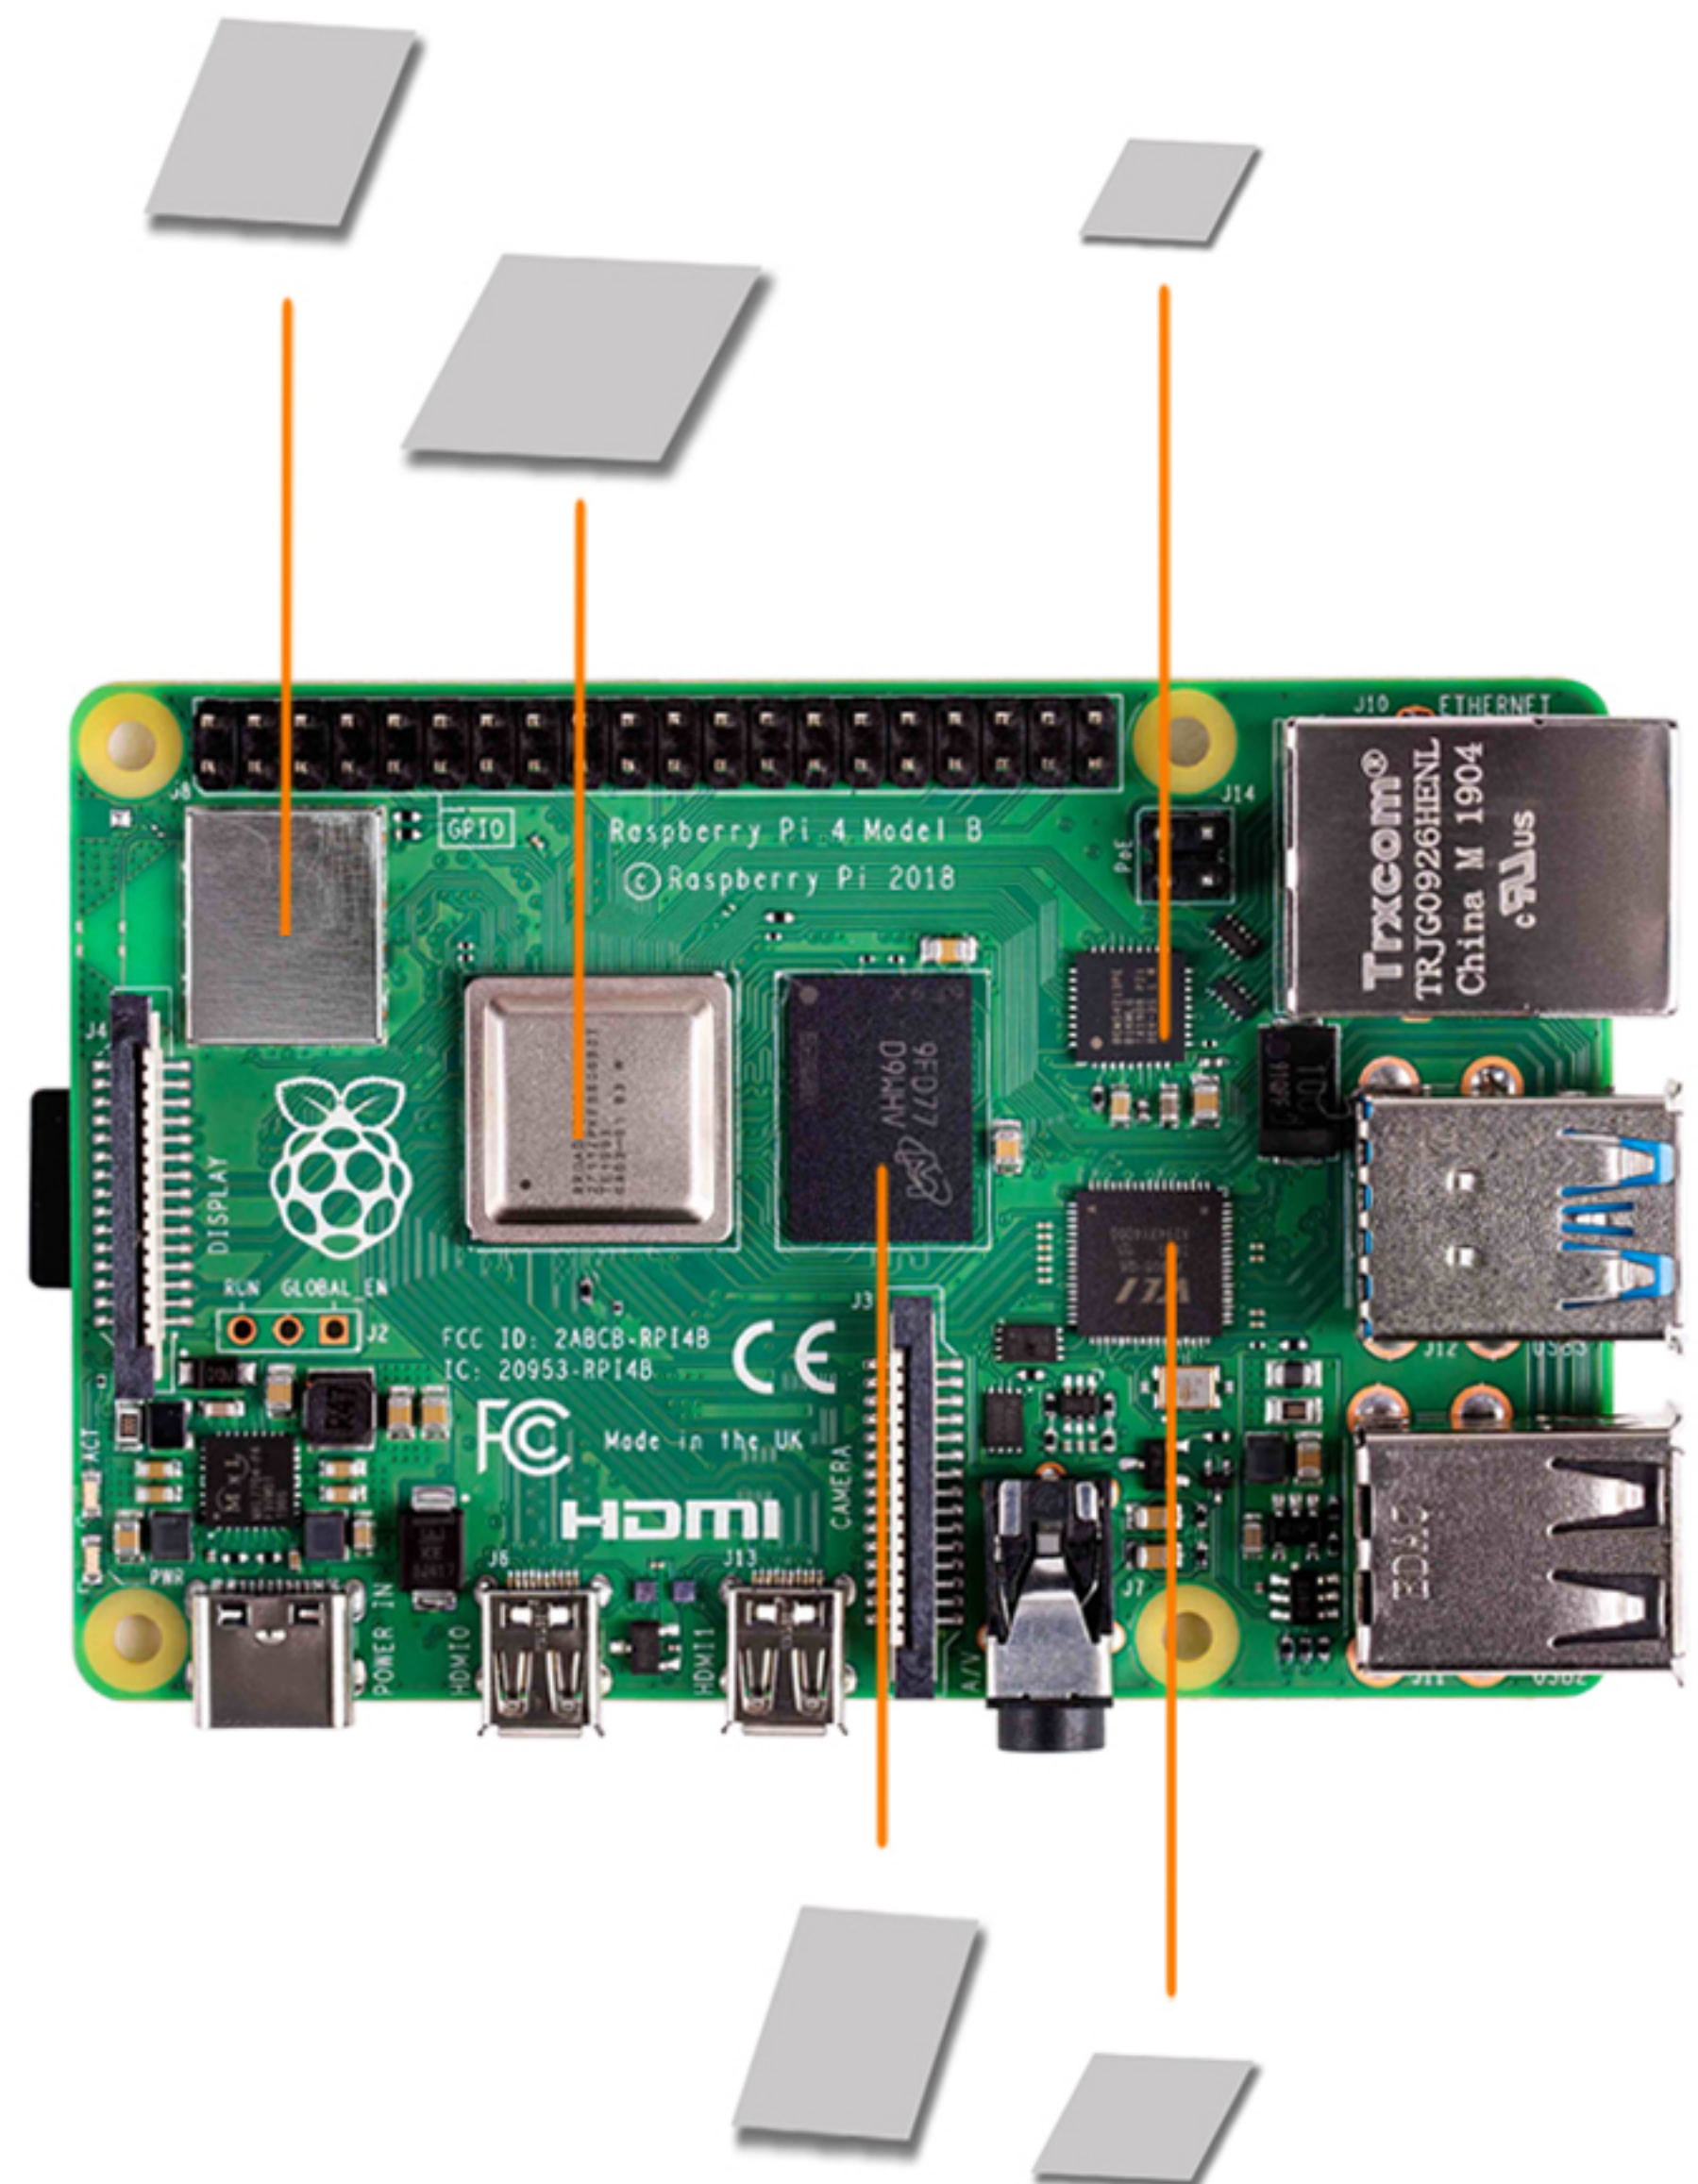


Notice: Please peel off the protective film on both  
Sides of the thermal tape.

We are also put 5 more units for backup.

### Note A:

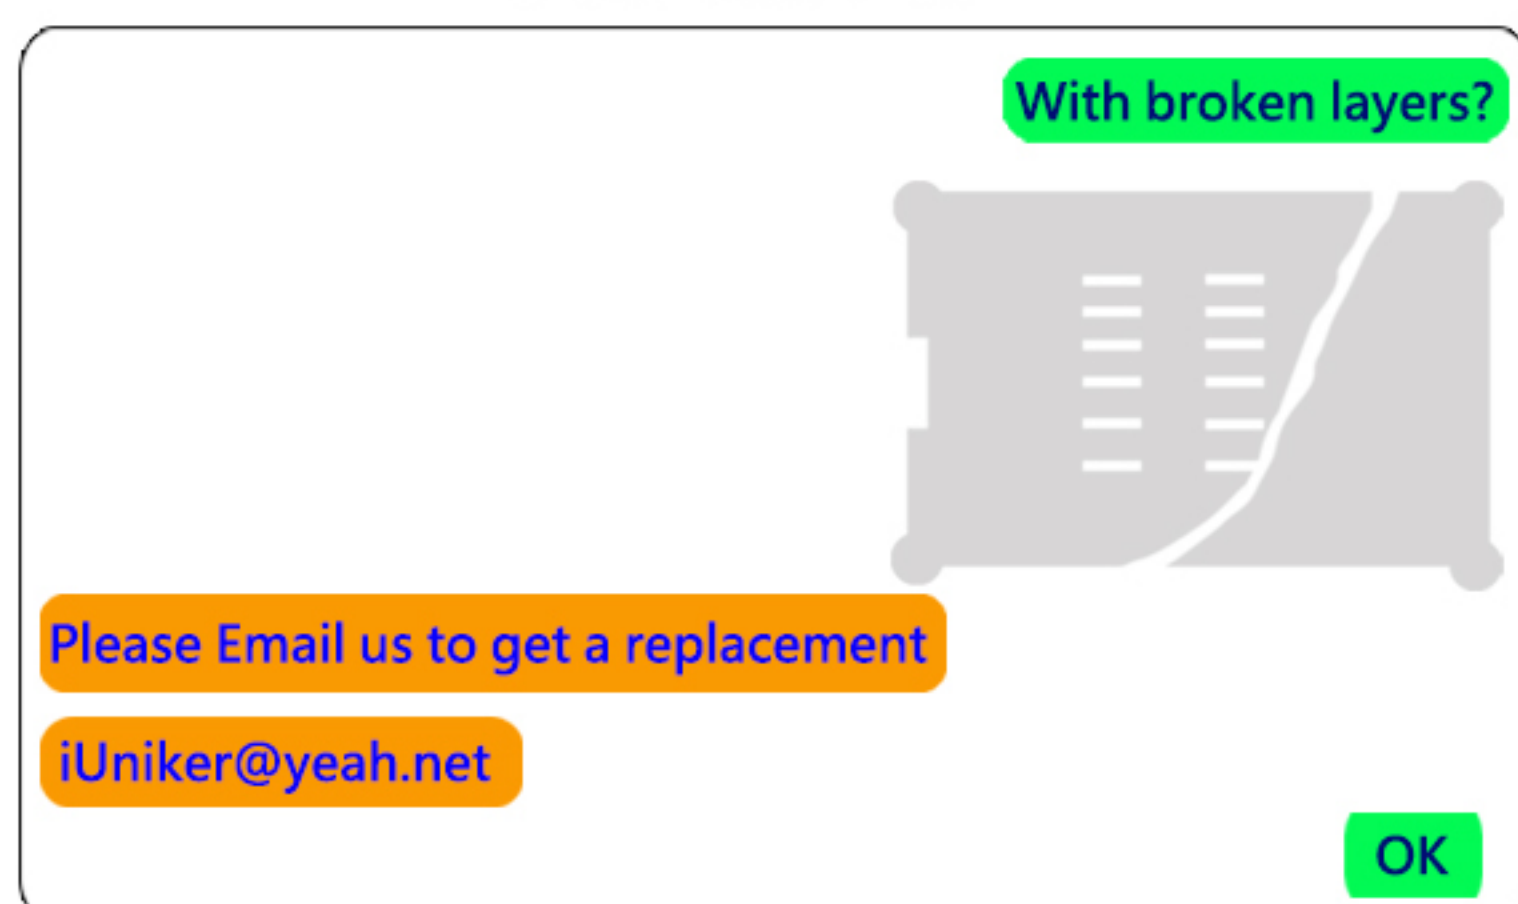

### Note B:

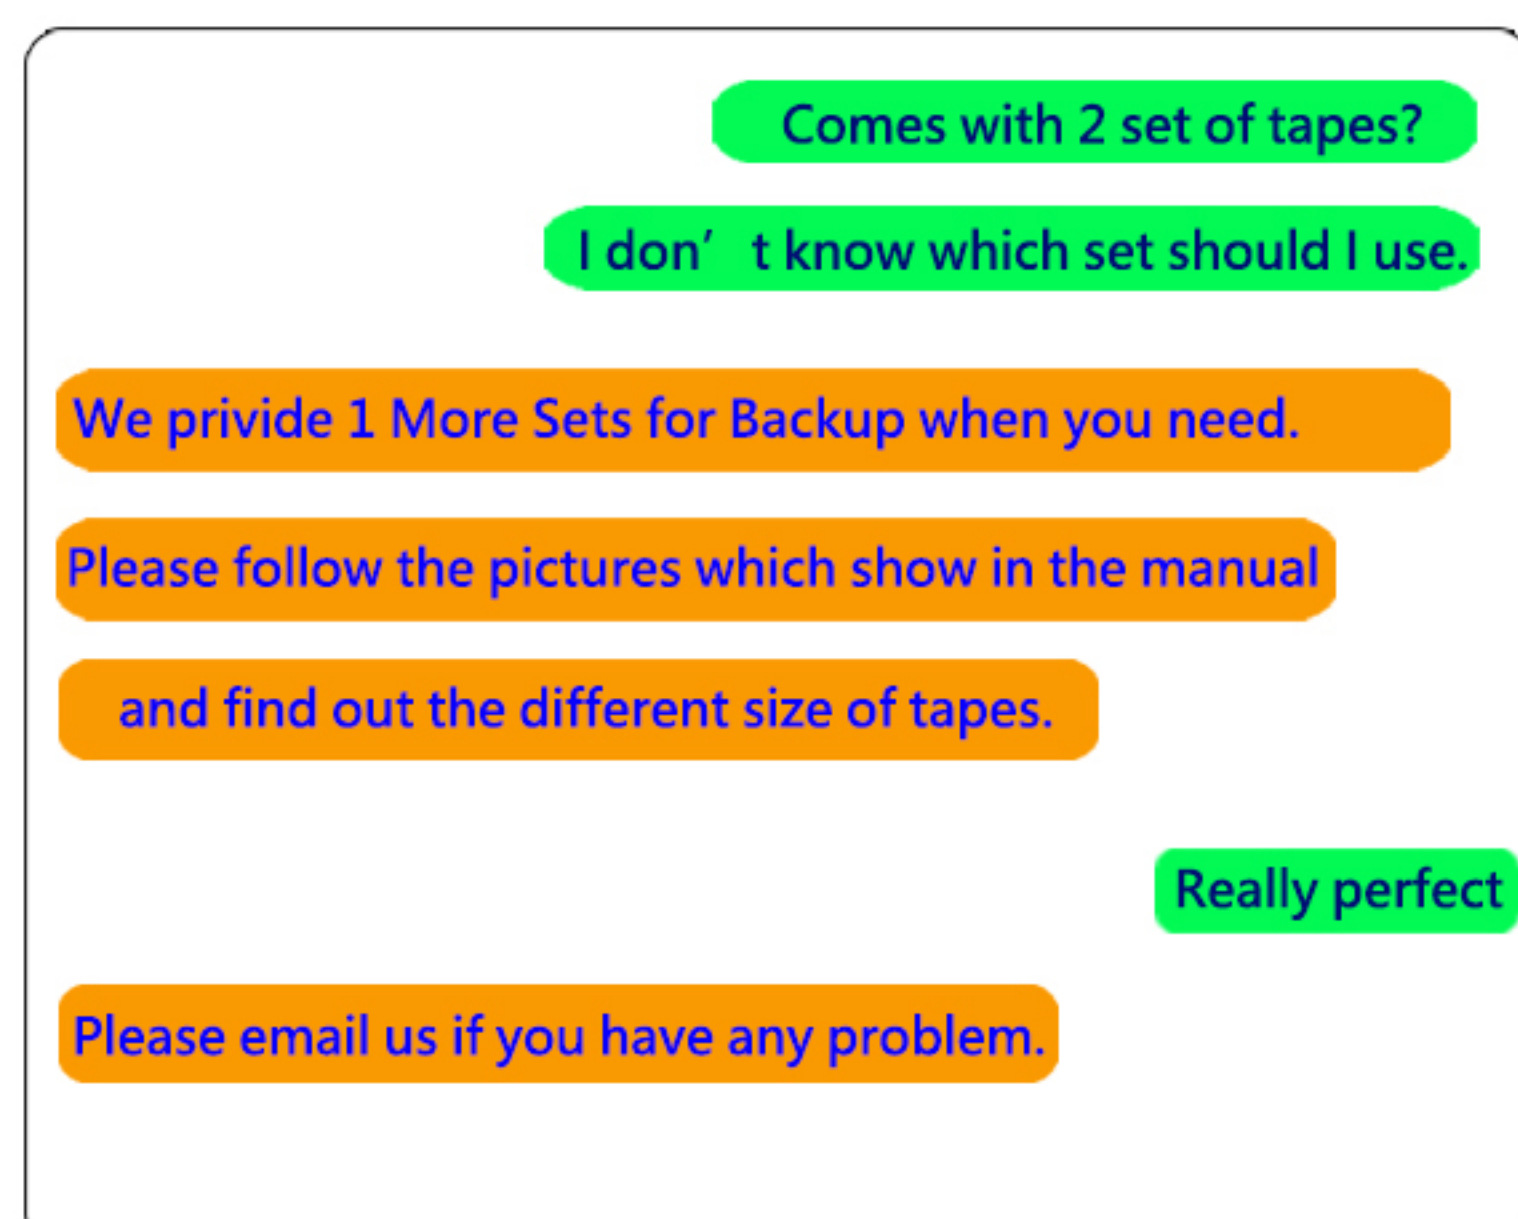

### Satisfied?

We are just very glad to know that you are Satisfied.

We appreciate that you post a review to let others benefits from your experience.

We appreciate your time and support and hope you will shop with us again.

### Disappointed?

We are committed to provide practical, easy-to-use products as well as exceptional customer service.

The product is guaranteed for 12 months from the date of purchase. Please feel free to contact us with your ORDER NUMBER if you need a replacement or refund.


Email: [iuniker@yeah.net](mailto:iuniker@yeah.net)





1


Please peel off the protective Films before install the case to your Raspberry Pi Mother Board.

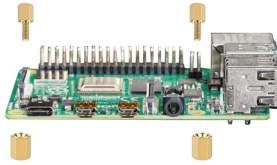

2



Install the standoffs as picture show.  
Warning: You have to follow this picture to install the standoff, or the tapes will not work

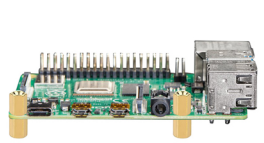

3

Finish all of the 8 pcs standoffs Installation.




4

Install the 4 silver screws to the bottom panel case.



5

Install the 5 pcs Thermal Tapes To the CPU, RAM, USB, WIFI, Ethernet Chips.

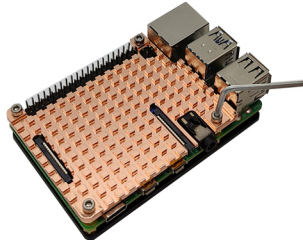

6

Use the Wrench to Install the last 4 screws, finish the installation.



7

We put more 5 pcs tapes for backup. Please keep them carefully.



8

Please pay attention to step 2, If you install the wrong screws, the tapes will not touch the heatsink, please install them as picture show.