


# **iUniker**

## **3.5-inch TouchScreen With Case and Fan Instructions**

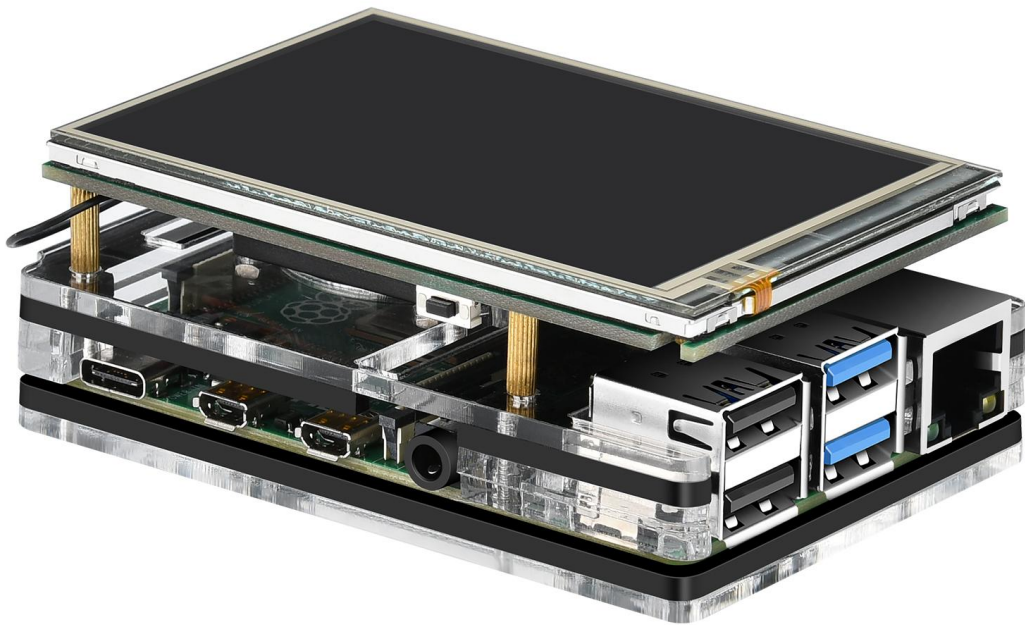

**For Raspberry Pi 4 Model B**

**Customer Service Email: [iuniker@yeah.net](mailto:iuniker@yeah.net)**

## About How to Install the Driver:

### Online Mode: (Keep your Pi connect to Network)

Step1: Download and Install Raspbian or RetroPie OS to your SD card.

Step2: Make sure the OS was installed and completed.

Step3: Open Terminal, and type the following command:

```
cd ~/
git clone https://github.com/tianyoujian/MZDPI.git
cd MZDPI/mzp351hv1tr
sudo ./mzp351hv1tr-autoinstall-online.sh
```

Waiting for the process completed and then, Reboot Pi.

### Offline Mode:

Step1: Download and Install Raspbian or RetroPie OS to your SD card.

Step2: Make sure the OS was installed and completed.

Step3: Download file named: "mzp351hv1tr-autoinstall-offline.rar" from:  
<https://github.com/tianyoujian/MZDPI/raw/master/mzp351hv1tr/MZDPI.rar> , and then copy it to your sd card and unzip It to :  
/boot

Step4: Open Terminal, and type the following command:

1. cd /boot
2. ls -l

After these two steps , you will see the MZDPI dir which you unzip.

Step3: cd MZDPI

Step4: cd mzp351hv1tr

Step5: sudo chmod +x mzp351hv1tr-autoinstall-offline.sh

Step6: sudo ./mzp351hv1tr-autoinstall-offline.sh

Waiting for the process completed and then, Reboot Pi.

### Notices:

If you want use your hdmi screen to display your Pi after you install the driver, there are two ways to solve it:

#### 1. Uninstall Config:

Open Terminal, and type the following command:

```
cd ~/
git clone https://github.com/tianyoujian/MZDPI.git
cd MZDPI/mzp351hv1tr
sudo ./mzp351hv1tr-uninstall
```

Waiting for the process completed and then, Reboot Pi.

2. Delete:

Just open config, then modify the following:

`Include mzp351hv1tr.txt`

To:

`#Include mzp351hv1tr.txt`


**Then save it, insert your sd card to Pi, the hdmi will work.**

**If you have any question, please contact [iuniker@yeah.net](mailto:iuniker@yeah.net)**

PS: If you can't make the screen work, please contact us first, because we have already tested every screen before send to you.


## How to change the brightness of the backlight:

### Backlight Switch Button

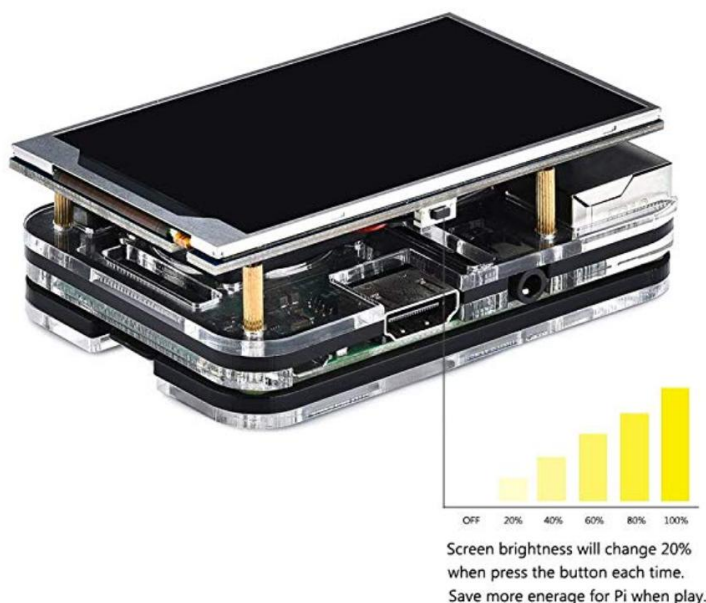


**The brightness will change 20% when you press the button each time.**


# How to install the Case:

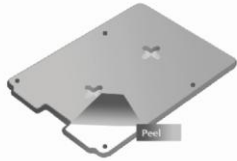

Note: Please use some tools just like knife to remove the protective film.


1







Note: Please distinguish Wide Side and Narrow Side.

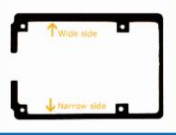
2







3






4







Note: Includes a little piece of clear acrylic


5






6






Fan installation: Shown in NOTE B.


7




Fan X4  
Screw X4




8






Insert 4 long screws from the bottom of the case


9




Long Screw X4



10




Standoffs X4

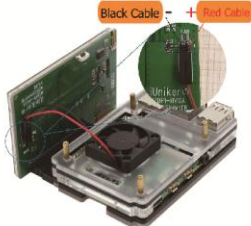

Distinguish between positive and negative cables

11

Connect the fan to the PCB board of the screen.



12

Connect the screen to GPIO on your Pi.