



USER MANUAL

*for the washing
machine application ECOBOOST*

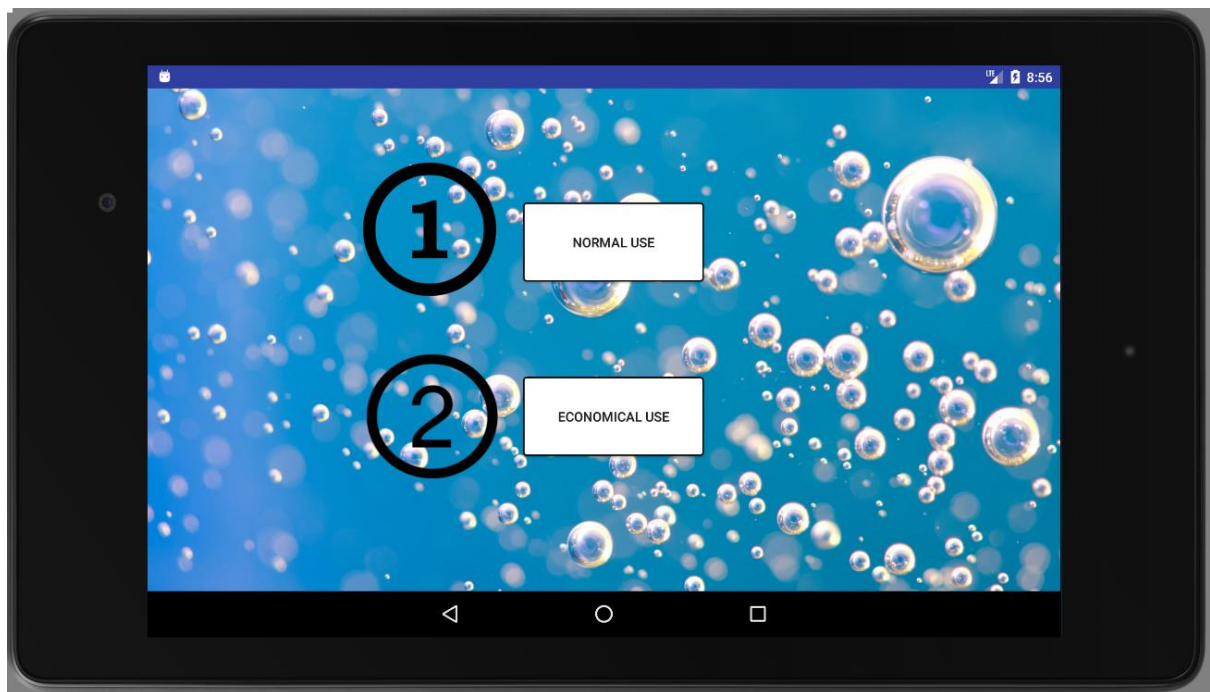


STEP 0 - MODE SELECTION

- ① Normal use - Typical mode of the washing machine
- ② Economical use - Mode of the washing machine which reduces energy and water consumption

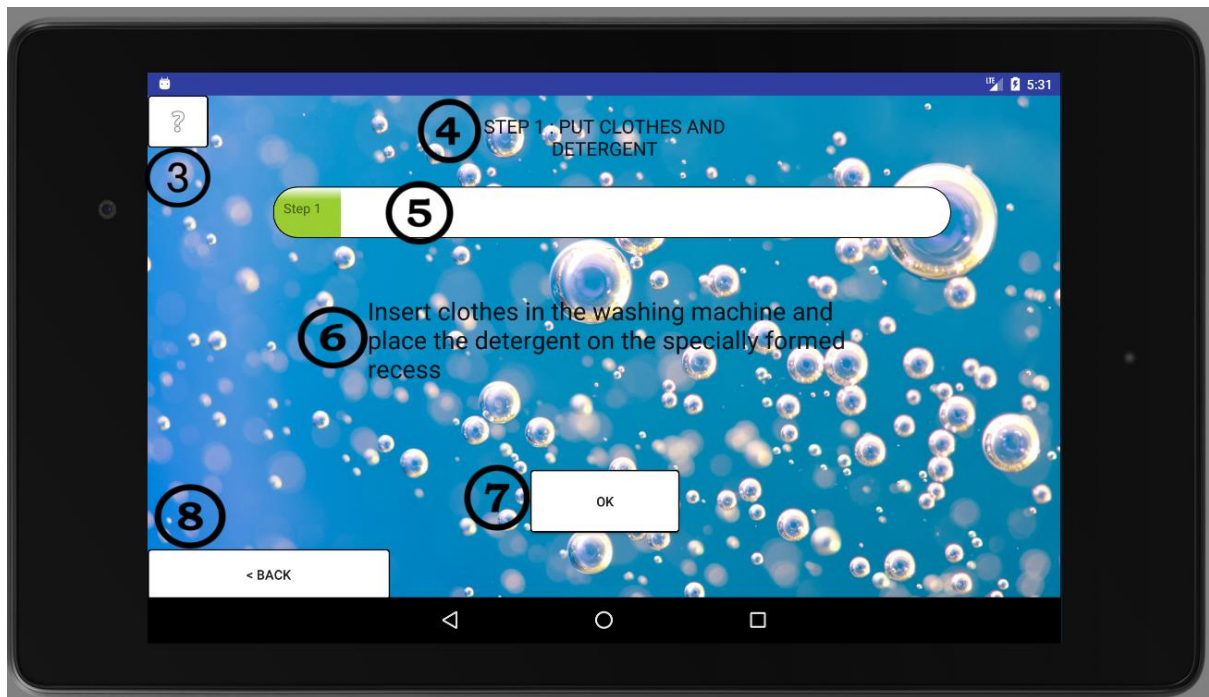

STEP 1 - Insert clothes in the washing machine

- ③ Help Button - Information about the step you are going through
- ④ Step - The step you are going through and instructions on what you need to do
- ⑤ Progress bar - Showing the step you are at the moment
- ⑥ Instruction message - Instructions about the actions you have to take
- ⑦ Ok button - Confirmation button
- ⑧ Back button - Refutation button sending you back to the previous step

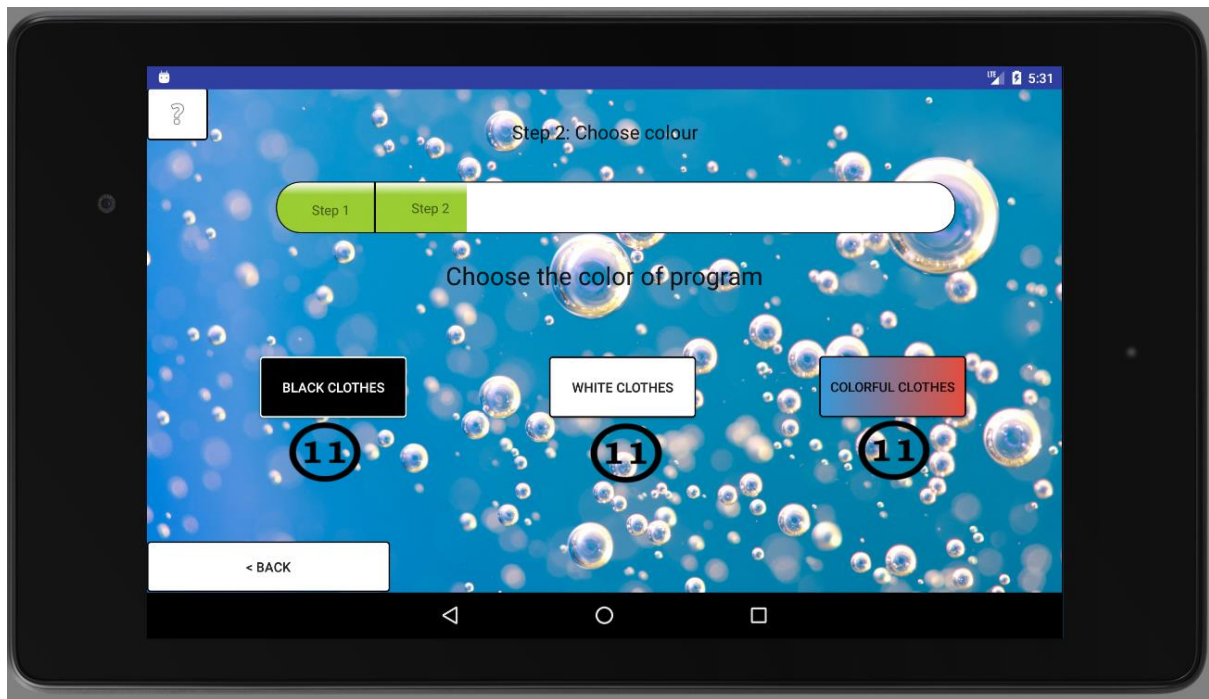

STEP 2 - Choosing color

11 Select color buttons - Buttons which you use to select color of the clothes you want to wash .

There are 3 choices :

- Black clothes - The darker color clothes
- White clothes - The lighter color clothes
- Colorful clothes - Clothes with many colors




STEP 3 - Choosing material

12 Select material buttons - Buttons which you use to select the material of the clothes you want to wash .


There are 3 choices :

- Cotton clothes - Clothes made from cotton
- Silk clothes - Clothes made from silk
- Synthetically clothes - Clothes made from synthetical material like polyester

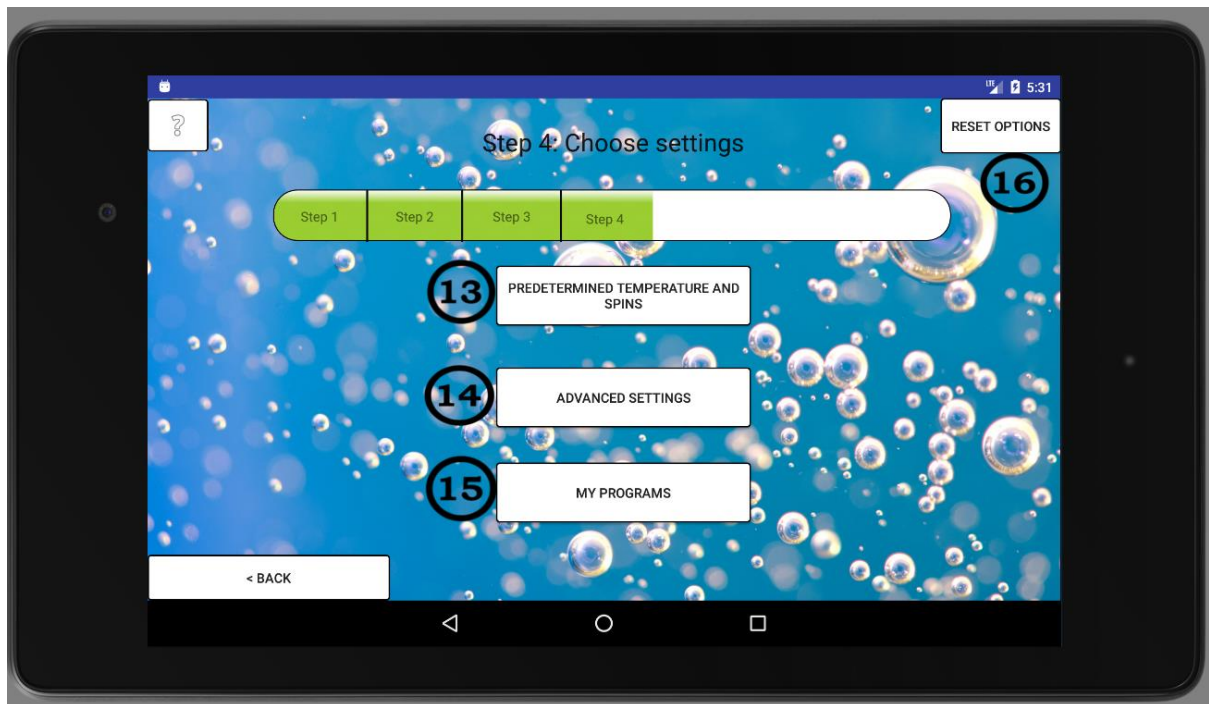


STEP 4 - Choose settings

- 13** Predetermined temperature and spins button - Default washing program (recommended for unexperienced users)
- 14** Advanced settings button - Showing the next page , where you can create your own custom program
- 15** My programmes buttons - Showing all the saved custom programs
- 16** Reset button - Deleting all the saved programs

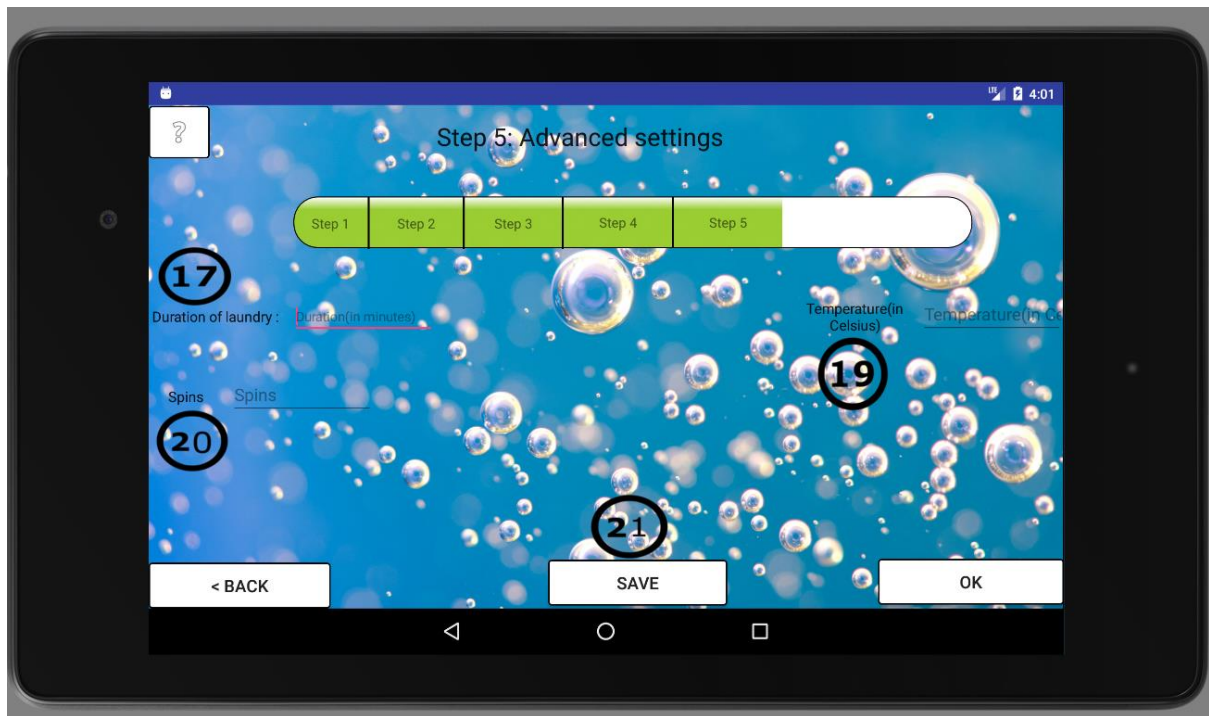

STEP 5 - Advanced settings

- 17** Duration of laundry button - Setting custom duaration of your choice in seconds
- 19** Temperature button - Setting custom temperature of your choice in celsius
- 20** Spins button - Setting custom number of spins of your choice
- 21** Save button - Confirmation button to save your custom program

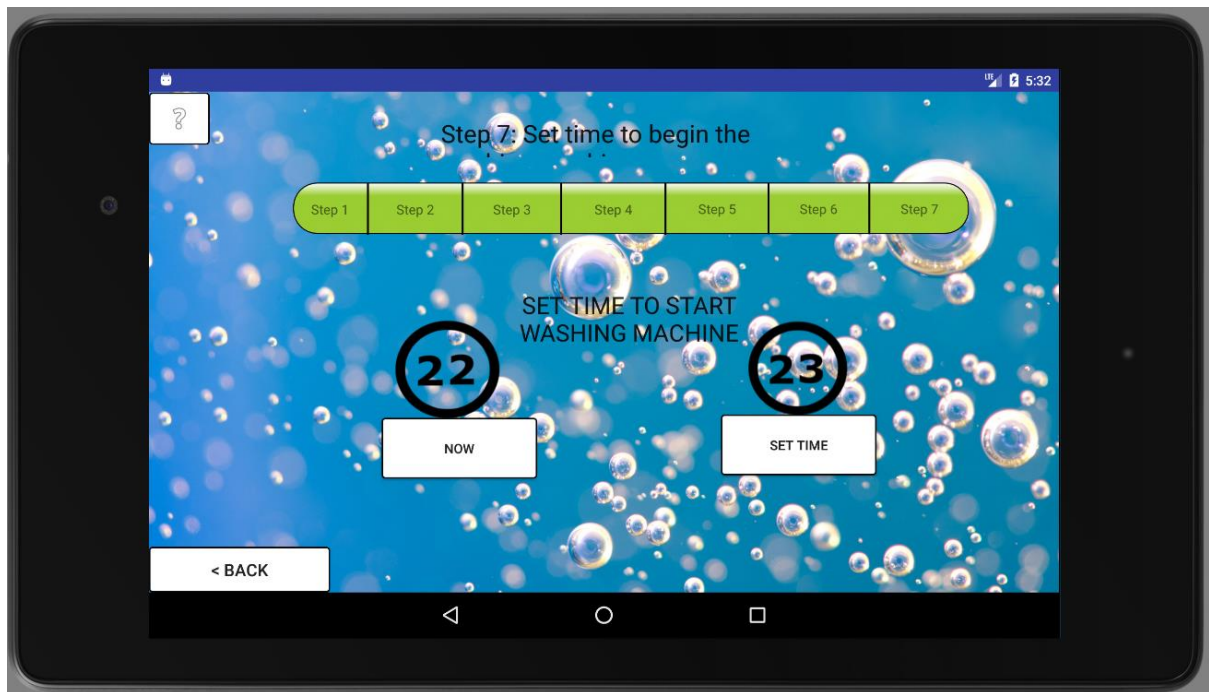

STEP 7 - Set time to begin the washing machine

22

Now button - Start the laundry immediately

23

Time of start button - Setting a custom time for the washing machine to start your laundry



Stages of laundry

- 24** Progress bar - Progress bar showing the time left to finish the laundry
- 25** Open door button - Opens the door of the washing machine if the laundry is paused
- 26** Pause button - Pauses the laundry until unpause
- 27** Remaining time - Time to go for the laundry
- 28** Finish button - Completely stops the laundry for any reason