






Error Signal

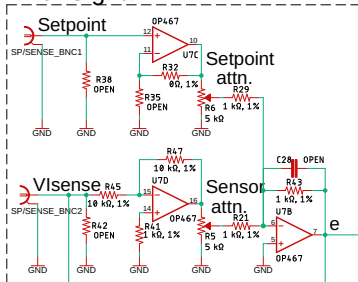


Current Sensor

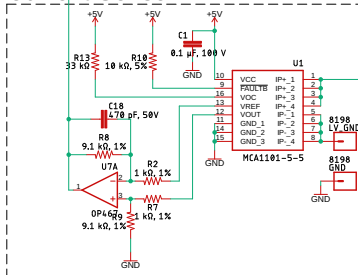


PID Controller

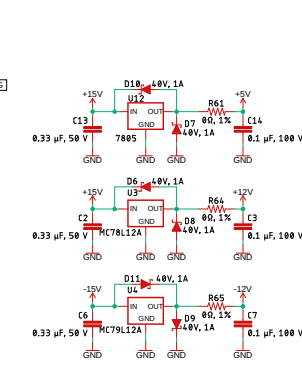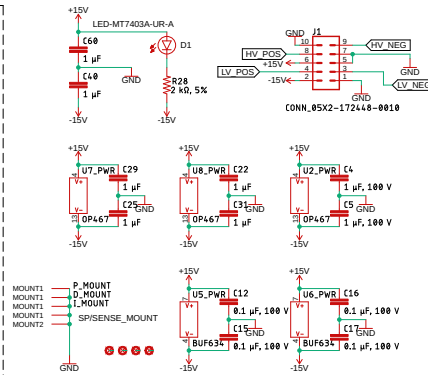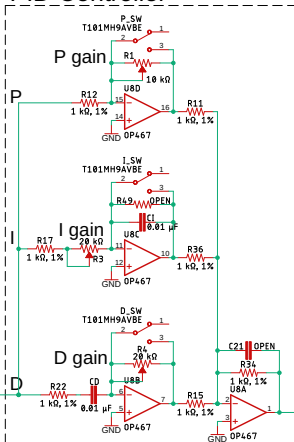


HV

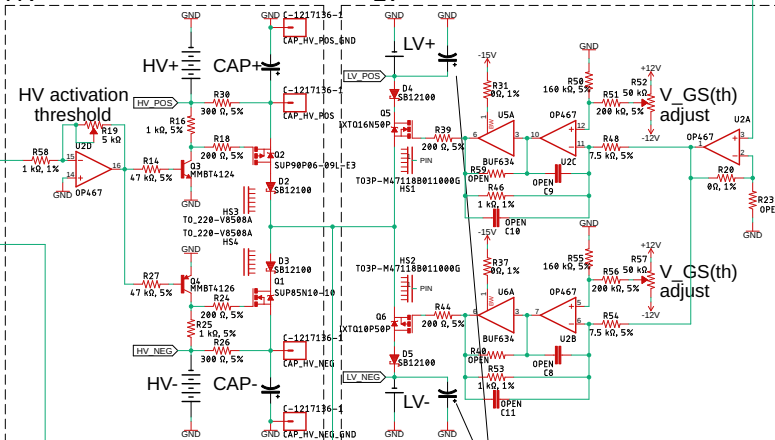

LV

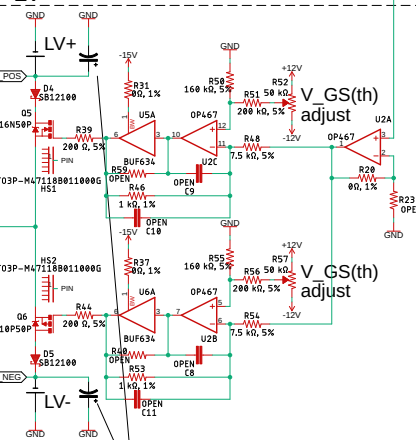

Load

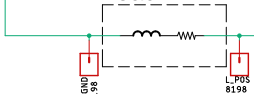

These capacitors (10000uF) are not included in the circuit board and should be placed directly at the output of the LV power supply