


SECURITY HORN CIRCUIT

CIRCUIT DESCRIPTION

When the theft deterrent system is operating, a relay in the theft deterrent ECU turns ON and OFF continuously at 0.2 second intervals, causing the security horn to sound.

WIRING DIAGRAM

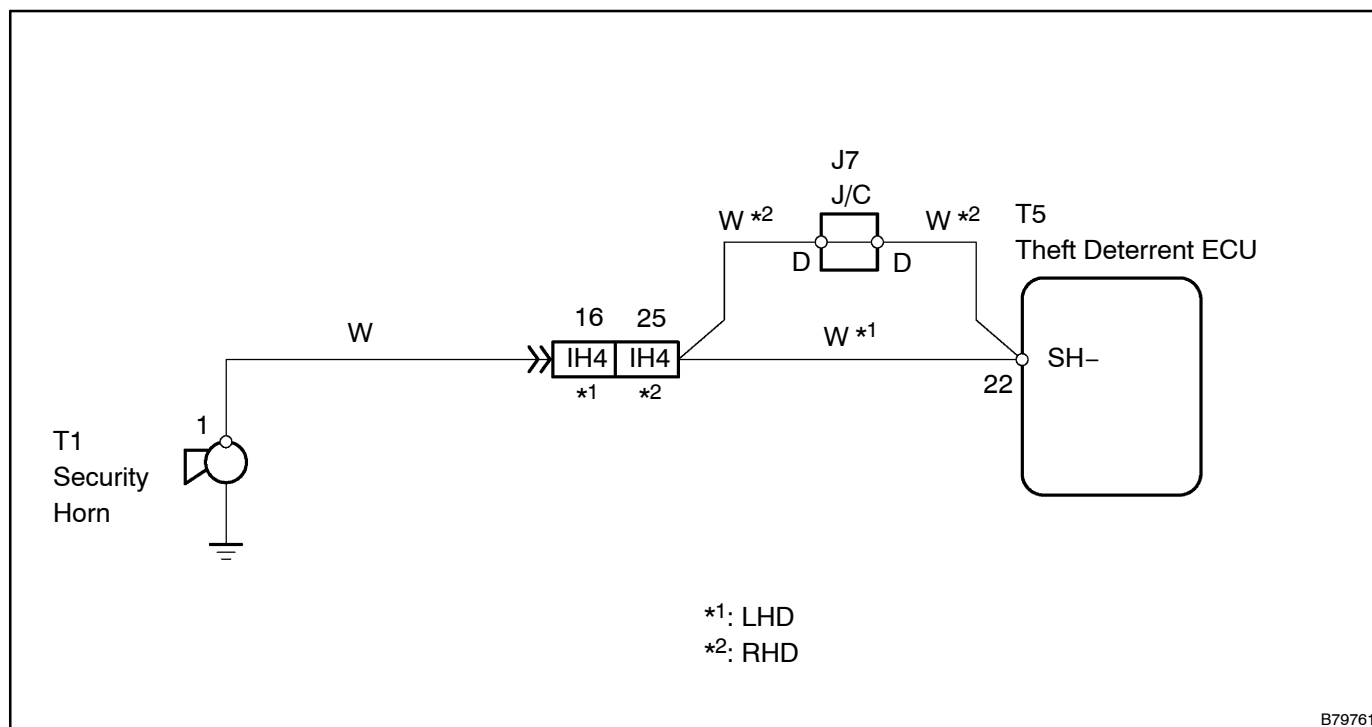

INSPECTION PROCEDURE

1 PERFORM ACTIVE TEST USING INTELLIGENT TESTER II

- (a) Connect the intelligent tester II to the DLC3.
- (b) Turn the ignition switch ON and press the intelligent tester II main switch ON.
- (c) Select the item below in the ACTIVE TEST and then check that the horn operates.

Theft deterrent ECU:

Item	Test Details	Diagnostic Note
Security Horn	ON: Security Horn sounds OFF: Horn sounding stop	-

OK: Security horn sounds normally.


NG

Go to step 2

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE
(see [page 05-3074](#)).

2 INSPECT SECURITY HORN ASSY

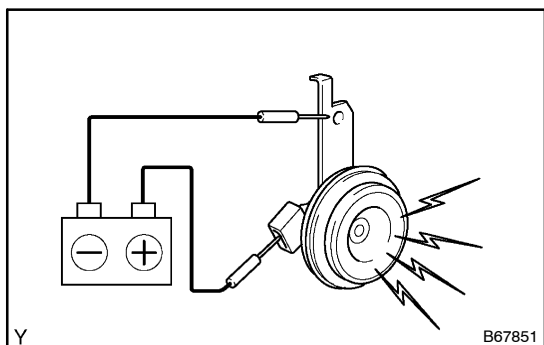

- (a) Check operation of the horn.
 - (1) Check that the horn sounds when the connect battery positive (+) lead to the security horn terminal and the battery negative (-) lead to the horn bracket.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1 Battery positive (-) → Horn bracket	Horn sounds

NG


REPAIR OR REPLACE SECURITY HORN ASSY

OK

3

CHECK WIRE HARNESS (SECURITY HORN ASSY - THEFT DETERRENT ECU AND BODY GROUND)

Wire Harness Side

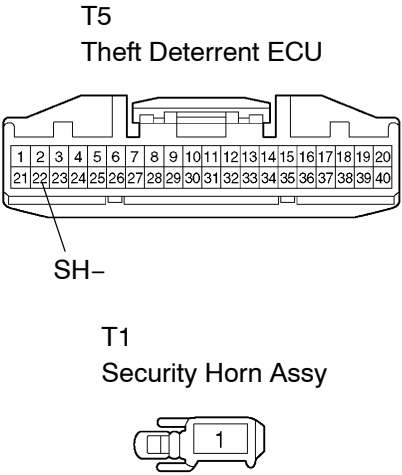

Y B74287

- (a) Disconnect the T5 theft deterrent ECU connector.
- (b) Disconnect the T1 horn connector.
- (c) Measure the resistance of the wire harness side connectors.

Standard:

Tester Connection	Specified Condition
T5-22 (SH-) - T1-1	Below 1 Ω

NG

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPLACE THEFT DETERRENT ECU