
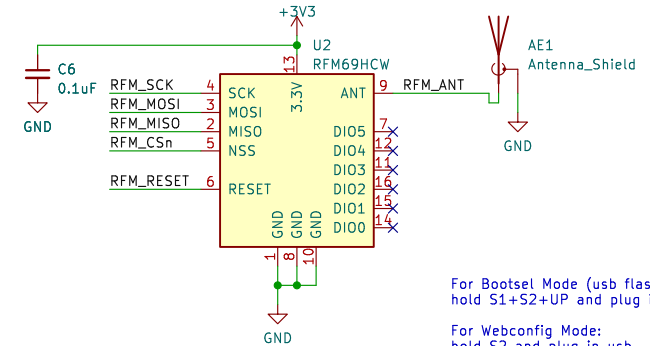
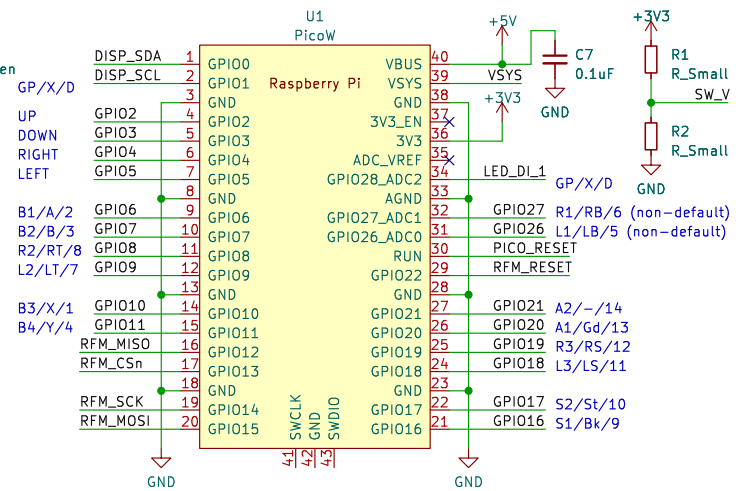


Footprint for Adafruit FeatherWing OLED w/ 3 Buttons (Prod 2900)

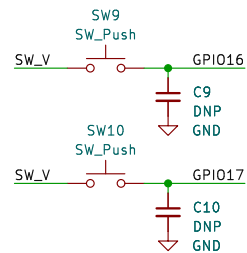

For Bootsel Mode (usb flash):  
hold S1+S2+UP and plug in usb

For Webconfig Mode:  
hold S2 and plug in usb

Input Modes:  
B1 for Nintendo Switch  
B2 for XInput  
B3 for DirectInput/PS3  
B4 for PS4  
R2 for Keyboard (no btn)

with RP2040-CE Firmware

Sheet: /  
File: thumbs-down-hw.kicad\_sch

**Title:**

Size: A4 Date:  
KiCad E.D.A. kicad 7.0.2-0

**Rev:**  
Id: 1/1