


Multi Function Meter w/ Fuel Pump Driver

User's Manual

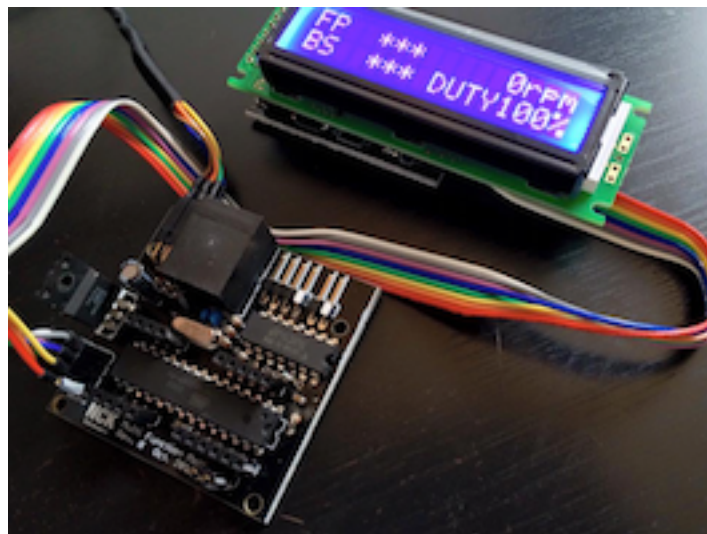

Contents

- ・ 概要
- ・ セットアップ

・概要

本メータは、ディジーチェーン接続されたDefi Link Unit II から送信される車両情報項目の表示、およびエンジン回転数測定、電圧測定の機能を備えます。

また、上記項目を元にモータをPWM制御するモータドライバ機能を持ちます。

メータは下記の3つのボードで構成されます。

メインボード




LCDディスプレイボード



PWMモータドライバボード



- ・セットアップ

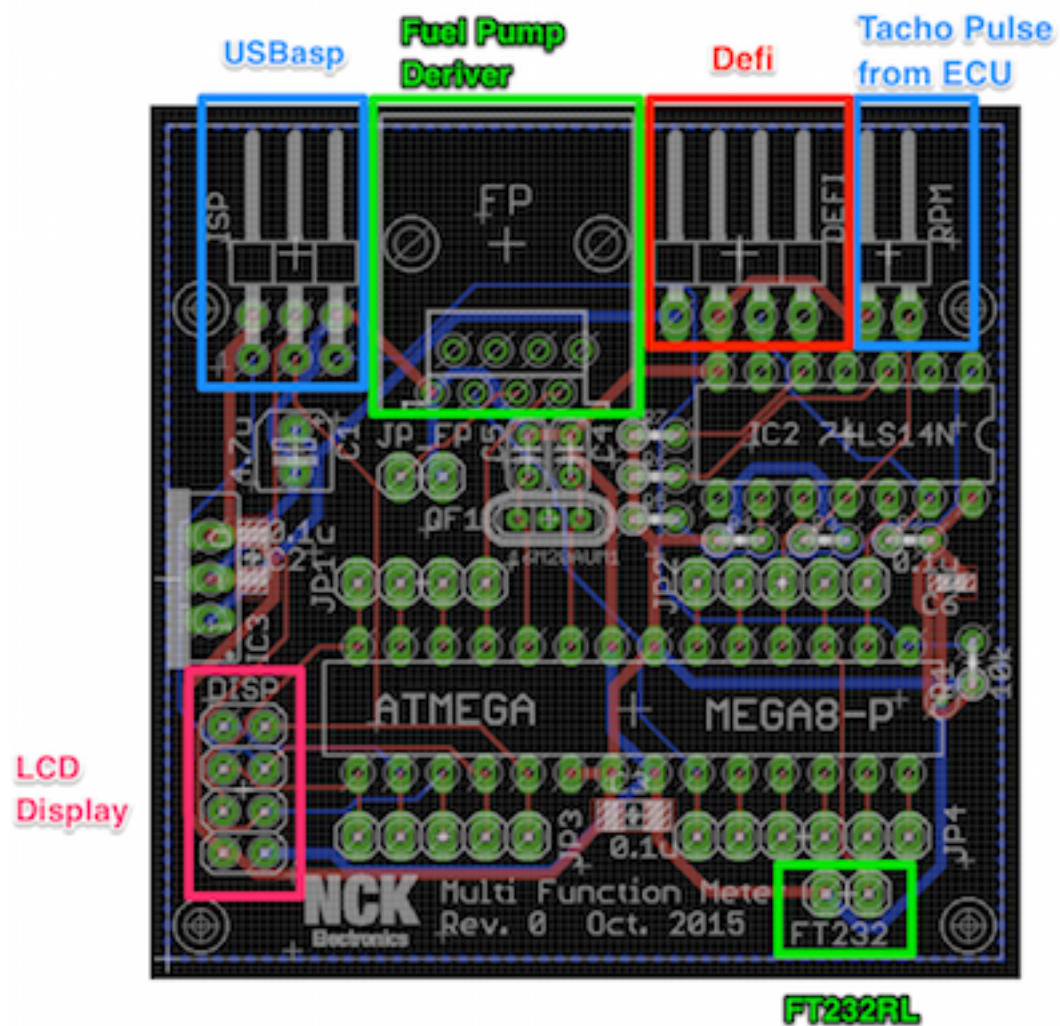

PWMモータドライバボード




黄色 バッテリー

赤色 フューエルポンプ

細い白と黒をショートするとPWM制御が無効になり、バツ直状態になります。

・ USB通信時ターミナル設定

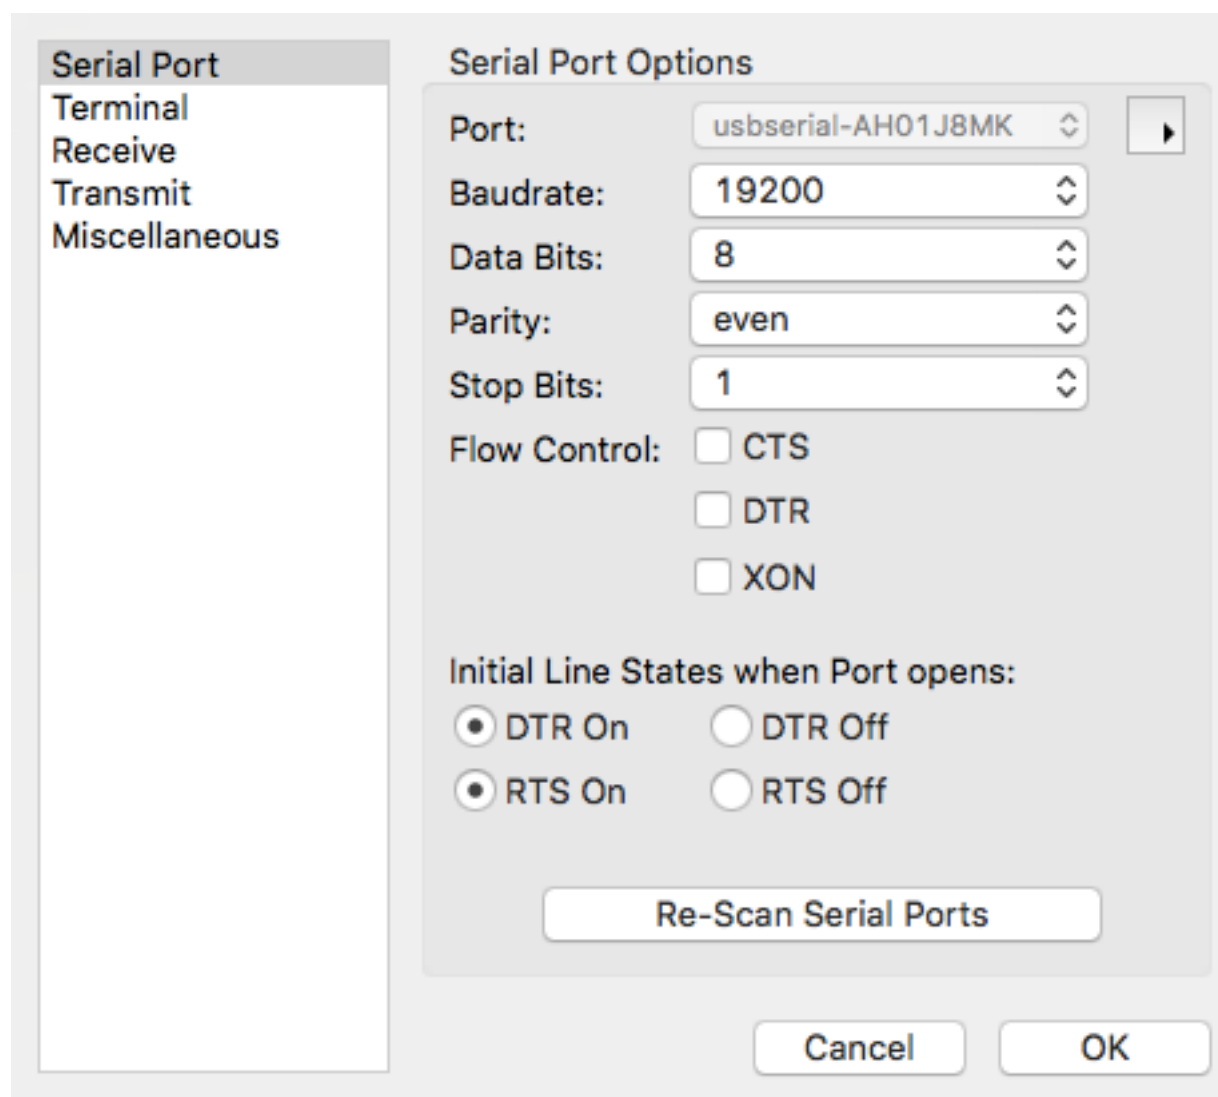

The image shows a 'Serial Port Options' dialog box. On the left is a sidebar with four items: 'Serial Port' (highlighted), 'Terminal', 'Receive', and 'Transmit'. Below these is a 'Miscellaneous' section. The main area of the dialog is titled 'Serial Port Options' and contains several settings. The 'Port' is set to 'usbserial-AH01J8MK' with a dropdown arrow and a right-pointing arrow button. The 'Baudrate' is set to '19200', 'Data Bits' to '8', 'Parity' to 'even', and 'Stop Bits' to '1', all with dropdown arrows. Under 'Flow Control', there are three checkboxes: 'CTS' (unchecked), 'DTR' (unchecked), and 'XON' (unchecked). Below this, under 'Initial Line States when Port opens:', there are four radio buttons: 'DTR On' (selected), 'DTR Off' (unselected), 'RTS On' (selected), and 'RTS Off' (unselected). At the bottom of the main area is a 'Re-Scan Serial Ports' button. At the very bottom of the dialog are 'Cancel' and 'OK' buttons.

Serial Port Options

Serial Port
Terminal
Receive
Transmit
Miscellaneous

Port: usbserial-AH01J8MK

Baudrate: 19200

Data Bits: 8

Parity: even

Stop Bits: 1

Flow Control: ☐ CTS
☐ DTR
☐ XON

Initial Line States when Port opens:
☒ DTR On ☐ DTR Off
☒ RTS On ☐ RTS Off

Re-Scan Serial Ports

Cancel OK