


FlyHerder – Setup diagram

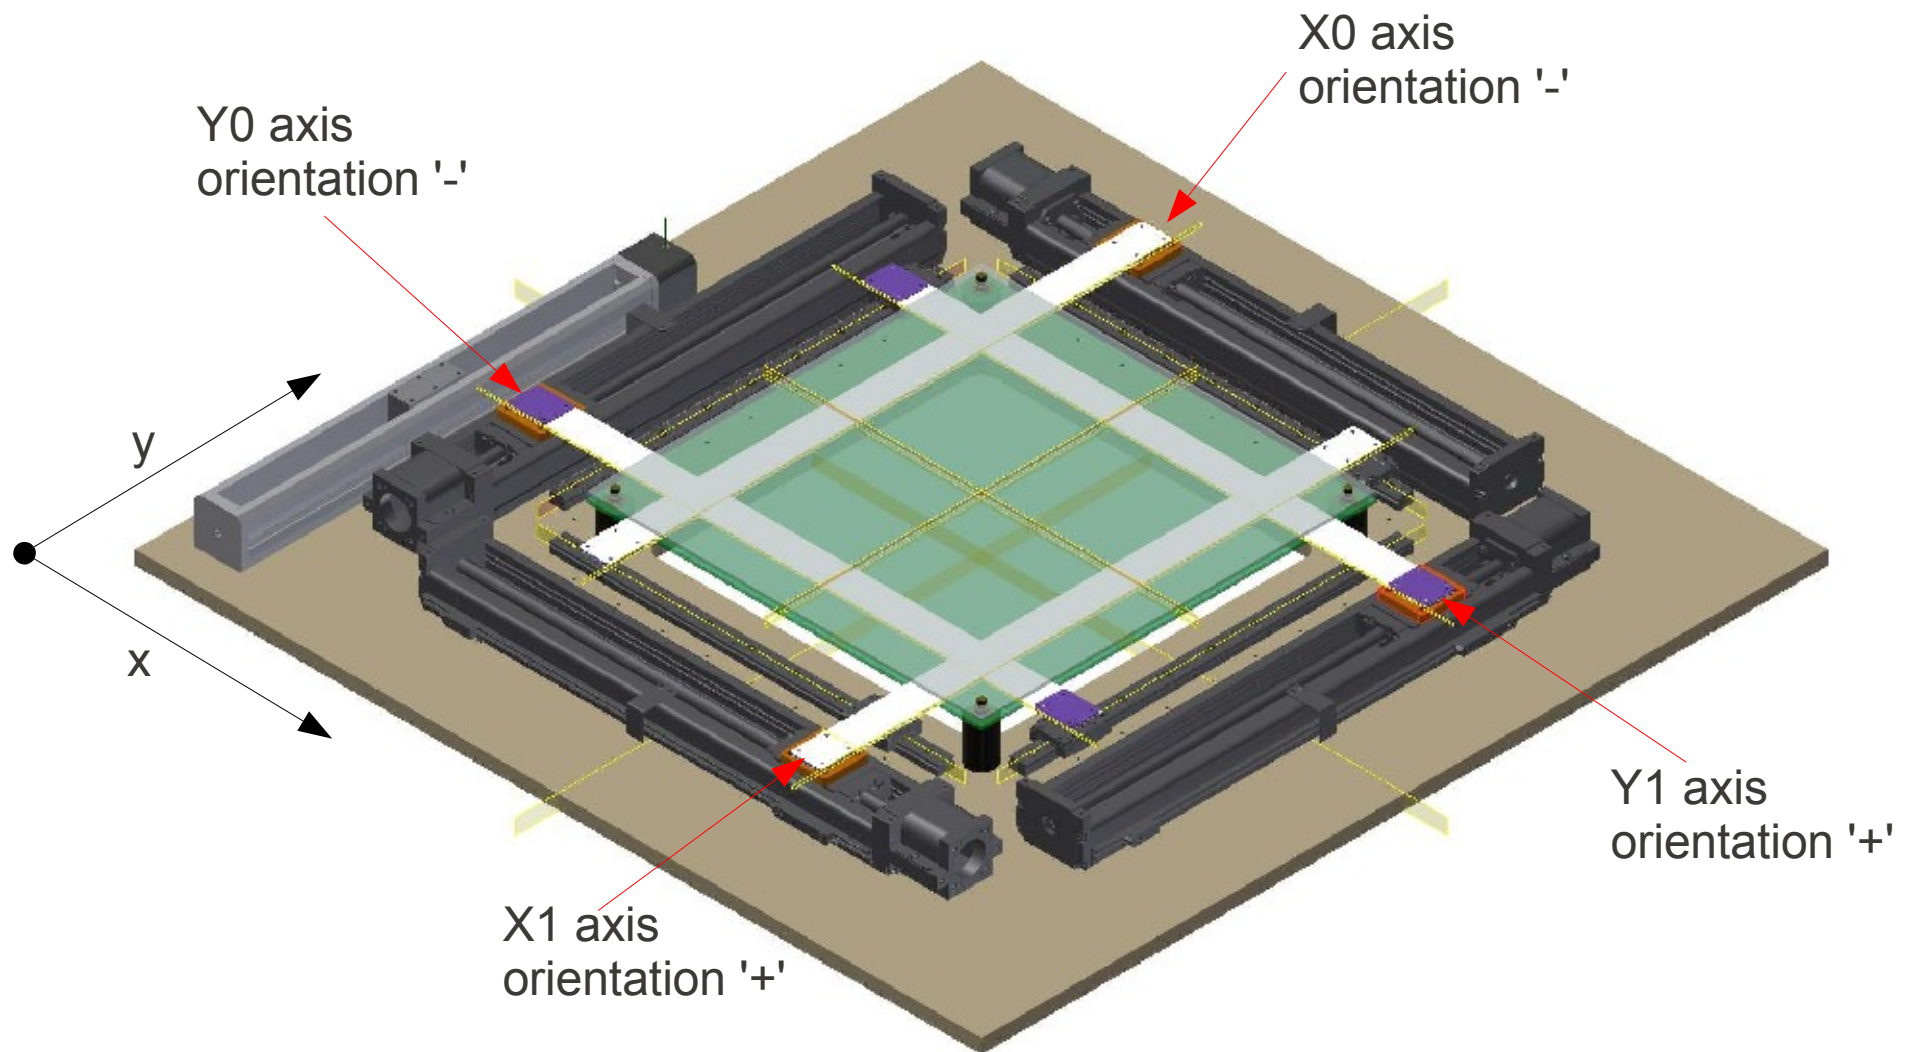

- Note, positions of X0, Y0 axes must always be less than positions of X1, Y1 axes.
- Axis orientations: '+' = normal, '-' = inverted (inverts direction signal) changeable via software.