


Quick Start Guide for using the Cadeduino (USB) Controller

- Make sure to always choose USB Type to be “keyboard + Mouse + Joystick” when reprogramming the Teensy 2.0
- The Cade-Shield or Cadeduino comes with 6 built in peripheral modes
 - Get to Hybrid Mouse/Keyboard Mode by holding Joystick Up while plugging in controller for the first time into USB port
 - Starts in Gamepad mode automatically when plugging into USB port
- LED Provides Status of Controller
 - LED blinks when changing modes (blinks the mode number)
 - LED blinks once after plugging in USB port initially
 - LED blinks when joystick or buttons are triggered
- To use Cadeduino with Android Tablets you need an OTG USB cable
- BATTERIES ARE NOT NEEDED (operates from USB power)

Hybrid Mouse/Keyboard mode is enabled by holding joystick in the up position while plugging in the USB cable

Mode 1 of 3

Edit the Cade-Shield Sketch to customize these buttons

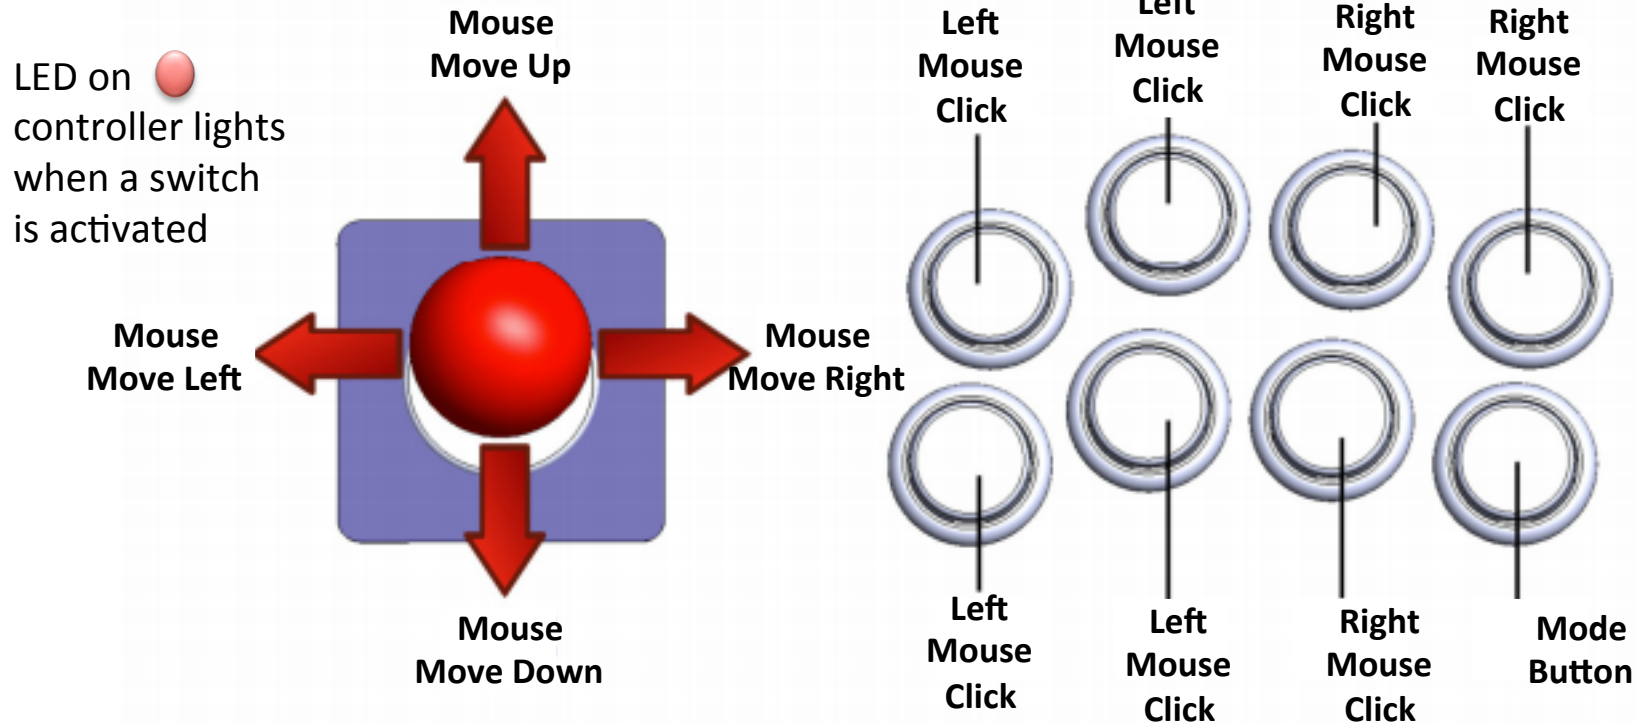



Mode 1 – Mouse Mode

Press Mode button to change mode anytime.
LED indicates mode by blinking mode (1,2,or3)

Hybrid Mouse/Keyboard mode is enabled by holding joystick in the up position while plugging in the USB cable

Mode 2 of 3

Edit the Cade-Shield Sketch to customize these buttons

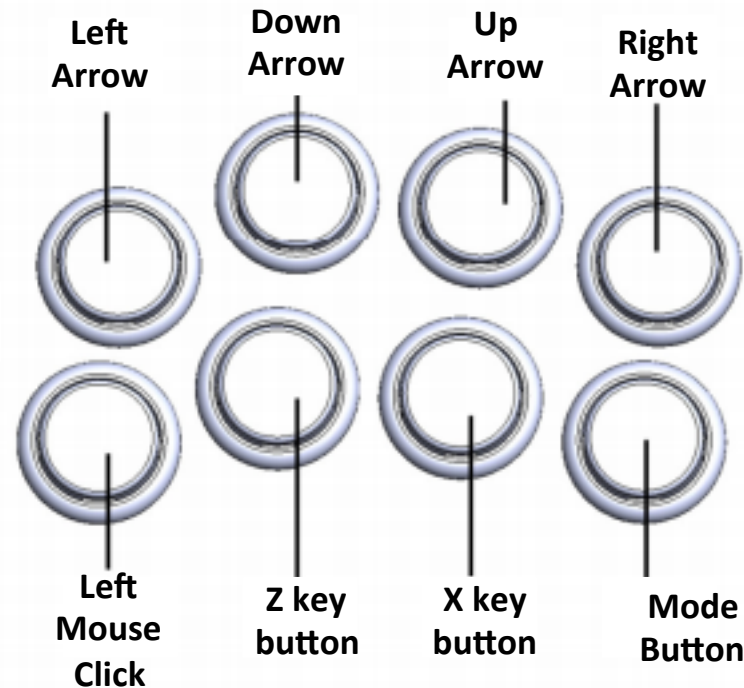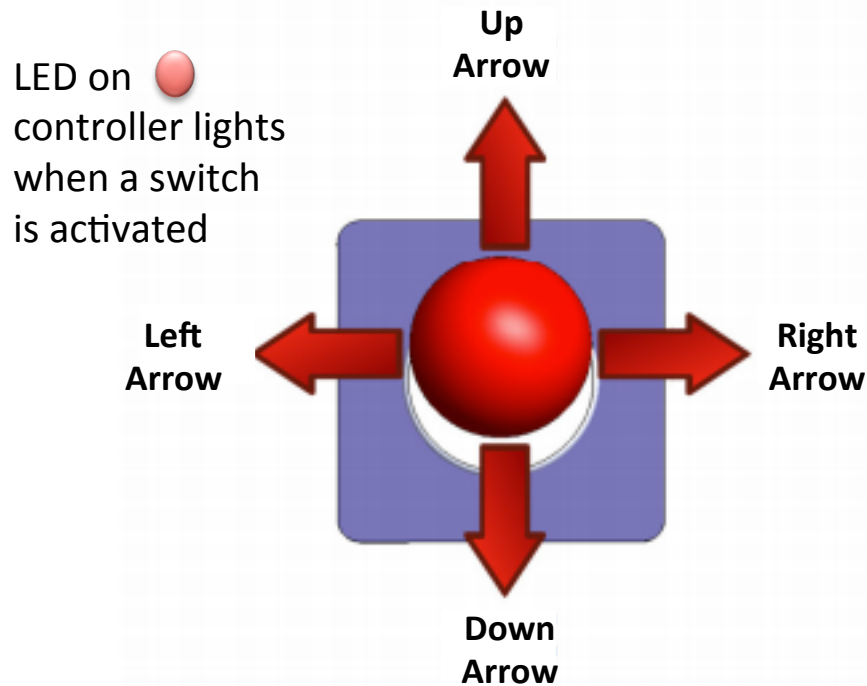


Mode 2 – Keyboard Mode

Press Mode button to change mode anytime.
LED indicates mode by blinking mode (1,2,or3)

Hybrid Mouse/Keyboard mode is enabled by holding joystick in the up position while plugging in the USB cable

Mode 3 to 3

Edit the Cade-Shield Sketch to customize these buttons

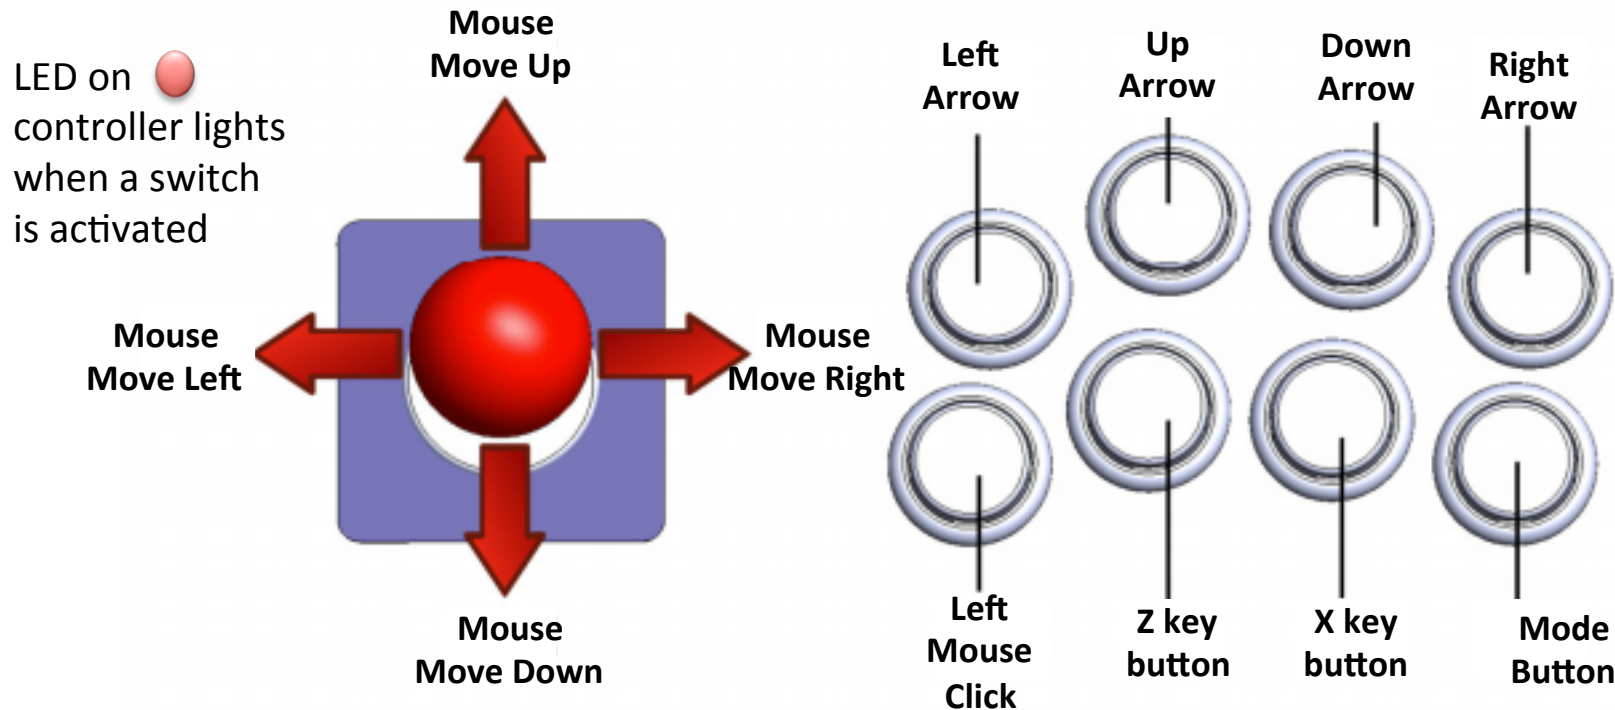



Mode 3 – Hybrid Mouse/Keyboard Mode

Press Mode button to change mode anytime. LED indicates mode by blinking mode (1,2,or3)

Gamepad mode is enabled by default when plugging in the USB cable

Mode 1 of 3

Edit the Cade-Shield Sketch to customize these buttons

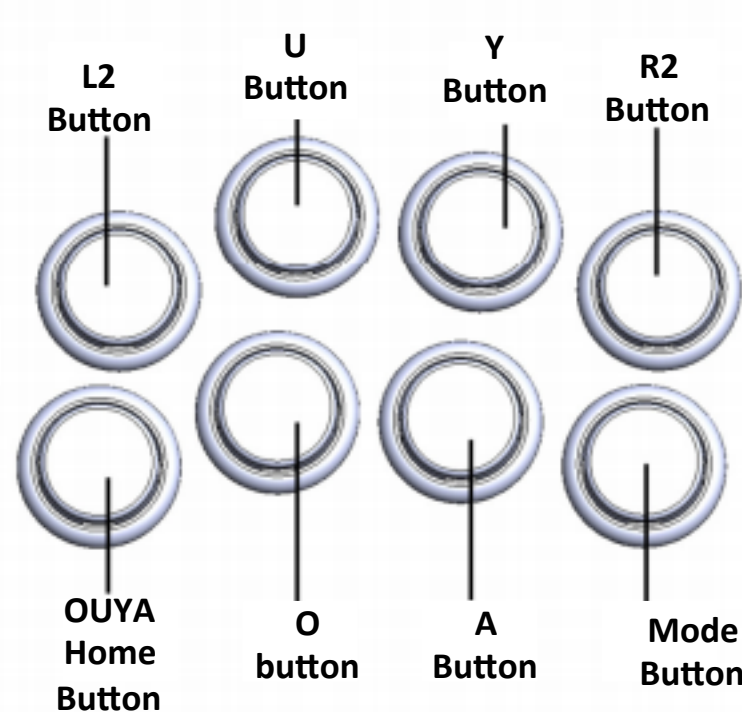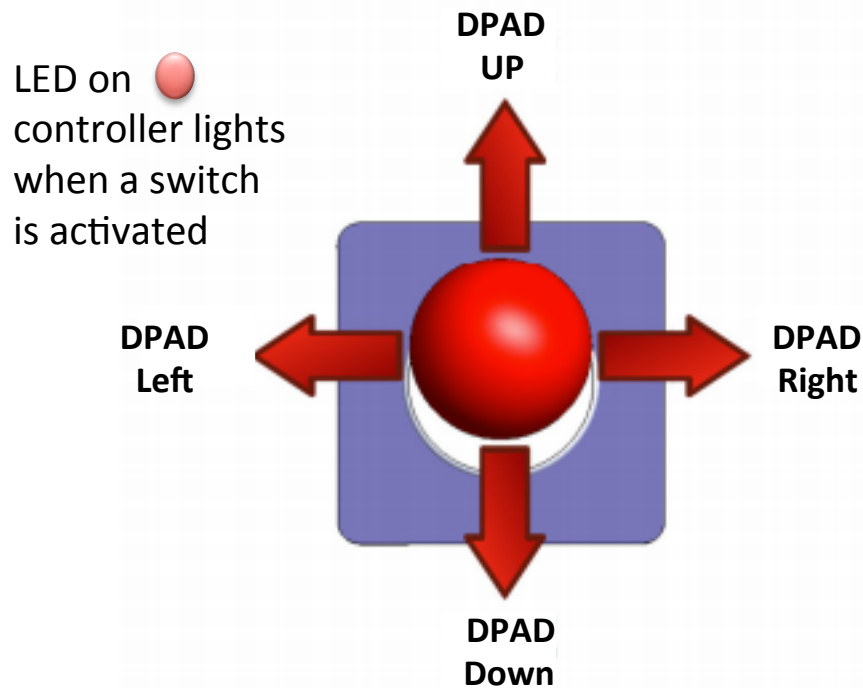


Mode 1 – DPAD Mode

Press Mode button to change mode anytime.
LED indicates mode by blinking mode (1,2,or3)

Gamepad mode is enabled by default when plugging in the USB cable

Mode 2 of 3

Edit the Cade-Shield Sketch to customize these buttons

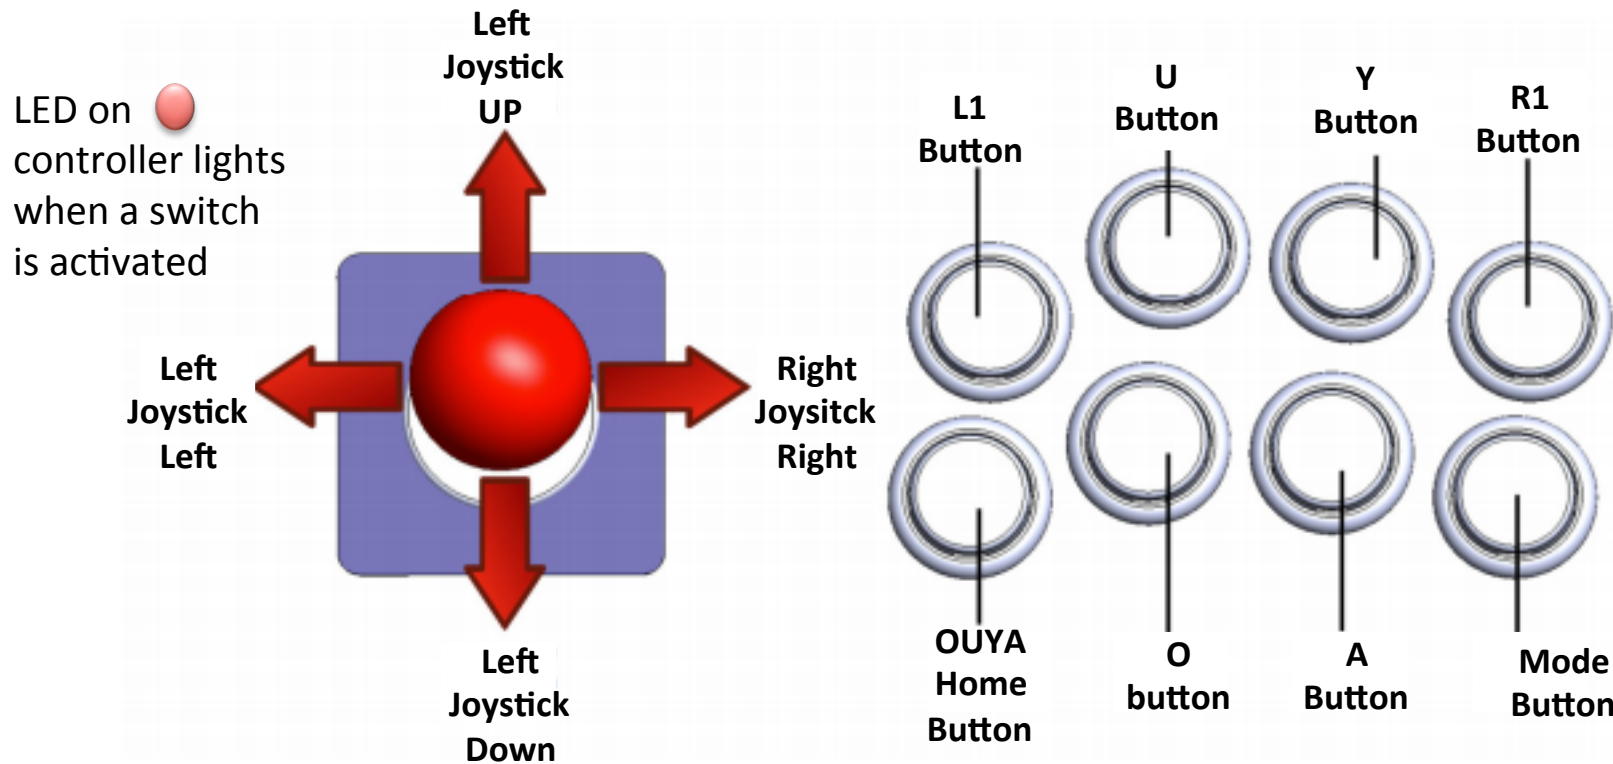


Mode 2 – Left Joystick Mode
(Simulated from Digital)

Press Mode button to change mode anytime.
LED indicates mode by blinking mode (1,2,or3)

Gamepad mode is enabled by default when plugging in the USB cable

Mode 3 of 3

Edit the Cade-Shield Sketch to customize these buttons

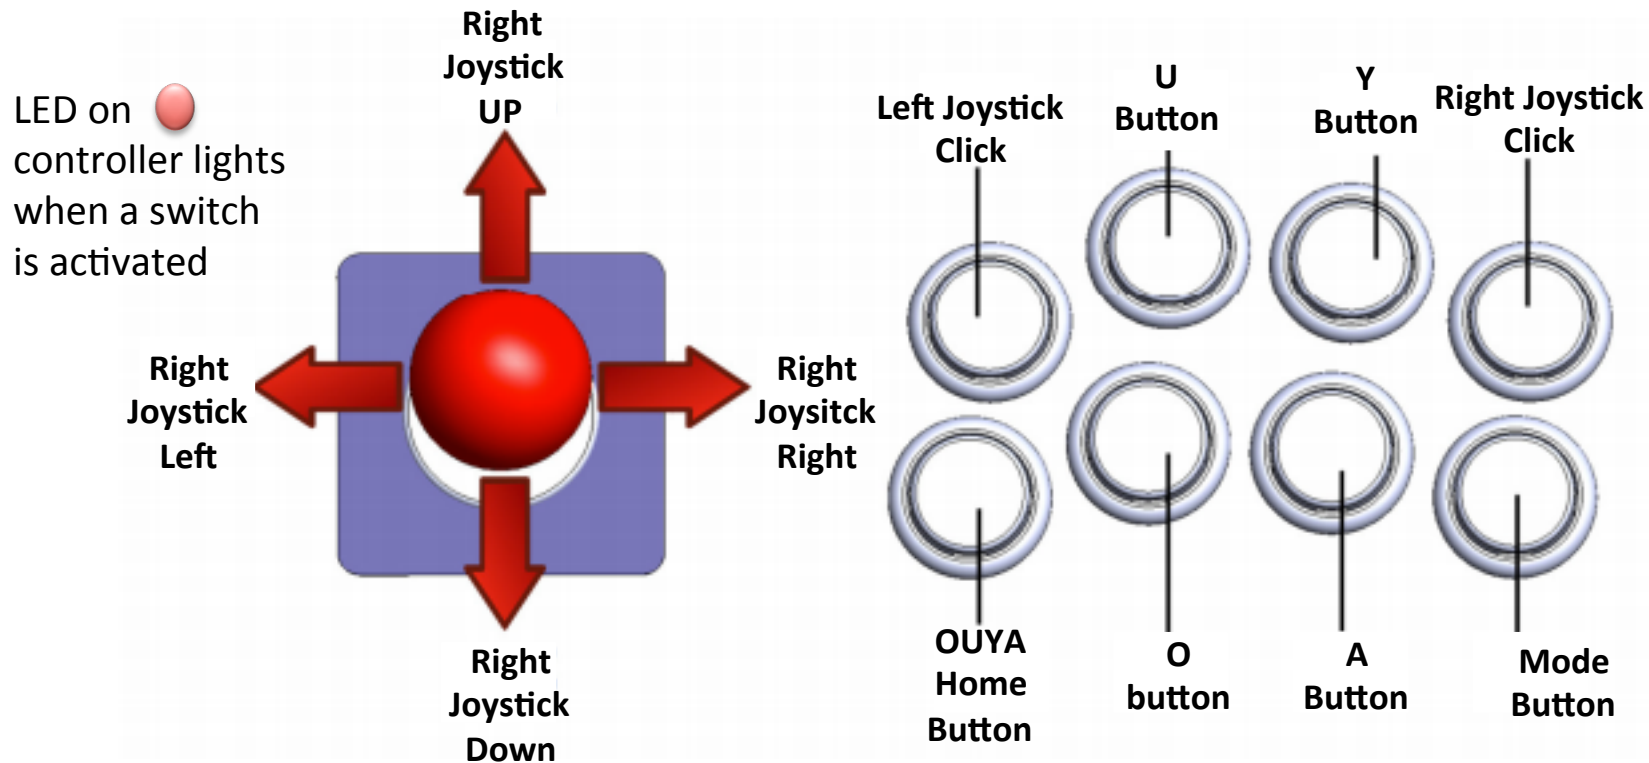

Mode 3 – Right Joystick Mode
(Simulated from Digital)

Press Mode button to change mode anytime.
LED indicates mode by blinking mode (1,2,or3)