


1. When uploading code make sure that the “BOOTLOADER” is set to “BOOT”.

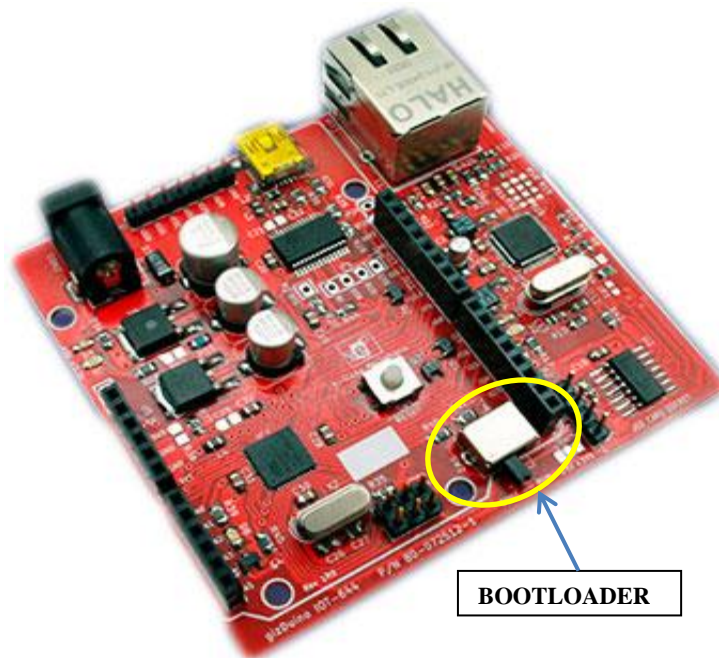

Then “RUN” if use.

2. DHT22/DHT11 pin connection.

DHT22/DHT11 PIN	IOT-644 PIN
1	+5V
2	A0
3	NONE
4	GND

DHT22 pins	
1	VCC
2	DATA
3	NC
4	GND

