


# WATER & WASTE REFERENCE GUIDE

## PUMPED MACHINES

All pumped machines have a 600mm maximum drainpipe height from the base of the machine. If your drainpipe is higher than 600mm from the base of the machine, you must reduce the height of the drainpipe.

This can be done by cutting down the drainpipe to the desired height, or have the machine placed on a stand so it is at a higher position.

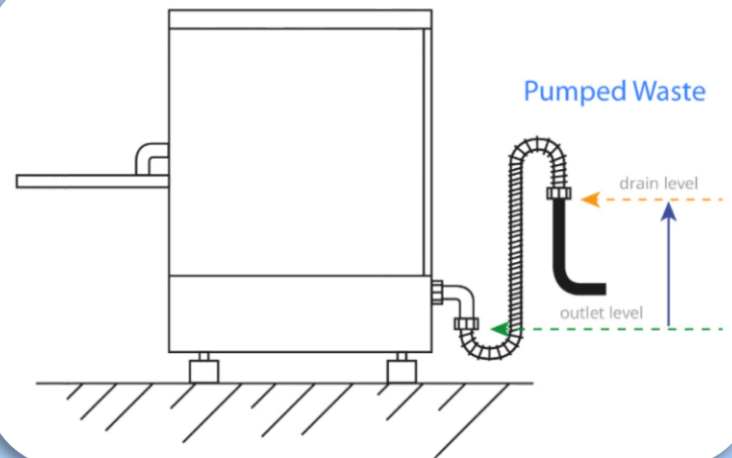

## STANDS

### Stands

Classeq offers Stands for 350mm to 500mm undercount washers as well as Ice machines. View the range on our site to find the best stand for you.

## GRAVITY MACHINES

Gravity waste machines function by the operator removing a plug from inside the machine wash tank to release dirty water into the drainage and therefore require the waste pipe to be below the base of the machine

This can be achieved by installing the machine on a countertop or on a stand.

