

- Continuous effect
- Momentary effect
- Simple UI function


Button presses: 1C Click 1H Hold 2C Click, click 2H Click, hold 3C Click, click, click 3H Click, click, hold (etc)

# Andúril<sup>2</sup>

Revision 653.2

github.com/jameshome/anduril-guide

## Operating Modes

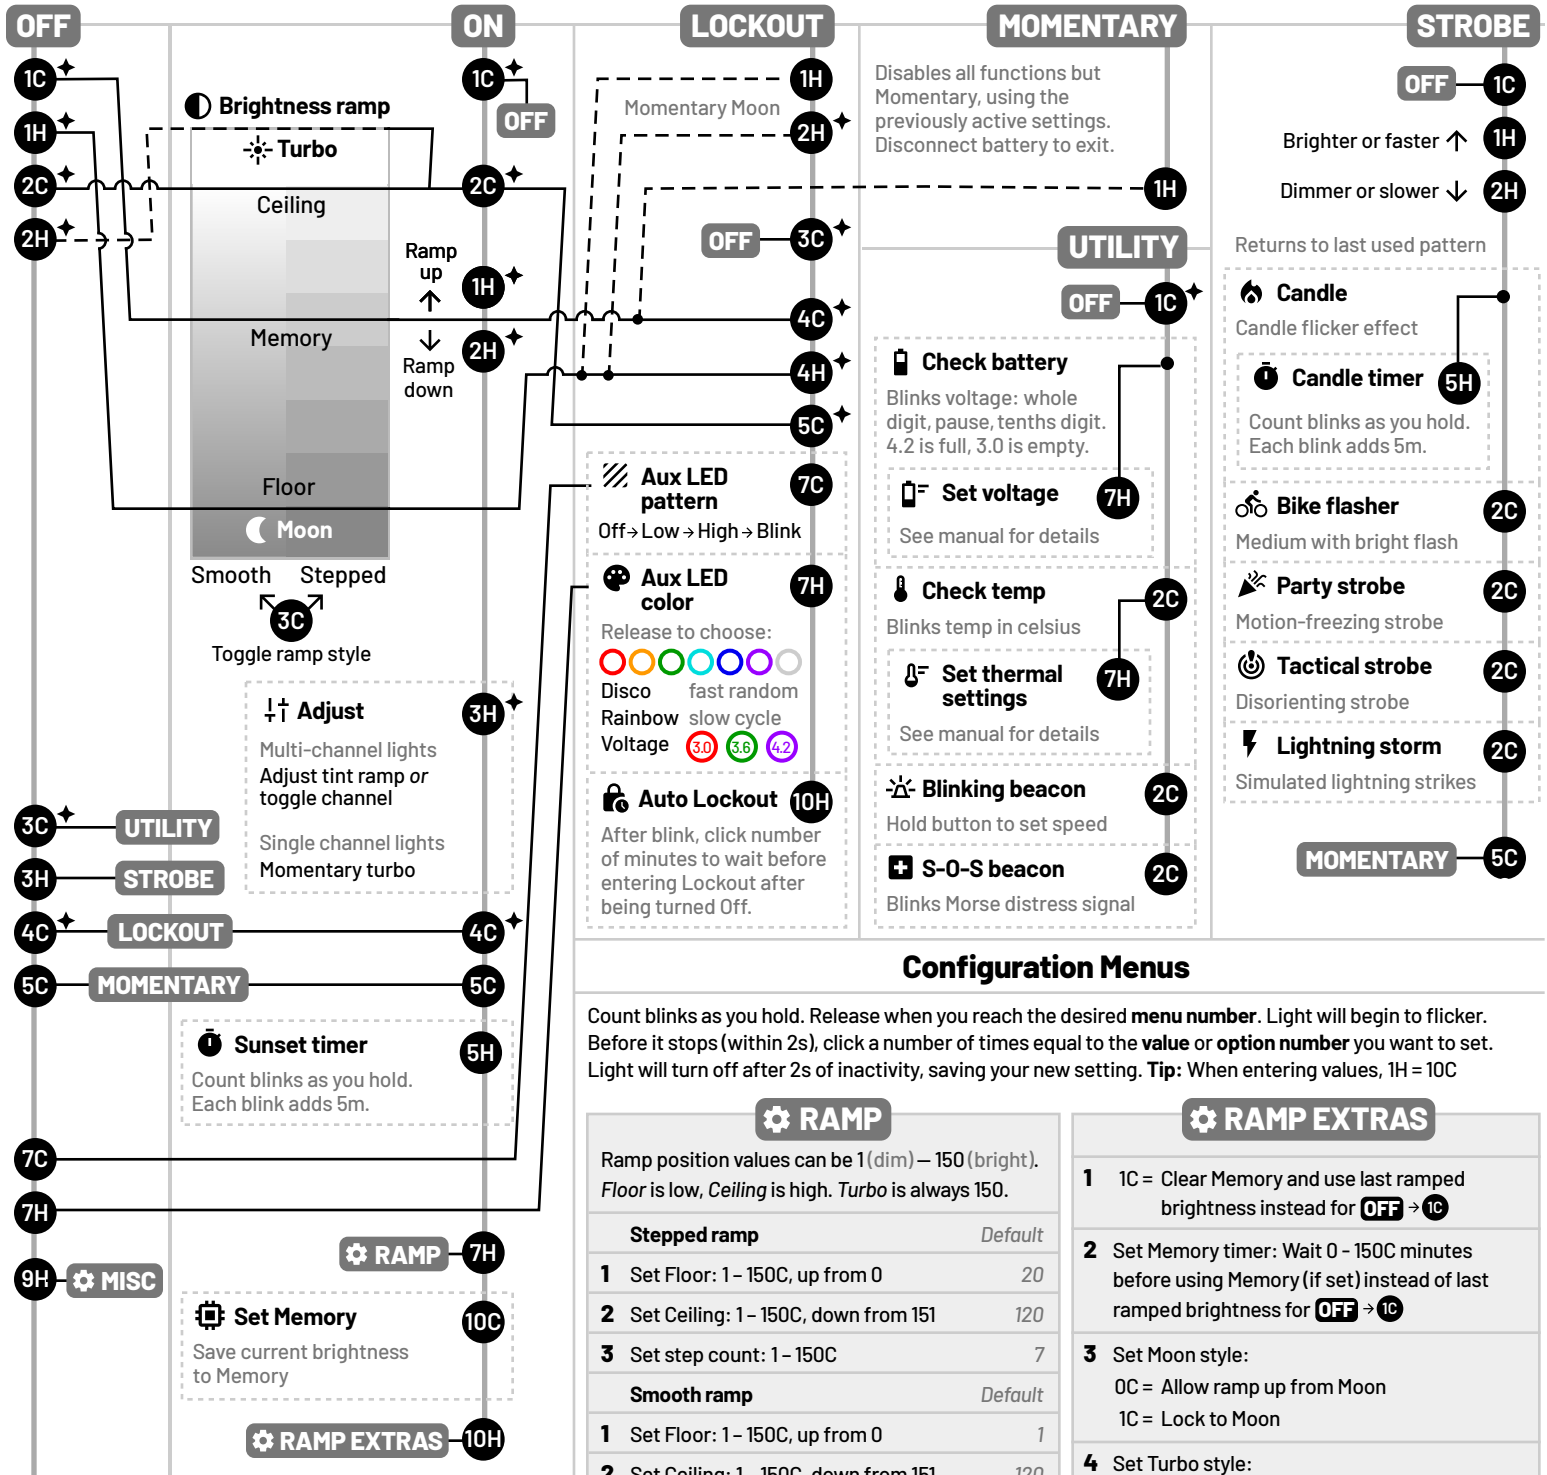

## Configuration Menus

Count blinks as you hold. Release when you reach the desired **menu number**. Light will begin to flicker. Before it stops (within 2s), click a number of times equal to the **value** or **option number** you want to set. Light will turn off after 2s of inactivity, saving your new setting. **Tip:** When entering values, 1H = 10C

### RAMP

Ramp position values can be 1(dim) – 150(bright). Floor is low, Ceiling is high. Turbo is always 150.

Stepped ramp	Default
1 Set Floor: 1 – 150C, up from 0	20
2 Set Ceiling: 1 – 150C, down from 151	120
3 Set step count: 1 – 150C	7
Smooth ramp	Default
1 Set Floor: 1 – 150C, up from 0	1
2 Set Ceiling: 1 – 150C, down from 151	120
3 Set ramp speed: 1C (fast) – 4C (slow)	1

### SIMPLE UI

	Default
1 Set Floor: 1 – 150C, up from 0	20
2 Set Ceiling: 1 – 150C, down from 151	120
3 Set step count: 1 – 150C	5
4 Set Turbo style:	0
OC = No Turbo, only Ceiling	
1C = ON → 2C immediate Turbo	
2C = ON → 2C first ceiling, then 2C Turbo	

### RAMP EXTRAS

- 1C = Clear Memory and use last ramped brightness instead for OFF → 1C
- Set Memory timer: Wait 0 – 150C minutes before using Memory (if set) instead of last ramped brightness for OFF → 1C
- Set Moon style:  
OC = Allow ramp up from Moon  
1C = Lock to Moon
- Set Turbo style:  
OC = No Turbo, only Ceiling  
1C = ON → 2C immediate Turbo  
2C = ON → 2C first ceiling, then 2C Turbo

### MISC

This menu supports features that aren't available on all lights (see manual for details).

- Set channel adjustment style:  
OC = Blend between channels (tint ramp)  
1C = Toggle between channels
- Set jump start level: 1 – 150C

### Simple UI

- 10C Turn Simple UI on. Limit brightness and disable all functions not marked +. On by default when new and after reset.
- 10H Turn Simple UI off. If it's already off, SIMPLE UI
- 13C Reset light  
Or reconnect tailcap while holding button for 4s
- 15C Version check  
YYYY MM DD BB PP: year, month, day, brand, product