



Janelia

Sheet: /stepper_controller/
File: stepper_controller.sch

Title: mouse_reach_controller

Size: A4
KiCad E.D.A. kicad 5.1.12

Date:
Rev: 1.2
Id: 2/9

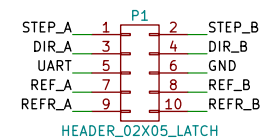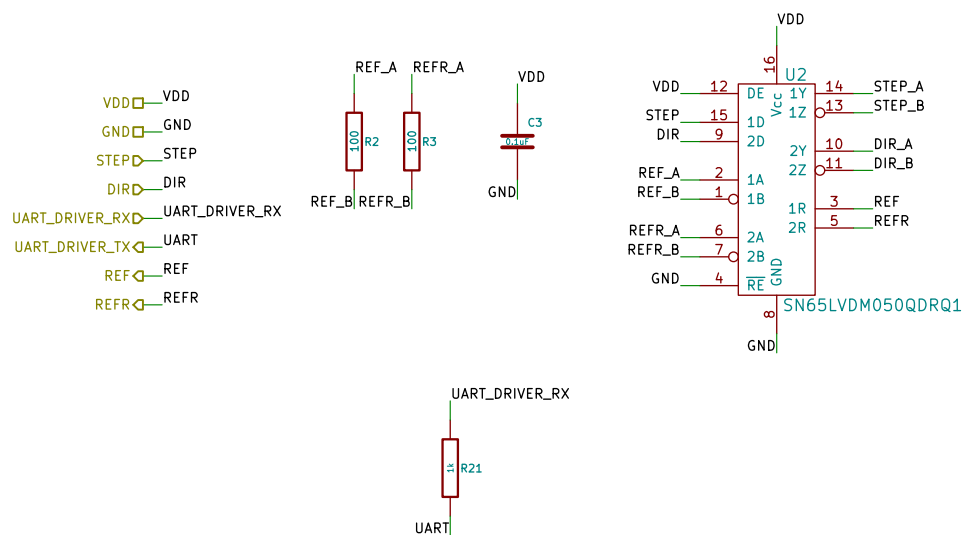

Janelia

Sheet: /stepper_controller/stepper_driver_interface_0/
File: stepper_driver_interface.sch

Title: mouse_reach_controller



Size: A4

Date:

KiCad E.D.A. kicad 5.1.12

Rev: 1.2

Id: 3/9

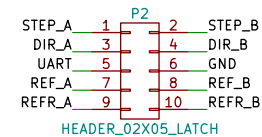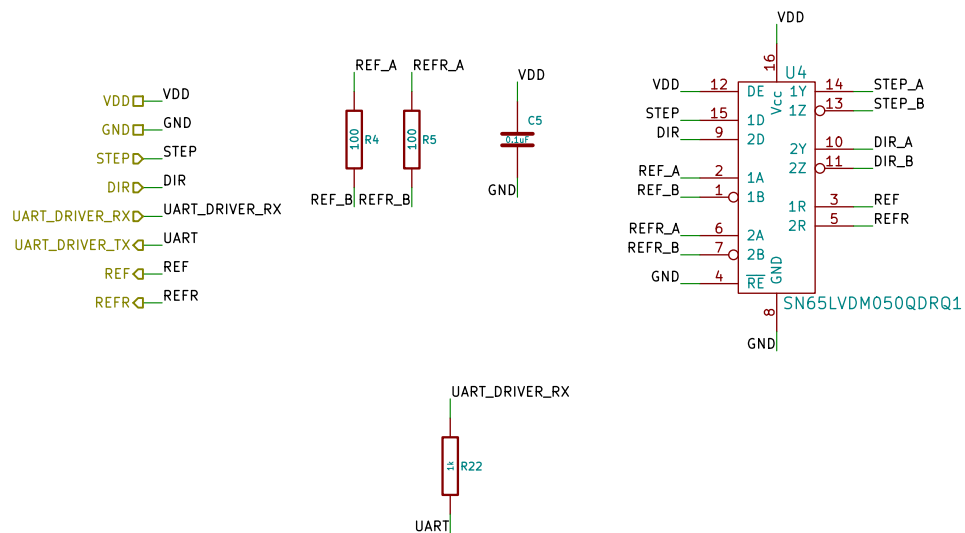


Janelia

Sheet: /stepper_controller/stepper_driver_interface_1/
File: stepper_driver_interface.sch

Title: mouse_reach_controller

Size: A4	Date:	Rev: 1.2
KiCad E.D.A. kicad 5.1.12		Id: 4/9

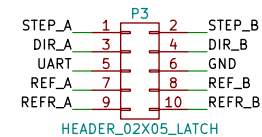

Sheet: /stepper_controller/stepper_driver_interface_2/
File: stepper_driver_interface.sch

Title: *mouse_reach_controller*

Size: A4


Date:

Size: A1	Date:
KiCad E.D.A.	kicad 5.1.12

Rev: 1.2

Id: 5/9

GND □ GND
ENABLE ▮ ENABLE

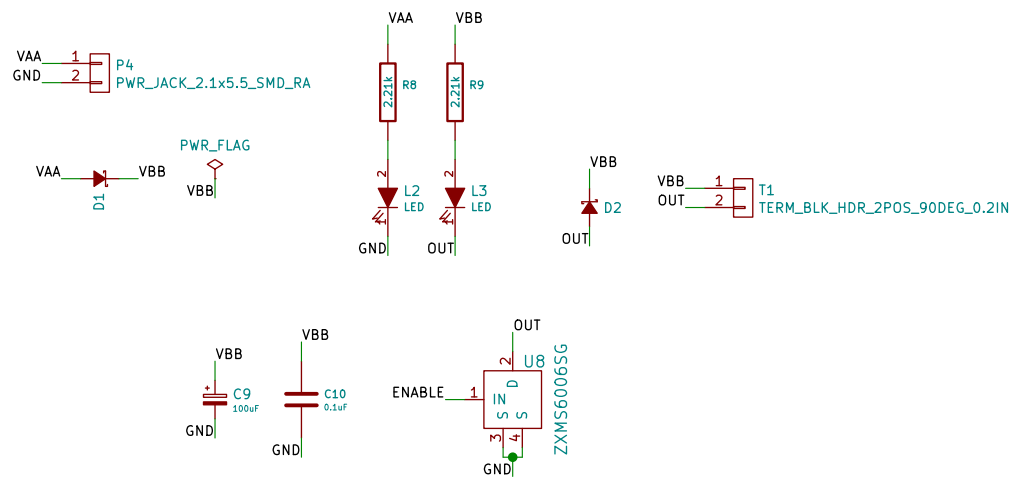

Janelia

Sheet: /power_switch_driver/
File: power_switch_driver.sch

Title: mouse_reach_controller


Size: A4

Date:

KiCad E.D.A. kicad 5.1.12

Rev: 1.2

Id: 6/9

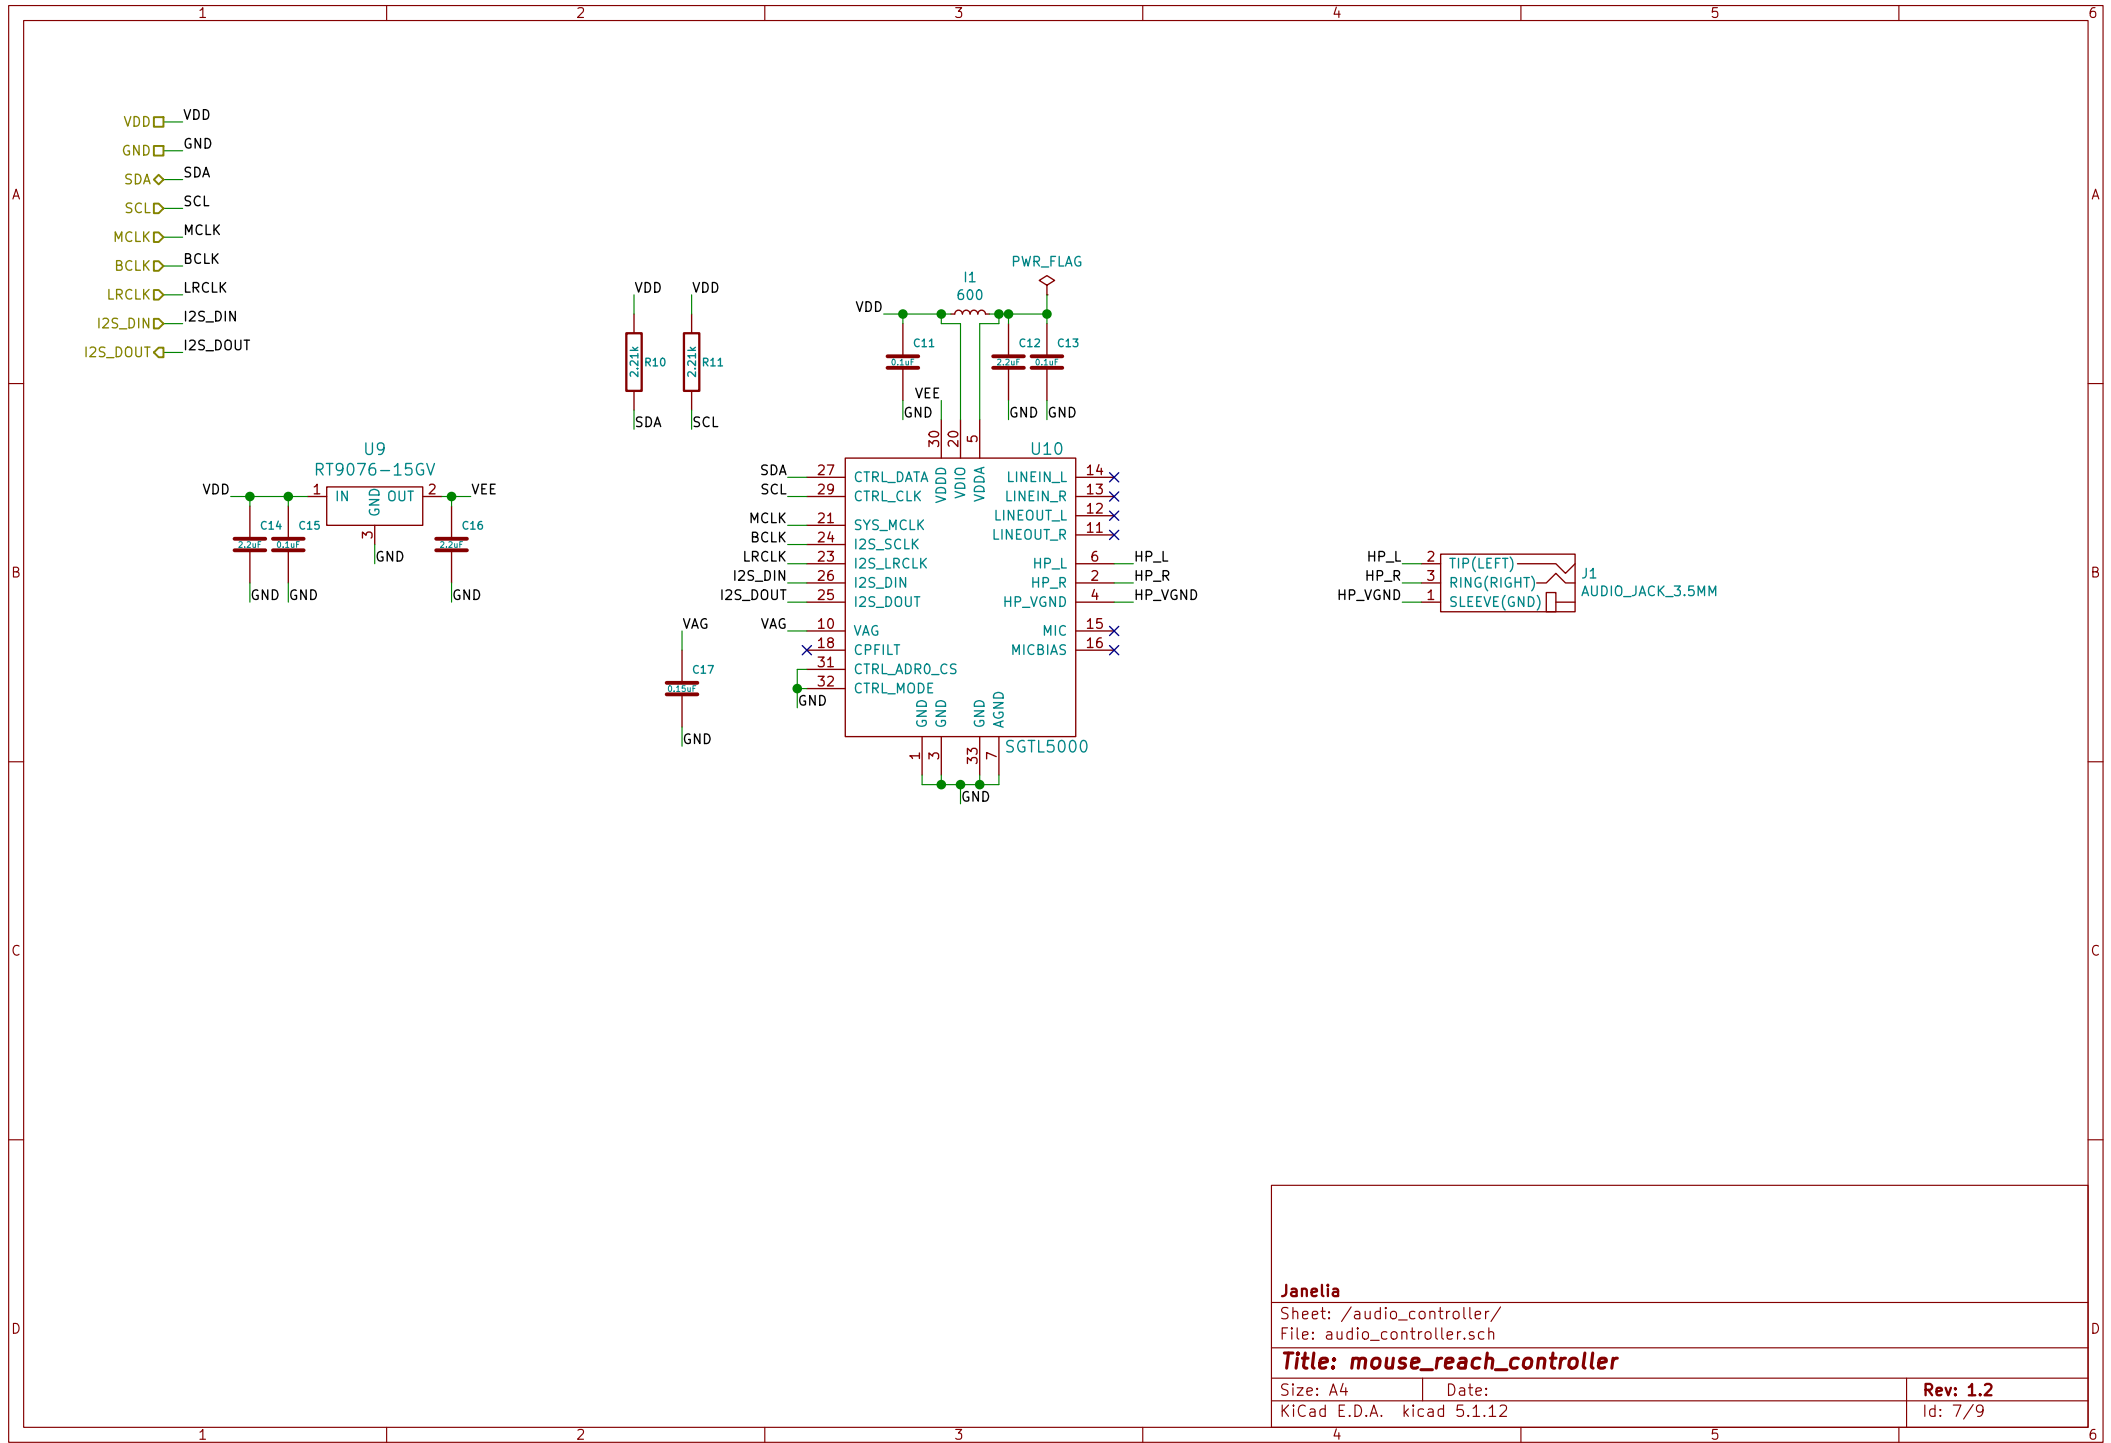

Id: 7/9

