

280

/home/jantman/GIT/glowforge-projects/air\_quality\_sensor\_mounting\_plate/main.scad

260

240

220

200

180

160

140

120

100

80

60

40

20

0

Scale is to calibrate actual printed dimension. Check both X and Y. Measure between tick 0 and last tick

100

120

140

160

180

