

ESP32-Cam	PowerBoost	Motor Driver	Var Potent.	AA Batt Pack	Left motor	Right Motor
5V	5V					
Gnd	Gnd					
Io12		In4				
Io13		In1				
Io15	LB					
Io14			2 (middle)			
Io2		In3				
Io14		In2				
		VCC		+		
		Gnd		-		
	5V	EEP				
		Out1			+ (top)	
		Out2			- (bottom)	
		Out3				- (bottom)
		Out4				+ (top)
	USB		1 (left)			
	Gnd		3 (right)			