

Table of contents

Getting started

- 7 Layout
- 13 Connecting the AC adapter
- 16 Turning the computer on and off
- 19 Unlocking the screen

Windows

- 20 About Windows
- 22 Desktop
- 23 Start screen
- 25 The Charms
- 28 Applications
- 34 Microsoft account
- 34 Store

Basics

- 35 Touch screen (optional)
- 44 Keyboard
- 47 Touchpad
- 50 LCD brightness
- 52 Volume
- 53 Setup utility (BIOS)

Network & Internet

- 59 Wired LAN
- 62 Wireless LAN
- 64 Mobile broadband (Wireless WAN, optional)

Applications

- 66 Using applications
- 67 Settings
- 68 Software Update
- 69 Support Center
- 70 S Player+
- 71 TPM security solution (optional)

External devices

- 81 External CD/DVD drive
- 83 Memory card
- 86 External display
- 88 Slim security slot

Troubleshooting

- 89 Recover/Backup
- 96 Windows recovery function
- 96 Q&A

Appendix

- 101 Product specifications
- 102 Ergonomic tips
- 106 Battery
- 108 Safety precautions
- 121 Important safety information
- 124 Replacement parts and accessories
- 126 Regulatory compliance statements
- 144 WEEE symbol information
- 146 Samsung package Take-Back program
- 147 TCO certified (for corresponding models only)


Getting started

Layout



- Features or options may differ depending on the model.
- The items marked as optional may not be provided or may be provided in different locations.
- Since some space on the SSD is reserved for system recovery and operations, the displayed capacity of the SSD may be less than the actual capacity.

Front view

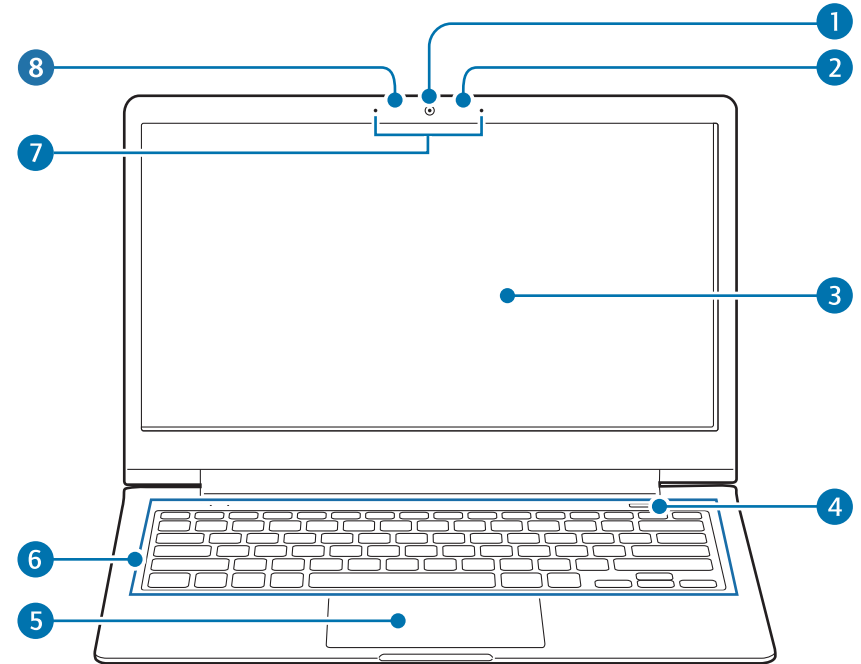

Number/Name	Description
1 Camera	<ul style="list-style-type: none"> • Takes photos or videos. • Use the camera application on the Start screen to take photos or videos.
2 Light sensor	<ul style="list-style-type: none"> • This sensor detects the ambient illumination of the computer. If the ambient illumination becomes dark, the LCD becomes dimmer and the keyboard backlight is lit. On the contrary, if the ambient illumination becomes brighter, the LCD becomes brighter and the keyboard backlight is turned off. • Do not cover the sensor.

Number/Name	Description
3 LCD/Touch screen (optional)	<ul style="list-style-type: none"> • Displays the user interface. • Recognizes touches on the screen. (Only for models with the touch screen.)
4 Power button	<ul style="list-style-type: none"> • Press to turn the computer on.
5 Touchpad	<ul style="list-style-type: none"> • Move the cursor and click options. • Works actions as those of a mouse.
6 Keyboard	<ul style="list-style-type: none"> • Press keys to enter data.
7 Microphone	<ul style="list-style-type: none"> • Use the built-in microphone.
8 Camera indicator light	<ul style="list-style-type: none"> • Indicates the camera status.