

280

/Users/jbsapis/Code/regle-de-nav/regle-aero.scad

260

240

220

200

180

160

140

120

100

80


60

40

20

0

Scale is to calibrate actual printed dimension. Check both X and Y. Measure between tick 0 and last tick

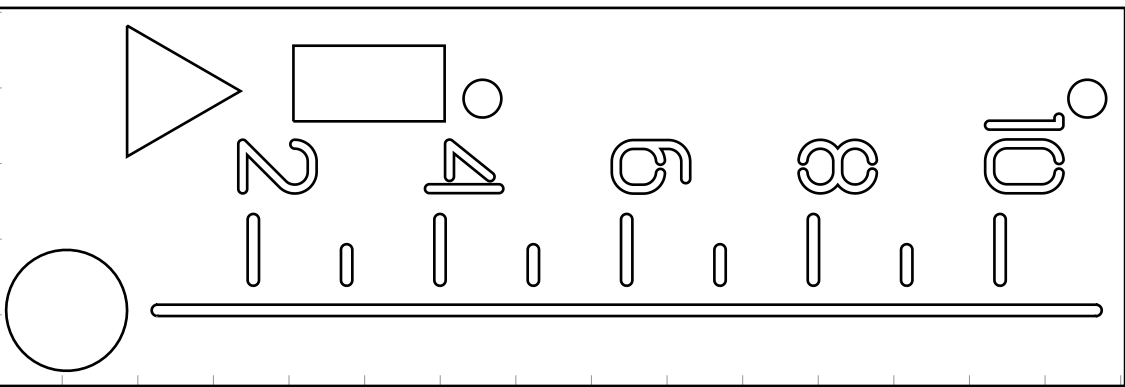

160

180