

280

/Users/jbsapis/Code/regle-de-nav/regle-aero.scad

260

240

220

200

180

160

140

120

100

80

60

40

20

0

0 20 40 60 80 100 120 140 160 180
Scale is to calibrate actual printed dimension. Check both X and Y. Measure between tick 0 and last tick

