

## Ingenico USB Driver V 3.20 Installation Guide

**Note:** Please Un-install any unwanted Ingenico drivers before installing the current driver.

**STEP 1:** Run the USB Driver installation programme on the PC where Nitro software is installed or will be install. The following screen will be displayed. Click on “RUN”




**STEP 2:** On setup wizard screen, click on '**NEXT**' to continue as shown below.




**STEP 3:** The location for driver is set by default, click 'NEXT' to continue as shown below.




**STEP 4:** At 'USB driver parameter window' click on the '**dropdown arrow**, to select the Ingenico terminal from the drop-down list which user wants to connect and click '**NEXT**' To continue.

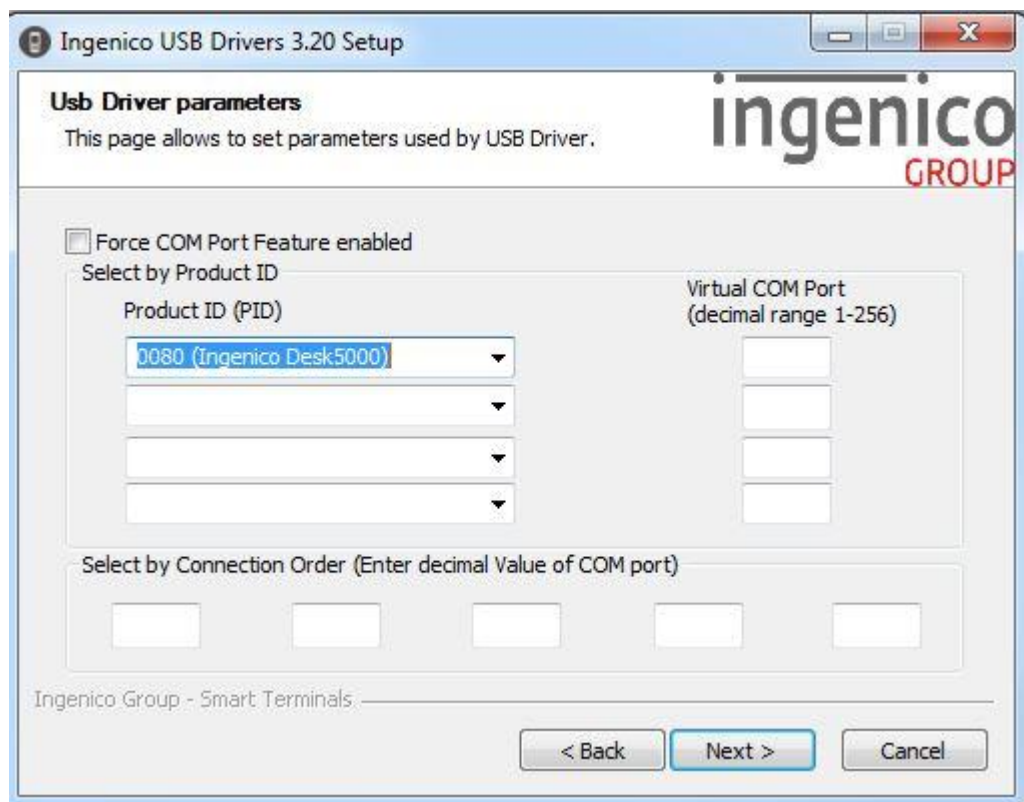


**STEP 5:** At 'advanced parameter' window by default the tick box for 'uninstall for Microsoft usbser(s) driver is ticked, Please **UNTICK** the box as shown below and click on 'NEXT'.

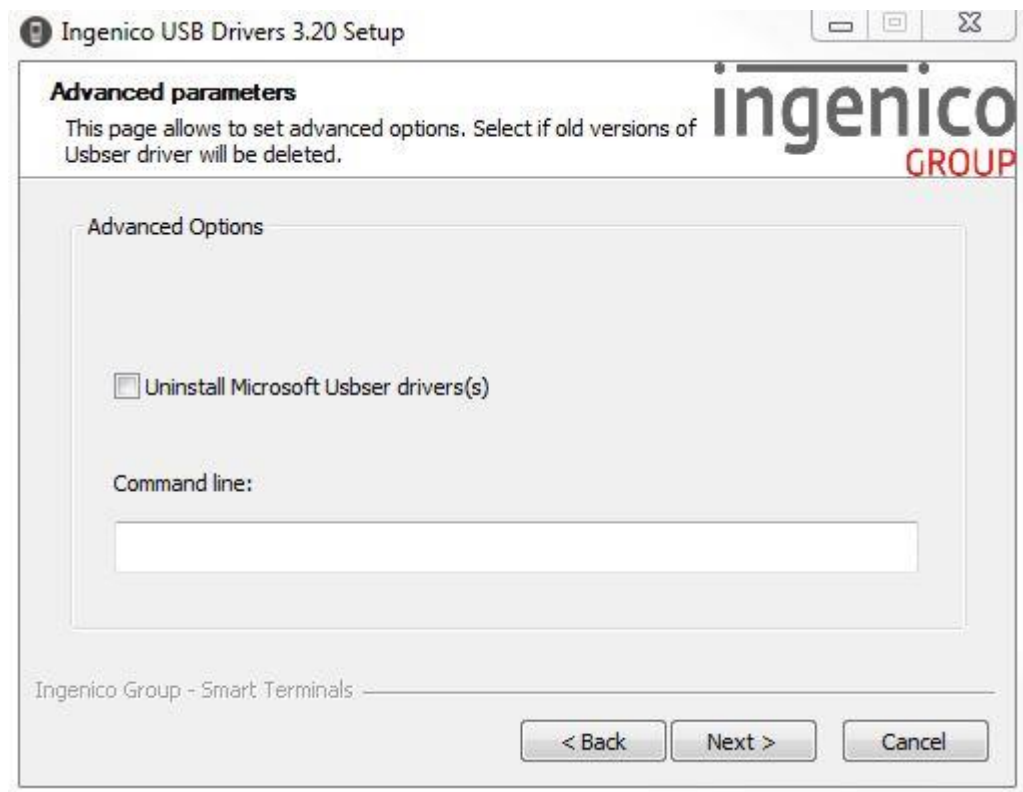

**STEP 6:** Click on “INSTALL” to begin the USB Driver installation.

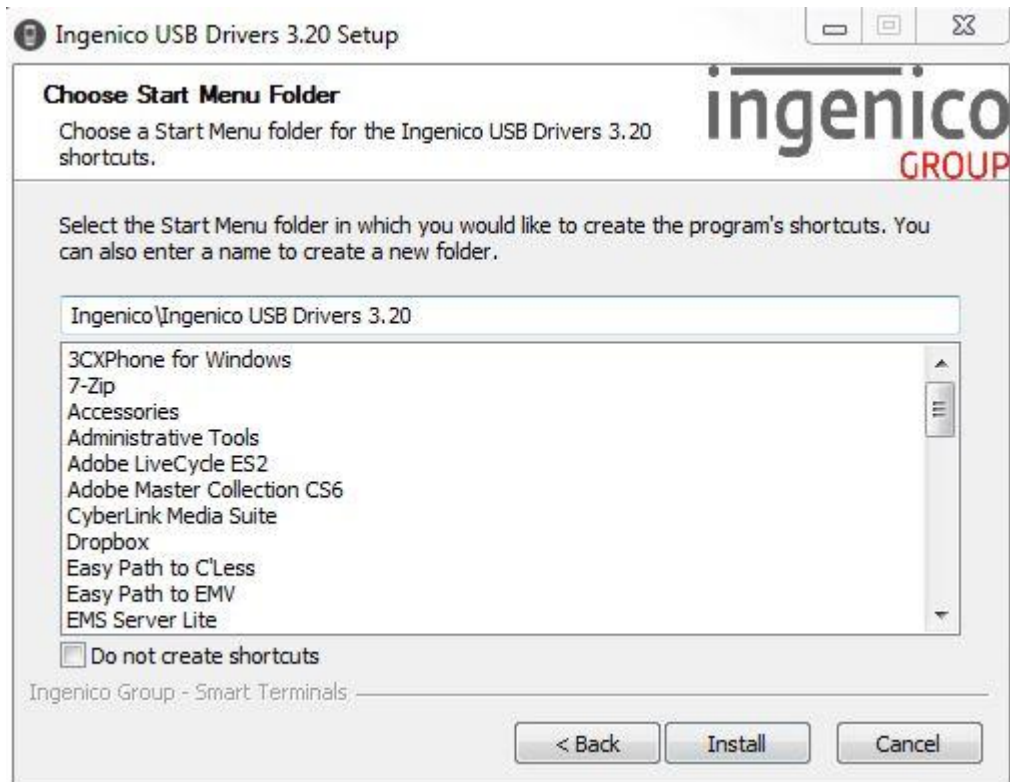

**STEP 7:** The installation will begin and may take several minutes to install. Click '**NEXT**'.

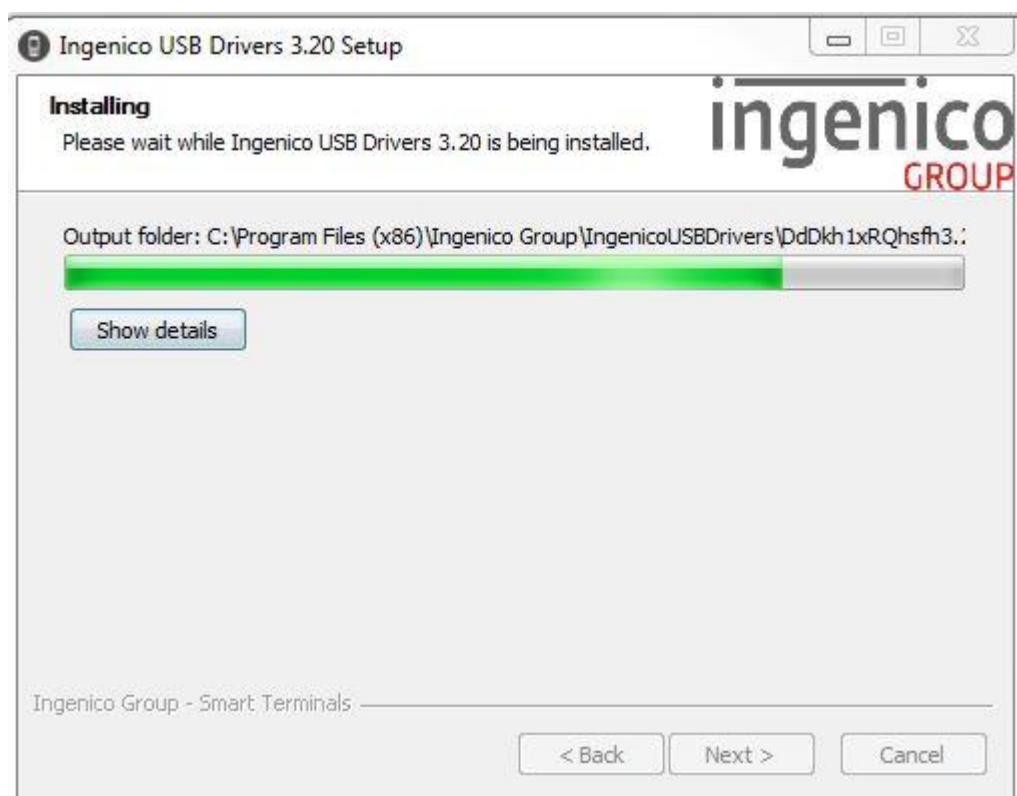

**STEP 8:** Click on '**FINISH**' to complete the installation process.

