



The Atelier
Touch to begin

System Startup

The system is getting ready.

7

seconds

Cancel



Relax



PC



Collaborate





Relax



PC



Collaborate





Relax



PC



Collaborate





Relax

Signage content is currently displaying on the screens.

Preset 1:
Forest



Preset 2:
Seaside



Preset 3:
Mountains



Use the home button at the top of the screen to
change the system mode.



Relax

Signage content is currently displaying on the screens.

Preset 1:
Forest



Preset 2:
Seaside



Preset 3:
Mountains



Use the home button at the top of the screen to
change the system mode.



Relax

Signage content is currently displaying on the screens.

Preset 1:
Forest



Preset 2:
Seaside



Preset 3:
Mountains



Use the home button at the top of the screen to
change the system mode.



PC

PC content is currently displaying on the screens. Use the wireless keyboard, mouse, and interactive screens to control it.

Use the home button at the top of the screen to change the system mode.



Collaborate

The system is currently in independent collaboration mode.
Interact with the screens using their on-screen controls.

Use the home button at the top of the screen to change the
system mode.



Settings



1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Settings



1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Settings

Pincode Rejected

1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Scheduling

Adjust power scheduling and startup mode.

Scheduling

Startup Time



7:00



Shutdown Time



19:00



Power Scheduled Days

Monday

Friday

Tuesday

Saturday

Wednesday

Sunday

Thursday

Startup Mode

Relax

PC

Collaborate

Use the home button at the top of the screen to change the system mode.



Relax Mode Selection

Set the Relax mode the system starts up in.

Preset 1:
Forest



Preset 2:
Seaside



Preset 3:
Mountains



Use the home button at the top of the screen to
change the system mode.



Pincode Change

Current Pincode: 1234

New Pincode: 7777

1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Pincode Change

Pincode Changed

1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.

System Shutdown

Are you sure you want to turn off the AV?
It will automatically turn off in:

7

seconds

Cancel



Multipurpose Space
Touch to begin

System Startup

The system is getting ready.

7

seconds

Cancel



Teams &
Presentation



Signage



Television





Teams &
Presentation



Signage



Television





Teams &
Presentation



Signage




Television





Teams & Presentation

Use the Yealink touch panel in the cupboard under the bench to conduct Teams calls.

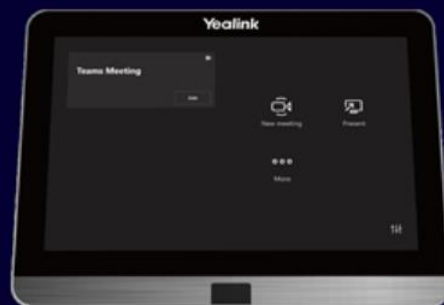

Use the home button at the top of the screen to change the system mode.



Signage

Digital signage content is currently displaying on the screens.

Use the home button at the top of the screen to change the system mode.



Television

Television content is currently displaying on the screens.



Use the home button at the top of the screen to change the system mode.



Television Keypad

Use the keypad to display the desired channel.

1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Settings



1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Settings



1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Settings

Pincode Rejected

1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Scheduling

Adjust power scheduling and startup mode.

Scheduling

Startup Time



7:00



Shutdown Time



19:00



Power Scheduled Days

Monday

Friday

Tuesday

Saturday

Wednesday

Sunday

Thursday

Startup Mode

Teams

Signage

Television

Use the home button at the top of the screen to change the system mode.



Television Mode Selection

Set the Television channel to be displayed when the system starts up.

Current Startup Channel: 123

<preset>	<preset>	<preset>	1	2	3
<preset>	<preset>	<preset>	4	5	6
<preset>	<preset>	<preset>	7	8	9
<preset>	<preset>	<preset>	0	Clear	

Use the home button at the top of the screen to change the system mode.



Microphone Settings

Adjust local microphone reinforcement levels.

Mic Volume

Lapel

Handheld



Use the home button at the top of the screen to change the system mode.



Pincode Change

Current Pincode: 1234

New Pincode: 7777

1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.



Pincode Change

Pincode Changed

1	2	3
4	5	6
7	8	9
0	Clear	

Use the home button at the top of the screen to change the system mode.

System Shutdown

Are you sure you want to turn off the AV?
It will automatically turn off in:

7

seconds

Cancel

Development Notes

- Development based on J23NA023-AVSPEC ROOMS-REV_04
 - And Concept AV GUI Storyboard REV_01 (REVIEWED KONN 231117).pdf
- Specification description of Multipurpose & Atelier is considered to have been superseded by section 4.1 of the above document
- Faders set to minimum will also be muted to prevent unusable 'quiet zones' in fader ranges
- Design artifacts such as green plus icons on buttons, partially filled gauges/sliders, selection borders, etc. are from the design software and will not appear in final product
- Signage content to be provided by others
- Channel preset preferences for Multipurpose TV function to be provided; appropriate logos etc will be used for the buttons