



Locating the Product Date Code

Consumer Products

Timers

ISA Series

The ISA Series date code is located inside the lower panel, to the right of the fuse, above the station wiring terminals.

ISB-409

The date code for the ISB-409 is located on a sticker on the back of the unit.

PC-506

The PC-506 date code is located on the back of the unit toward the bottom, above the place of manufacture.

ESP-LX+

The date code on the ESP-LX+ is located on the back of the front panel assembly, in the lower left corner.

E-Class Series

The E-Class series date code is located on the bottom of the case, to the right of where the wires come out.

Valves

APAS

The date code on the APAS is stamped on the inlet (piston/solenoid) side of the valve body.

CP/CPF Series

The CP/CPF date code is stamped on the top of the side of the bonnet nearest to the valve inlet.

ASVF

The ASVF date code is stamped on the top of the side of the bonnet nearest to the valve inlet.

Rotors

Maxi-Paw and Mini-Paw

The date code for impact rotors is located in two places. One is located on the body of the impact opposite the side of the rear trip. Another date code is located on the top of the case.

R-50

The R-50 date code is located on the top of the turret.

T-Bird

The T-Bird date code is located on the top of the turret.

32SA / 42SA

To access the date code for the 32SA and 42SA, first unscrew the internal mechanism from the canister. The date code is located at the bottom of the internal mechanism, along the saw-toothed rim.

Spray Heads

Sure Pop Series

There is no date code on the Sure-Pop spray heads. Date of purchase must be establish with the customer's receipt.

1800 Series

Date codes are located on both the cap and the body. Both pieces employ a different date code system. The date code includes the year and the first month of the quarter each enclosed in a circle. It does not include the actual date or month.

Quarter Code

- 1 A
- 2 D
- 3 G
- 4 K

Caps

On spray head caps, the date code is located on top of the cap. The year is to the right of '**1800**' and the quarter is to the left.

Body

The date code is located on body on the backside of the inlet directly above '**USE NO PIPE DOPE**' or on the bottom inlet outside of the threads following the '**USE NO PIPE DOPE**'.