

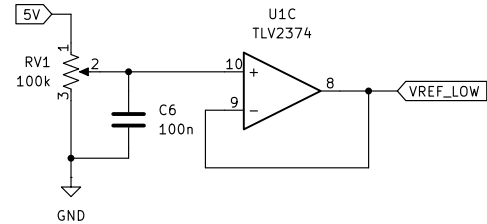



Trim to just above the maximum value of the oscillator output

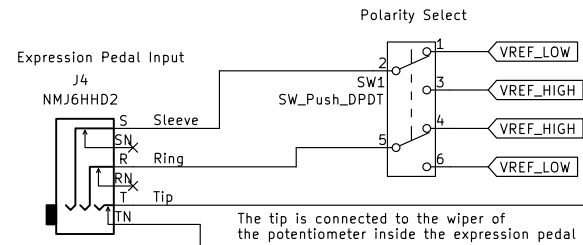

Trim to just below the minimum value of the oscillator output

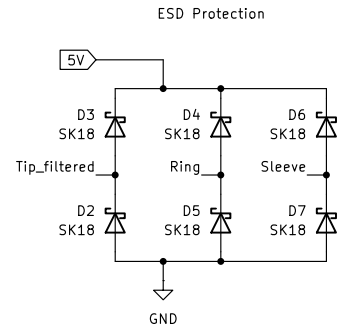


 The tip is connected to the wiper of the potentiometer inside the expression pedal







Manual duty cycle control when no expression pedal is plugged in.

Enable/disable extra capacitance to limit motor acceleration

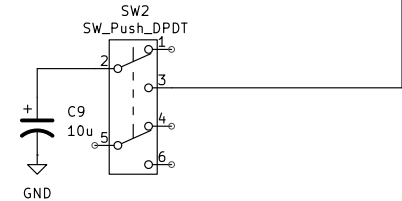

Indicators

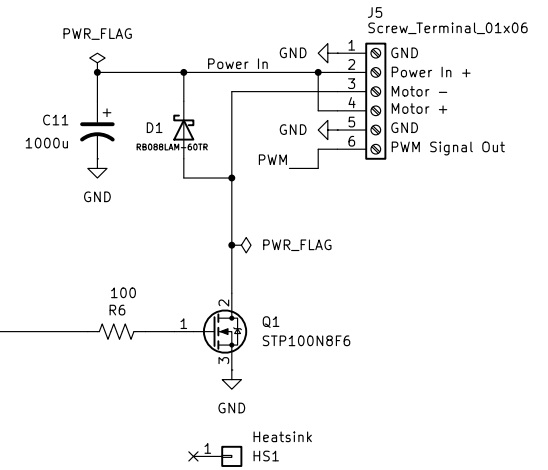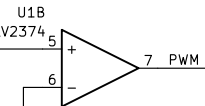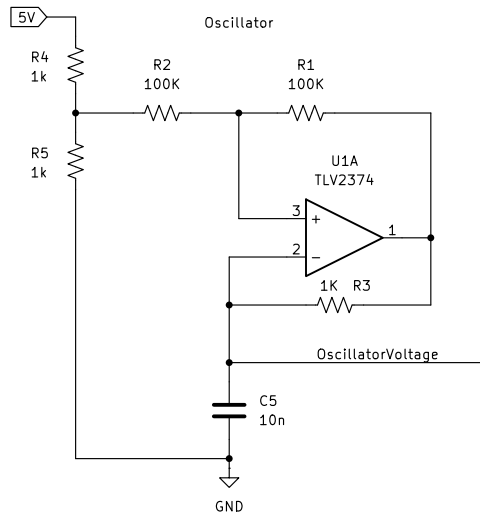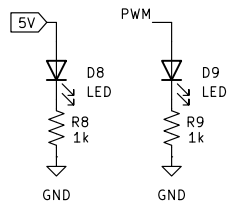

Heatsink HS1