



C01	Interface → Defaults → USB VCP
BC1	Code options → Readable codes → Enable a single code only → QR Code only
W0	Indicator options → Buzzer settings → Buzzer → Disable buzzer
GC	Indicator options → Buzzer settings → Startup buzzer → Enable startup buzzer
DFB	Miscellaneous → Menulabel reading → ZZ menu code reading
Q0	Internal trigger
Q0	Disable
D1Z	Miscellaneous → Menulabel reading → 2D multi menu barcodes → Disable 2D multi menu barcode
D3J	Read options → Illumination and aiming → Prevent flickering → Give priority to LCD display reading
EG2@Q0	Indicator options → Good read LED → LED Color (on good read)
Q0	RED 0%
Q3	GREEN 100%
Q0	BLUE 0%
XTI	Indicator options → Good read LED → Duration → 0.5 sec
EG2@Q1	Indicator options → Good read LED → LED Color (on no read)
Q3	RED 100%
Q0	GREEN 0%
Q0	BLUE 0%
EG2@Q2	Indicator options → Good read LED → LED Color (when installing on cradle)
Q0	RED 0%
Q0	GREEN 0%
Q1	BLUE 20%