



C01	Interface → Defaults → USB VCP
BC1	Code options → Readable codes → Enable a single code only → QR Code only
DFB	Miscellaneous → Menulabel reading → ZZ menu code reading
Q0	Internal trigger
Q0	Disable
D1Z	Miscellaneous → Menulabel reading → 2D multi menu barcodes → Disable 2D multi menu barcode
D3J	Read options → Illumination and aiming → Prevent flickering → Give priority to LCD display reading