


AUD is ENVELOPE on new sound sensor

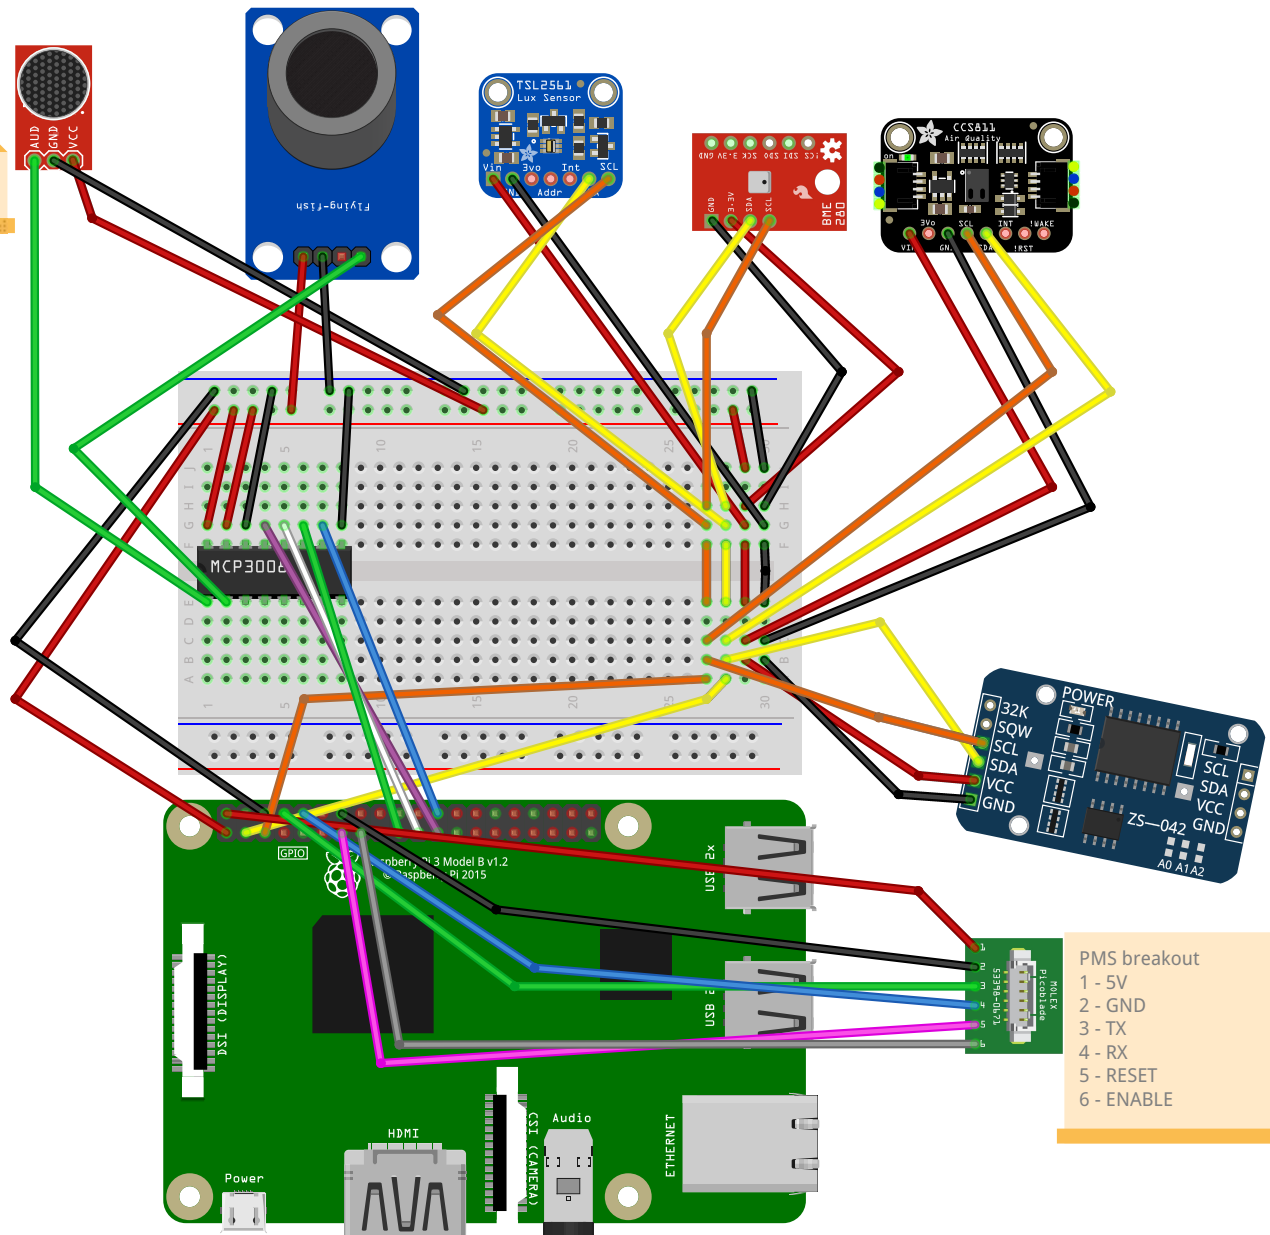

PMS breakout
1 - 5V
2 - GND
3 - TX
4 - RX
5 - RESET
6 - ENABLE