

FXTH87xx11 and FXTH87xx12 Embedded Firmware User Guide

1 Introduction

This document describes the embedded firmware found in all derivatives of the FXTH87xx11 and FXTH87xx12 devices.

The intended audience for this document is firmware architects, developers, coders and/or testers working with the FXTH87xx11 and FXTH87xx12 devices.

This document is divided into three sections: This introduction, a section describing global variables and standard formats used throughout the functions, and a third section describing each function.

Contents

1	Introduction	1
2	Globals and formats	1
2.1	Global variables	1
2.2	Measurement error format	3
2.3	Universal Uncompensated Measurement Array (UUMA) format	6
2.4	Simulated SPI interface Signal Format	6
2.5	Rapid Decompression Event Array (T_RDE) Format	7
2.6	LFR registers initialized by firmware	8
3	Firmware Functions	10
3.1	Firmware jump table	10
3.2	Function description	11

2 Globals and formats

2.1 Global variables

[Table 1](#) summarizes all global variables used by Freescale firmware and their locations. Developers must account for these variables when creating new user firmware.

Table 1. Global variables and their locations

Name	Address	Reference
TPMS_CONT_ACCEL_GLOBAL_VARIABLE	\$8E	Section 2.1.2
TPMS_INTERRUPT_FLAG	\$8F	Section 2.1.1

2.1.1 TPMS_INTERRUPT_FLAG

This global variable keeps track of interrupts that have occurred. FXTH87xx11 and FXTH87xx12 Embedded Firmware uses it to keep track of expected interrupts. It can also be utilized by the user for its own purposes.

The TPMS_INTERRUPT_FLAG is not cleared automatically. Users *must* clear this variable after power-on-reset.

[Table 2](#) shows the TPMS_INTERRUPT_FLAG format. The trigger condition column describes what is necessary for that flag to be set.

Table 2. TPMS_INTERRUPT_FLAG format and trigger conditions

Flag	BIT	Trigger condition
LVD Interrupt	7	LVD interrupt entered.
PWU Interrupt	6	PWU interrupt entered.
TOF Interrupt	5	TOF interrupt entered.
LFR Error Interrupt	4	LFR interrupt entered and LFERF bit of the LFS register is set.
ADC Interrupt	3	ADC interrupt entered.
LFR Interrupt	2	LFR interrupt entered and LFERF bit of the LFS register is clear.
RTI Interrupt	1	RTI interrupt entered.
KBI Interrupt	0	KBI interrupt entered.

TPMS_INTERRUPT_FLAG is 1 byte long and is located at address \$8F. Users must account for this variable when developing for the FXTH87xx11 and FXTH87xx12.

2.1.2 TPMS_CONT_ACCEL_GLOBAL_VARIABLE

TPMS_CONT_ACCEL_GLOBAL_VARIABLE is 1 byte long and is located at address \$8E. Users must account for this variable when developing for the FXTH87xx11 and FXTH87xx12, and can ignore the contents of said variable as long as it is not overwritten. It is used internally by the TPMS_READ_ACCEL family of functions and its purpose is to communicate the next measurement's sampling rate when the *u8Avg* argument is set to a value greater than 2.

2.2 Measurement error format

2.2.1 Definition of Signal Ranges

Each measured parameter (pressure, voltage, temperature, and acceleration) results from an ADC conversion of an analog signal. This ADC result may then be passed by the firmware to the application software as either the raw ADC result or further compensated and scaled for an output between one and the maximum digital value minus one. The minimum digital value of zero and the maximum digital value are reserved as error codes.

The signal ranges and their significant data points are shown in [Figure 1](#). In this definition the signal source would normally output a signal between S_{INLO} and S_{INHI} . Due to process, temperature and voltage variations this signal may increase its range to S_{INMIN} to S_{INMAX} . In all cases the signal will be between the supply rails, so that the ADC will convert it to a range of digital numbers between 0 and 1023 (or 0 and 4095 in the case of temperature readings). These digital numbers will have corresponding D_{INMIN} , D_{INLO} , D_{INHI} , D_{INMAX} values. The ADC digital value is taken by the firmware and compensated and scaled to give the required output code range.

Digital input values below D_{INMIN} and above D_{INMAX} are immediately flagged as being out of range and generate error bits and the output is forced to the corresponding railed-high or railed-low values.

Digital values below D_{INLO} (but above D_{INMIN}) or above D_{INHI} (but not D_{INMAX}) will most likely cause an output that would be less than 1 or greater than 510, respectively. These cases are considered underflow or overflow, respectively. Underflow results will be forced to a value of 1. Overflow results will be forced to a value of 510.

Digital values between D_{INLO} and D_{INHI} will normally produce an output between 1 to 510 (for a 9-bit result). In some isolated cases due to compensation calculations and rounding the result may be less than 1 or greater than 510, in which case the underflow and overflow rule mentioned above is used.

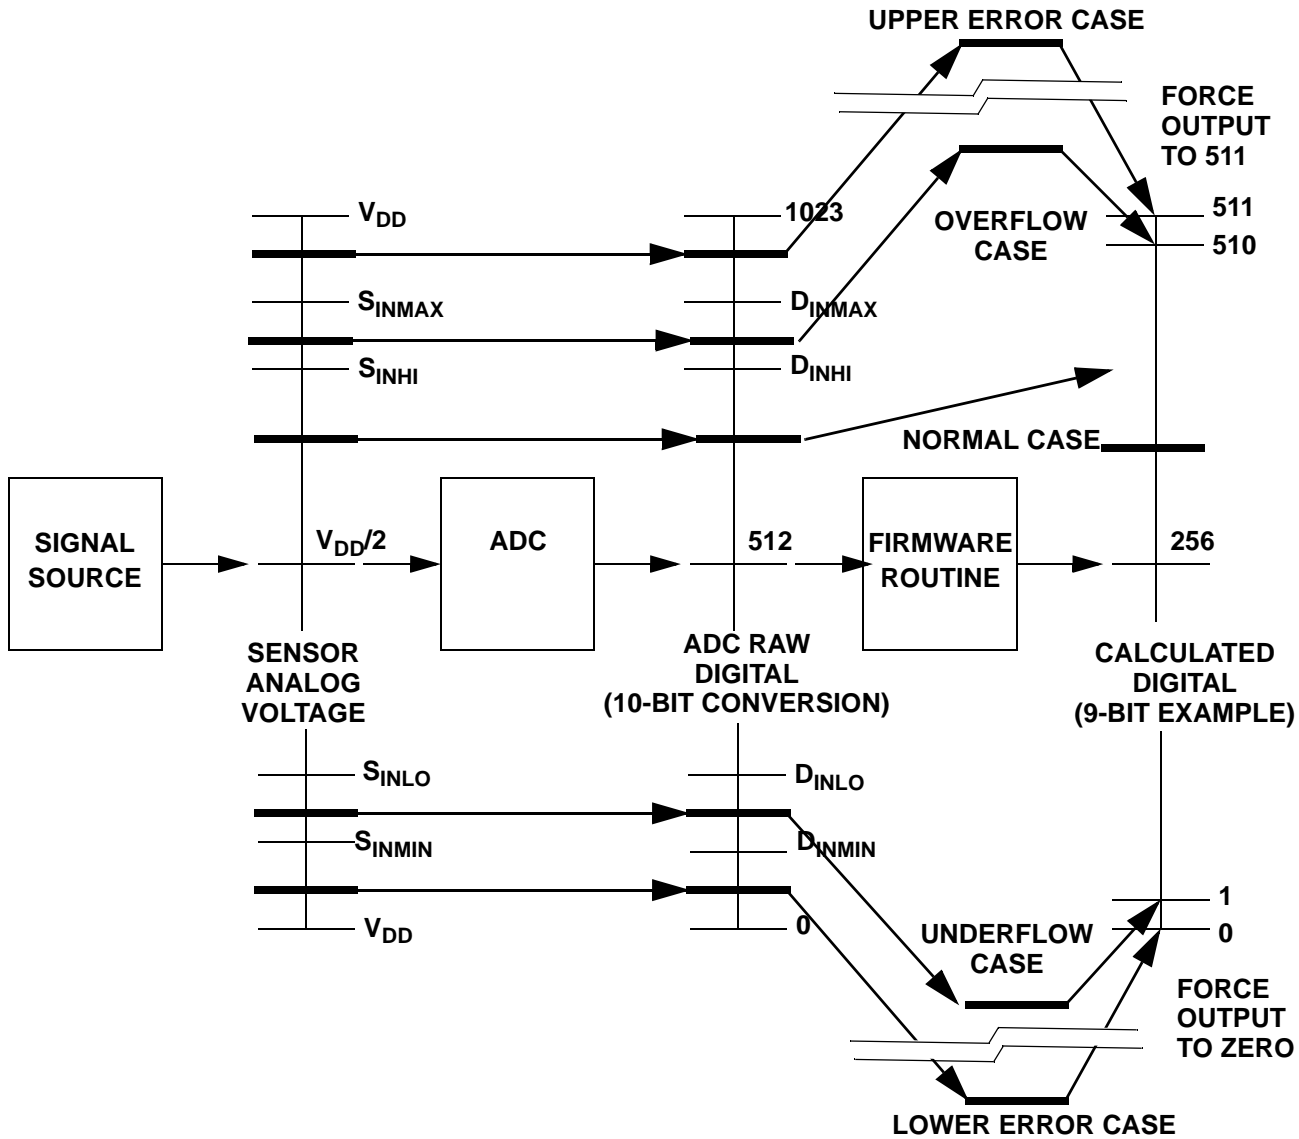


Figure 1. Measurement Signal Range Definitions

2.2.2 Error Status Format

FXTH87xx11 and FXTH87xx12 Embedded Firmware functions that return a status byte commonly do so using the error fields described in [Table 3](#).

Table 3. Error Status Fields

Field	Description
BIT7 - ADCERR	ADC Error - This status bit indicates an error was detected when performing an ADC test within the TPMS_WIRE_AND_ADC_CHECK routine. 0 ADC operating as expected. 1 ADC returned unexpected reading.
BIT6 - TERR	Temperature Measurement Error - This status bit indicates an error was detected by a ADC reading of the temperature sensor that is outside of the normally accepted range. 0 Temperature error not detected in last firmware subroutine call. 1 Temperature error detected in last firmware subroutine call.
BIT5 - VERR	Voltage Measurement Error - This status bit indicates an error was detected by a ADC reading of the voltage reference that is outside of the normally accepted range. 0 Voltage error not detected in last firmware subroutine call. 1 Voltage error detected in last firmware subroutine call.
BIT4 - AZERR	Z-Axis Accelerometer Measurement Error (if applicable) - This status bit indicates an error was detected by a bonding wire failure to the g-cell or a ADC reading of the Z-axis accelerometer that is outside of the normally accepted range. 0 Acceleration error not detected in last firmware subroutine call. 1 Acceleration error detected in last firmware subroutine call.
BIT3 - AXERR	X- Axis Accelerometer Measurement Error (if applicable) - This status bit indicates an error was detected by a bonding wire failure to the g-cell or a ADC reading of the X-axis accelerometer that is outside of the normally accepted range. 0 Acceleration error not detected in last firmware subroutine call. 1 Acceleration error detected in last firmware subroutine call.
BIT2 - PERR	Pressure Measurement Error - This status bit indicates an error was detected by a parity fault in the P-Chip trim, bonding wire failure to the P-Chip or a ADC reading of the pressure that is outside of the normally accepted range. 0 Pressure error not detected in last firmware subroutine call. 1 Pressure error detected in last firmware subroutine call.
BIT1 - BONDERR	Bond Wire Error - This status bit indicates an error was detected in any of the bond wire checks of the g-cell or P-cell. 0 Bond wire error not detected in last firmware subroutine call. 1 Bond wire error detected in last firmware subroutine call
BIT0 - OVFLOW	Calculation Overflow/Underflow - This status bit indicates that a compensated measurement of pressure, temperature, voltage or acceleration resulted in a digital output code outside of the expected range. The output value will be clipped to the nearest highest or lowest allowed value and the status bit will be set. 0 Overflow/underflow not detected in last firmware subroutine call. 1 Overflow/underflow detected in last firmware subroutine call.

2.3 Universal Uncompensated Measurement Array (UUMA) format

The FXTH87xx11 and FXTH87xx12's measurement routines are divided into two subsets: routines that return uncompensated measurements, and routines that take uncompensated measurements as arguments and return compensated measurements.

In order to be consistent and keep the number of CPU cycles down, all uncompensated measurement routines will return data following the array format described in [Table 4](#), and all compensating routines will take data from the same array.

Table 4. Universal Uncompensated Measurement Array

Index	Content
0	Uncompensated Voltage
1	Uncompensated Temperature
2	Uncompensated Pressure
3	Uncompensated X-Axis Acceleration
4	Uncompensated Z-Axis Acceleration

This array is referred to as Universal Uncompensated Measurement Array (UUMA). It can be located anywhere the user decides.

Each element must be 16-bits long (two bytes) regardless of what the actual bit-width of the measurement is.

Each individual uncompensated measurement routine will only update its corresponding item. For example, calling the TPMS_READ_VOLTAGE routine will only modify the voltage element of the array. The rest will remain unchanged.

Compensation routines do not modify any elements in the UUMA.

2.4 Simulated SPI interface Signal Format

The FXTH87xx11 and FXTH87xx12 include three routines (TPMS_MSG_INIT, TPMS_MSG_READ and TPMS_MSG_WRITE) that, when used together, allow the user to perform serial communication with the device through a simulated SPI interface.

The following assumptions are made:

- Only two pins are used: PTA0 for data (both incoming and outgoing) and PTA1 for clock. No slave select is included by default, but the user may use any other pin if required.
- The data pin has a pull-up resistor enabled.
- The FXTH87xx11 and FXTH87xx12 will be a master device (the FXTH87xx11 and FXTH87xx12 will provide the clock).
- Data can be read/written 8-bits at a time.
- Speed of the interface is dependant on bus clock settings.
- Data is transferred MSB first.

- A single line will be used for both sending and receiving data (BIDIROE = SET according to Freescale nomenclature).
 - At the clock's rising edge, the master will place data on the pin. It will be valid until the clock's falling edge. The slave must not drive the line during this period.
 - At the clock's falling edge, the master will make the data pin an input and will “listen” for data. The slave must then place data on the data line until the clock's rising edge.
- Clock Polarity = 0 (Normally low).
- Clock Phase = 1 (First half is high).

Figure 2 shows the details of the simulated SPI interface.

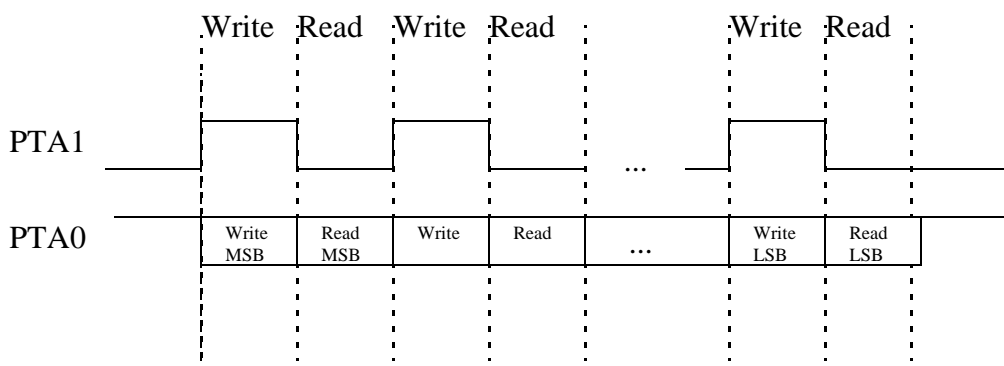


Figure 2. Description of the physical layer on the FXTH87xx11 and FXTH87xx12 Simulated SPI interface

For further information on the use of the Simulated SPI interface routines, refer to [Section 3.2.30](#), [Section 3.2.31](#), and [Section 3.2.32](#).

2.5 Rapid Decompression Event Array (T_RDE) Format

The FXTH87xx11 and FXTH87xx12 includes a routine called TPMS_RDE_ADJUST_PRESSURE that requires a pointer to an array of elements using a custom format called T_RDE. Said format is easily manageable using a *typedef* instruction as shown in [Example 1](#).

Example 1. Sample typedef for a T_RDE array

```
typedef struct
{
    UINT16 u16CompPress;      /* I/O 9-bit Compensated pressure reading */
    UINT8  u8ElapsedTime;     /* I Elapsed time from previous reading */
    UINT16 u16WAvg;           /* O Weighed average for running pressure */
    UINT8  u8PRes;            /* O 8-bit pressure reserve value */
    UINT8  u8PMin;            /* O 8-bit minimum pressure value */
    UINT8  u8RDEStatusFlags;  /* O Contains flags for Plock and RDE Event */
    UINT16 u16RDEBailTimeOut; /* O Seconds to 60 mins bail-out */
    UINT8  u8RDETimeToAvg;    /* O Seconds to next averaging event */
} T_RDE;
```

Globals and formats

As shown by the comments, only the `u16CompPress` and `u8ElapsedTime` elements of this array should be edited by the user; the rest will be updated by the `TPMS_RDE_ADJUST_PRESSURE` function.

In order for `TPMS_RDE_ADJUST_PRESSURE` to work correctly, the `T_RDE` variable must be declared as a global and must reside in an NVM location.

For more information on `TPMS_RDE_ADJUST_PRESSURE`, refer to [Section 3.2.47](#).

2.6 LFR registers initialized by firmware

Some LFR registers are touched by firmware when taking the reset vector and before giving control to the user. The goal of this action is to configure the LFR module in the best-known configuration for Manchester-encoded reception.

LFR registers will be configured differently depending on the user-selected sensitivity. [Table 5](#) and [Table 6](#) describe these settings.

Table 5. Customer-configurable TPMS7 LF Registers with SENS = 1

Page-0	Bit name							
Register name	7	6	5	4	3	2	1	0
LFCTL1	LFEN	SRES	CARMOD	PAGE	IDSEL		SENS	
LFCTL2	LFSTM				LFONTM			
LFCTL3	LFDO	TOGMOD	SYNC		LFCDTM			
LFCTL4	LFDRIE	LFERIE	LFCDIE	LFIDIE	DECEN	VALEN	TIMOUT	
LFS	LFDRF	LFERF	LFCDF	LFIDF	LFOVF	LFEOMF	LPSM	LFIK
LFDATA	RXDATA							
LFIDL	ID7	ID6	ID5	ID4	ID3	ID2	ID1	ID0
LFIDH	ID15	ID14	ID13	ID12	ID11	ID10	ID9	ID8

Page-1	Bit name							
Register name	7	6	5	4	3	2	1	0
LFCTL1	LFEN	SRES	CARMOD	PAGE	IDSEL		SENS = 1	
LFCTRLE	—	—	—	—	—	0	0	0
LFCTRLD	1	0	DEQS	1	1	1	0	0
LFCTRLC	0	0	0	1	AZEN	LOWQ		DEQEN
LFCTRLB	1	1	LFFAF	LFCAF	LFPOL	1	1	0
LFCTRLA	—	—	—	—	LFCC			
TRIM1	—	—	—	—	—	—	—	—
TRIM2	—	—	—	—	—	—	—	—

Shaded cells show register touched by firmware; loaded value is displayed.

Table 6. Customer-configurable TMPS and LF Register with SENS = 2

Page-0	Bit name							
Register name	7	6	5	4	3	2	1	0
LFCTL1	LFEN	SRES	CARMOD	PAGE	IDSEL		SENS	
LFCTL2	LFSTM				LFONTM			
LFCTL3	LFDO	TOGMOD	SYNC		LFCDTM			
LFCTL4	LFDRIE	LFERIE	LFCDIE	LFIDIE	DECEN	VALEN	TIMOUT	
LFS	LFDRF	LFERF	LFCDF	LFIDF	LFOVF	LFEOMF	LPSM	LFIK
LFDATA	RXDATA							
LFIDL	ID7	ID6	ID5	ID4	ID3	ID2	ID1	ID0
LFIDH	ID15	ID14	ID13	ID12	ID11	ID10	ID9	ID8

Page-1	Bit name							
Register name	7	6	5	4	3	2	1	0
LFCTL1	LFEN	SRES	CARMOD	PAGE	IDSEL		SENS = 2	
LFCTRLE	—	—	—	—	—	0	0	0
LFCTRLD	1	0	DEQS	1	1	1	0	0
LFCTRLC	0	0	0	1	AZEN	LOWQ		DEQEN
LFCTRLB	1	1	LFFAF	LFCAF	LPOL	1	1	0
LFCTRLA	—	—	—	—	LFCC			
TRIM1	—	—	—	—	—	—	—	—
TRIM2	—	—	—	—	—	—	—	—

Shaded cells show register touched by firmware; loaded value is displayed.

3 Firmware Functions

3.1 Firmware jump table

The FXTH87xx11 and FXTH87xx12 devices contain an embedded firmware function jump table to allow programmers to reference any function through a function pointer to an absolute address. This helps isolate Freescale firmware from the user's application. [Table 7](#) shows a list of all firmware functions and their address.

For a description of how to implement pointers to fixed addresses using the C language, please refer to [Manual_Compiler_HC08.pdf](#) (part of the CodeWarrior package).

Table 7. FXTH87xx11 and FXTH87xx12's Firmware Function jump table

Absolute Address	Return type	Function
\$E000	void	TPMS_RESET
\$E003	UINT8	TPMS_READ_VOLTAGE
\$E006	UINT8	TPMS_COMP_VOLTAGE
\$E009	UINT8	TPMS_READ_TEMPERATURE
\$E00C	UINT8	TPMS_COMP_TEMPERATURE
\$E00F	UINT8	TPMS_READ_PRESSURE
\$E012	UINT8	TPMS_COMP_PRESSURE
\$E015	UINT8	TPMS_READ_ACCELERATION_X
\$E018	UINT8	TPMS_READ_DYNAMIC_ACCEL_X
\$E01B	UINT8	TPMS_COMP_ACCELERATION_X
\$E01E	UINT8	TPMS_READ_ACCELERATION_Z
\$E021	UINT8	TPMS_READ_DYNAMIC_ACCEL_Z
\$E024	UINT8	TPMS_COMP_ACCELERATION_Z
\$E027	UINT8	TPMS_READ_ACCELERATION_XZ
\$E02A	UINT8	TPMS_READ_DYNAMIC_ACCEL_XZ
\$E02D	UINT8	TPMS_COMP_ACCELERATION_XZ
\$E030	UINT8	TPMS_READ_V0
\$E033	UINT8	TPMS_READ_V1
\$E036	UINT8	TPMS_LFOCAL
\$E039	UINT8	TPMS_MFOCAL
\$E03C	void	TPMS_RF_ENABLE
\$E03F	void	TPMS_RF_RESET
\$E042	void	TPMS_RF_READ_DATA
\$E045	void	TPMS_RF_READ_DATA_REVERSE
\$E048	void	TPMS_RF_WRITE_DATA
\$E04B	void	TPMS_RF_WRITE_DATA_REVERSE
\$E04E	void	TPMS_RF_CONFIG_DATA
\$E051	—	Reserved
\$E054	void	TPMS_RF_SET_TX

Table 7. FXTH87xx11 and FXTH87xx12's Firmware Function jump table (continued)

Absolute Address	Return type	Function
\$E057	void	TPMS_RF_DYNAMIC_POWER
\$E05A	void	TPMS_MSG_INIT
\$E05D	UINT8	TPMS_MSG_READ
\$E060	UINT8	TPMS_MSG_WRITE
\$E063	UINT8	TPMS_CHECKSUM_XOR
\$E066	UINT8	TPMS_CRC8
\$E069	UINT16	TPMS_CRC16
\$E06C	UINT16	TPMS_SQUARE_ROOT
\$E06F	void	TPMS_READ_ID
\$E072	void	TPMS_LF_ENABLE
\$E075	UINT8	TPMS_LF_READ_DATA
\$E078	UINT8	TPMS_WIRE_AND_ADC_CHECK
\$E07B	void	TPMS_FLASH_WRITE
\$E07E	UINT16	TPMS_FLASH_CHECK
\$E081	UINT8	TPMS_FLASH_ERASE
\$E084	UINT8	TPMS_FLASH_PROTECTION
\$E087	—	Reserved
\$E08A	void	TPMS_MULT_SIGN_INT16
\$E08D	UINT16	TPMS_WAVG
\$E090	UINT8	TPMS_RDE_ADJUST_PRESSURE

3.2 Function description

The following function descriptions include stack sizes and approximate duration.

Stack sizes have been calculated by executing each routine and measuring the amount of memory utilized. Unless noted, they represent the maximum stack the function will utilize.

Duration estimates are performed on one part at room temperature. They are intended to serve as a guideline for typical execution time.

3.2.1 void TPMS_RESET(void)

- **Description:** This function is called when taking the reset vector. It will reset the Stack Pointer to the last RAM location and jump to the location stored by the user in \$DFFE:DFFF. No further initialization is performed.
- **Stack size:** 3 bytes
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await interrupts. It is not affected by interrupts either.
- **Resources:** Stack

- **Input Parameters:**
 - None
- **Returns:**
 - void

3.2.2 UINT8 TPMS_READ_VOLTAGE(UINT16 *u16UUMA)

- **Description:** Performs a 10-bit uncompensated voltage measurement and places it in the UUMA. While waiting for the ADC to converge, this function goes into STOP4. If the ADC, for an unexpected reason, fails to converge, this function has a built-in time-out: After five continuous non-ADC interrupts, the function will assume a failed ADC reading, flag it accordingly, and exit.
 - If the ADC value is over or under the normal operating condition, the “voltage error” status flag will be set. The expected voltage result will be forced to either “0” or “1023.” (rail high or rail low).
 - If the ADC times out with no result, the “ADC error” status flag will be set.
 - Measurements below 2.1 V are not guaranteed for accuracy.
- **Stack size:** 22 bytes
- **Approx. Duration:** 102 usec
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** ADC, bandgap.
- **Input Parameters:**
 - UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Only the 10-bit uncompensated voltage result will be updated.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 8](#).

Table 8. Valid output conditions for TPMS_READ_VOLTAGE

u8Status Value	Measurement Value	Condition
\$20	\$03FF	Uncompensated voltage reading outside of valid range (high).
\$20	\$0000	Uncompensated voltage reading outside of valid range (low).
\$80	Undefined	Uncompensated voltage reading not acquired.
\$00	Between \$0001 - \$03FE	Valid uncompensated voltage reading.

WARNING

The Bandgap bit (BIT0 in the SPMSC1 register) must be set prior to calling this function for results to be valid.

3.2.3 UINT8 TPMS_COMP_VOLTAGE(UINT8 *u8CompVoltage, *UINT16 u16UUMA)

- **Description:** Performs an 8-bit compensated voltage measurement. It is the user's responsibility to ensure that updated and valid uncompensated voltage reading is available in the UUMA for this routine to return a meaningful value.
 - If $V_{out} < 2.1$ V, u8Voltage will be 1 and the “over/underflow” status flag will be set.
 - Measurements below 2.1 V are not guaranteed for accuracy.
 - If $V_{out} \geq 3.7$ V, result will be \$FE and the “over/underflow” status flag will be set.
 - For repeatability data, refer to the FXTH87xxxx family of data sheets.
- **Stack size:** 31 bytes
- **Approx. Duration:** 204 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await interrupts. It is not affected by interrupts either.
- **Resources:** UUMA
- **Input Parameters:**
 - UINT8 *u8Voltage: Updated 8-bit compensated voltage result.
 - UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Uncompensated voltage will be utilized from this array.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 9](#).

Table 9. Valid output conditions for TPMS_COMP_VOLTAGE

u8Status Value	Measurement Value	Condition
\$01	\$FE	Compensated voltage reading outside of valid range (high).
\$01	\$01	Compensated voltage reading outside of valid range (low).
\$00	Between \$01 - \$FE	Valid compensated voltage reading.

3.2.4 UINT8 TPMS_READ_TEMPERATURE(UINT16 *u16UUMA)

- **Description:** Performs a 12-bit uncompensated temperature measurement and places it in the UUMA. While waiting for the ADC to converge, this function goes into STOP4. If the ADC, for an unexpected reason, fails to converge, this function has a built-in time-out: After five continuous non-ADC interrupts, the function will assume a failed ADC reading, flag it accordingly, and exit.
 - If the ADC value is over or under the normal operating condition, the “temperature error” status flag will be set. The expected temperature result will be forced to either “0” or “4095.” (rail high or rail low). If the LVWF (Low Voltage Warning Flag) hardware bit is set, it will flag it accordingly as well.

- If the ADC value is over or under the normal operating condition, the “temperature error” status flag will be set. The expected temperature result will be forced to either “0” or “4095.” (rail high or rail low).
- If the ADC times out with no result, the “ADC error” status flag will be set.
- **Stack size:** 17 bytes
- **Approx. Duration:** 219 usec
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** ADC, bandgap.
- **Input Parameters:**
 - **UINT16 *u16UUMA:** Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Only the 12-bit uncompensated temperature result will be updated.
- **Returns:** **UINT8 u8Status:** Valid error flags/outputs are described in [Table 10](#).

Table 10. Valid output conditions for TPMS_READ_TEMPERATURE

u8Status Value	Measurement Value	Condition
\$40	\$0FFF	Uncompensated temperature reading outside of valid range (high).
\$40	\$0000	Uncompensated temperature reading outside of valid range (low).
\$60	\$0FFF	Uncompensated temperature reading outside of valid range (high), and LVWF set.
\$60	\$0000	Uncompensated temperature reading outside of valid range (low), and LVWF set.
\$80	Undefined	Uncompensated temperature reading not acquired.
\$A0	Undefined	Uncompensated temperature reading not acquired, and LVWF set.
\$00	Between \$0001 - \$0FFE	Valid uncompensated temperature reading.
\$20	Between \$0001 - \$0FFE	Valid uncompensated temperature reading, LVWF set.

WARNING

The Bandgap bit (BIT0 in the SPMSC1 register) must be set prior to calling this function for results to be valid.

3.2.5 UINT8 TPMS_COMP_TEMPERATURE(UINT8 *u8Temp, UINT16 *u16UUMA)

- **Description:** Performs an 8-bit compensated temperature measurement. It is the user's responsibility to ensure that updated and valid uncompensated temperature reading is available in the UUMA for this routine to return a meaningful value.
 - If Tout < -40°C, u8Temp will be 1 and the “over/underflow” status flag will be set.
 - If Tout ≥ 200°C, u8Temp will be \$FE and the “over/underflow” status flag will be set.
- **Stack size:** 30 bytes.
- **Approx. Duration:** 231 usec.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await interrupts. It is not affected by interrupts either.
- **Resources:** UUMA
- **Input Parameters:**
 - UINT8 *u8Temp: Updated 8-bit compensated temperature result.
 - UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Uncompensated temperature will be utilized from this array.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 11](#).

Table 11. Valid output conditions for TPMS_COMP_TEMPERATURE

u8Status Value	Measurement Value	Condition
\$01	\$FE	Compensated temperature reading outside of valid range (high).
\$01	\$01	Compensated temperature reading outside of valid range (low).
\$00	Between \$01 - \$FE	Valid compensated temperature reading.

3.2.6 UINT8 TPMS_READ_PRESSURE(UINT16 *u16UUMA, UINT8 u8Avg)

- **Description:** Performs an 10-bit uncompensated pressure measurement and places it in the UUMA. While waiting for the ADC to converge, this function goes into STOP4. If the ADC, for an unexpected reason, fails to converge, this function has a built-in time-out: After five continuous non-ADC interrupts, the function will assume a failed ADC reading, flag it accordingly, and exit. If the LVWF (Low Voltage Warning Flag) hardware bit is set, it will flag it accordingly as well.
 - If the ADC value is over or under the normal operating condition, the “pressure error” status flag will be set. The expected pressure result will be forced to either “0” or “1023.” (rail high or rail low).
 - If the ADC times out with no result, the “ADC error” status flag will be set.
- **Stack size:** 26 bytes
- **Approx. Duration:** 2872 usec (avg of 1); 10670 usec (avg of 4).

- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** SMI, ADC, internal bond wires.
- **Input Parameters:**
 - `UINT16 *u16UUMA`: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Only the 10-bit uncompensated pressure result will be updated.
 - `UINT8 u8Avg`: Number of measurements to average into one result. The value can be set to 1, 2, 4, 8, or 16.
- **Returns:** `UINT8 u8Status`: Valid error flags/outputs are described in [Table 12](#).

Table 12. Valid output conditions for TPMS_READ_PRESSURE

u8Status Value	Measurement Value	Condition
\$04	\$03FF	Uncompensated pressure reading outside of valid range (high).
\$04	\$0000	Uncompensated pressure reading outside of valid range (low).
\$24	\$03FF	Uncompensated pressure reading outside of valid range (high), and LVWF set.
\$24	\$0000	Uncompensated pressure reading outside of valid range (low), and LVWF set.
\$80	\$0000	Uncompensated pressure reading not acquired
\$A0	\$0000	Uncompensated pressure reading not acquired, and LVWF set.
\$00	Between \$0001 - \$03FE	Valid uncompensated pressure reading.
\$00	Between \$0001 - \$03FF	Valid uncompensated pressure reading, and LVWF set.

3.2.7 **UINT8 TPMS_COMP_PRESSURE(UINT16 *u16CompPressure, UINT16 *u16UUMA)**

- **Description:** Performs an 9-bit compensated pressure measurement. It is the user's responsibility to ensure that updated and valid uncompensated voltage, temperature and pressure readings are available in the UUMA for this routine to return a meaningful value.
 - If either the temperature or supply voltage measurements inherent to this function result in a fault, the pressure reading will be forced to 0 and the appropriate pressure, temperature and/or voltage flags will be set in the status flag.
 - If $P_{out} < 100$ kPa, the “over/underflow” status flag will be set, and `u16CompPressure` will be forced to \$001.
 - If $P_{out} \geq 900$ kPa, `u16CompPressure` will be \$1FE and the “over/underflow” status flag will be set.
 - If the passed uncompensated voltage measurement is estimated to be under the guaranteed operational region, the routine will set the “Voltage” status flag. The accuracy of the returned value is not guaranteed.
 - For repeatability data, refer to the FXTH87xxxx family of data sheets.
- **Stack size:** 46 bytes

- **Approx. Duration:** 872 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await interrupts. It is not affected by interrupts either.
- **Resources:** UUMA.
- **Input Parameters:**
 - UINT16 *u16Pressure: Updated 9-bit compensated pressure result.
 - UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Uncompensated voltage, temperature and pressure will be taken from this array.
- **Returns:** UINT8 u8Status: Valid error flags/outputs are described in [Table 13](#).

Table 13. Valid output conditions for TPMS_COMP_PRESSURE

u8Status Value	Measurement Value	Condition
\$01	\$01FE	Compensated pressure reading outside of valid range (high).
\$01	\$0001	Compensated pressure reading outside of valid range (low).
\$21	\$01FE	Compensated pressure reading outside of valid range (high), and uncompensated voltage suspected to be below valid operating range for this function.
\$21	\$0001	Compensated pressure reading outside of valid range (low), and uncompensated voltage suspected to be under below operating range for this function.
\$20	Between \$0001 - \$01FE	Uncompensated voltage suspected to be below valid operating range for this function; The compensated reading is not guaranteed for accuracy.
\$00	Between \$0001 - \$01FE	Valid compensated pressure reading.

3.2.8 UINT8 TPMS_READ_ACCELERATION_X(UINT16 *u16UUMA, UINT8 u8Avg, UINT8 u8FiltSelect, UINT8 u8DynamicOffset)

- **Description:** Performs an uncompensated 10-bit measurement. While waiting for the ADC to converge, this function goes into STOP4. If the ADC, for an unexpected reason, fails to converge, this function has a built-in time-out: After five continuous non-ADC interrupts, the function will assume a failed ADC reading, flag it accordingly, and exit. If the LVWF (Low Voltage Warning Flag) hardware bit is set, it will flag it accordingly as well.
 - If the ADC value is over or under the normal operating condition, the “acceleration error” status flag will be set. The expected acceleration result will be forced to either “0” or “1023.” (rail high or rail low).
 - If the ADC times out with no result, the “ADC error” status flag will be set.
- **Stack size:** 31 bytes
- **Approx. Duration:** 2901 usec (500-Hz filter, 1 reading), 4255 usec (250-Hz filter, 1 reading).
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** SMI, ADC, internal bond wires.

- **Input Parameters:**

- UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Only the 10-bit uncompensated acceleration result will be updated.
- UINT8 u8Avg: Number of measurements to average into one result. The value can be set to 1, 2, 4, 8, or 16.
- UINT8 u8FiltSelect: If non-zero, 250-Hz filter enabled. Otherwise, 500-Hz filter selected.
- UINT8 u8DynamicOffset: Selects the offset setting for the appropriate acceleration reading. Default is 6.

Table 14. u8DynamicOffset valid values

Offset Index	Offset when result of function is 256 counts assuming stand trim. Span does not change.
0	-70 g
1	-60 g
2	-50 g
3	-40 g
4	-30 g
5	-20 g
6	-10 g
7	0 g (default)
8	10 g
9	20 g
10	30 g
11	40 g
12	50 g
13	60 g
14	70 g
15	80 g

- **Returns:**

- UINT8 u8Status: Valid error flags/outputs are described in [Table 15](#).

Table 15. Valid output conditions for TPMS_READ_ACCELERATION_X

u8Status Value	Measurement Value	Condition
\$08	\$03FF	Uncompensated acceleration reading outside of valid range (high).
\$08	\$0000	Uncompensated acceleration reading outside of valid range (low).
\$28	\$03FF	Uncompensated acceleration reading outside of valid range (high), and LVWF set.
\$28	\$0000	Uncompensated acceleration reading outside of valid range (low), and LVWF set.
\$80	\$0000	Uncompensated acceleration reading not acquired
\$A0	\$0000	Uncompensated acceleration reading not acquired, and LVWF set.
\$00	Between \$0001 - \$03FE	Valid uncompensated acceleration reading.
\$20	Between \$0001 - \$03FE	Valid uncompensated acceleration reading, but LVWF set

3.2.9 UINT8 TPMS_READ_DYNAMIC_ACCEL_X(UINT8 u8Filter, UINT8* u8Offset, UINT16* u16UUMA)

- **Description:** This function automatically executes a TPMS_READ_ACCELERATION_X measurement with a given initial dynamic offset. If the result is too high or too low, it will change the dynamic offset value and re-execute TPMS_READ_ACCELERATION_X until a) the result is valid or b) the result is railed high or low and there are no more offset steps. Offset and uncompensated acceleration inside the UUMA are updated.
- **Stack size:** 48 bytes
- **Approx. Duration:** 29065 usec from one extreme to the center; 2816 usec best case.
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** SMI, ADC, internal bond wires.
- **Input Parameters:**
 - UINT8 u8FiltSelect: If non-zero, 250-Hz filter enabled. Otherwise, 500-Hz filter selected.
 - UINT8* u8Offset: Pointer to initial offset level to load into SMI according to [Table 14](#). An updated offset value is returned at the end of the function. In case the acceleration is too high or too low and function has run out of offset steps, a value of 255 ("0 - 1") or 16 ("15 + 1") shall be returned.
 - UINT16* Pointer to the Universal Uncompensated Measurement Array. Uncompensated acceleration will be updated accordingly
- **Returns:**
 - UINT8 u8Status: Refer to TPMS_READ_ACCELERATION_X for more information on the format of this status byte.

3.2.10 UINT8 TPMS_COMP_ACCELERATION_X(UINT16 *u16CompAccelX, UINT16* u16UUMA)

- **Description:** Performs an 9-bit compensated acceleration measurement. It is the user's responsibility to ensure that updated and valid uncompensated voltage, temperature and acceleration readings are available in the UUMA for this routine to return a meaningful value.
 - If u16CompAccel rails low, u16CompAccel will be forced to 1 and the "over/underflow" status flag will be set.
 - If u16CompAccel rails high, u16CompAccel will be forced to \$1FE and the "over/underflow" status flag will be set.
 - If the passed uncompensated voltage measurement is estimated to be under the guaranteed operational region, the routine will set the "Voltage" status flag. The accuracy of the returned value is not guaranteed.
 - For repeatability data, refer to the FXTH87xxxx family of data sheets.
- **Stack size:** 55 bytes
- **Approx. Duration:** 955 usec

- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await interrupts. It is not affected by interrupts either.
- **Resources:** UUMA.
- **Input Parameters:**
 - UINT16 *u16AccelX: Updated 9-bit compensated acceleration.
 - UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Uncompensated voltage, temperature and X-axis acceleration will be taken from this array.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 16](#).

Table 16. Valid output conditions for TPMS_COMP_ACCELERATION_X

u8Status Value	Measurement Value	Condition
\$01	\$01FE	Compensated acceleration reading outside of valid range (high).
\$01	\$0001	Compensated acceleration reading outside of valid range (low).
\$21	\$01FE	Compensated pressure reading outside of valid range (high), and uncompensated voltage suspected to be below valid operating range for this function.
\$21	\$0001	Compensated pressure reading outside of valid range (low), and uncompensated voltage suspected to be under below operating range for this function.
\$20	Between \$0001 - \$01FE	Uncompensated voltage suspected to be below valid operating range for this function; The compensated reading is not guaranteed for accuracy.
\$00	Between \$0001 - \$01FE	Valid compensated acceleration reading.

3.2.11 UINT8 TPMS_READ_ACCELERATION_Z(UINT16 *u16UUMA, UINT8 u8Avg, UINT8 u8FiltSelect, UINT8 u8DynamicOffset)

- **Description:** Performs an uncompensated 10-bit measurement. While waiting for the ADC to converge, this function goes into STOP4. If the ADC, for an unexpected reason, fails to converge, this function has a built-in time-out: After five continuous non-ADC interrupts, the function will assume a failed ADC reading, flag it accordingly, and exit. If the LVWF (Low Voltage Warning Flag) hardware bit is set, it will flag it accordingly as well.
 - If the ADC value is over or under the normal operating condition, the “acceleration error” status flag will be set. The expected acceleration result will be forced to either “0” or “1023.” (rail high or rail low).
 - If the ADC times out with no result, the “ADC error” status flag will be set.
- **Stack size:** 31 bytes
- **Approx. Duration:** 2901 usec (500-Hz filter, 1 reading), 4255 usec (250-Hz filter, 1 reading).
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.

- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** SMI, ADC, internal bond wires.
- **Input Parameters:**
 - UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Only the 10-bit uncompensated acceleration result will be updated.
 - UINT8 u8Avg: Number of measurements to average into one result. The value can be set to 1, 2, 4, 8, or 16.
 - UINT8 u8FiltSelect: If non-zero, 250-Hz filter enabled. Otherwise, 500-Hz filter selected.
 - UINT8 u8DynamicOffset: Selects the offset setting for the appropriate acceleration reading. Valid range is 0 - 15. Refer to product specification for acceleration ranges for a given offset step.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 17](#).

Table 17. Valid output conditions for TPMS_READ_ACCELERATION_X

u8Status Value	Measurement Value	Condition
\$10	\$03FF	Uncompensated acceleration reading outside of valid range (high).
\$10	\$0000	Uncompensated acceleration reading outside of valid range (low).
\$30	\$03FF	Uncompensated acceleration reading outside of valid range (high), and LVWF set.
\$30	\$0000	Uncompensated acceleration reading outside of valid range (low), and LVWF set.
\$80	\$0000	Uncompensated acceleration reading not acquired.
\$A0	\$0000	Uncompensated acceleration reading not acquired, and LVWF set.
\$00	Between \$0001 - \$03FE	Valid uncompensated acceleration reading.
\$20	Between \$0001 - \$03FE	Valid uncompensated acceleration reading, but LVWF set.

3.2.12 UINT8 TPMS_READ_DYNAMIC_ACCEL_Z(UINT8 u8Filter, UINT8* u8Offset, UINT16* u16UUMA)

- **Description:** This function automatically executes a TPMS_READ_ACCELERATION_Z measurement with a given initial dynamic offset. If the result is too high or too low, it will change the dynamic offset value and re-execute TPMS_READ_ACCELERATION_Z until a) the result is valid or b) the result is railed high or low and there are no more offset steps. Offset and uncompensated acceleration inside the UUMA are updated.
- **Stack size:** 48 bytes
- **Approx. Duration:** 29065 usec from one extreme to the center; 2816 usec best case.
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** SMI, ADC, internal bond wires.

- **Input Parameters:**
 - UINT8 u8FiltSelect: If non-zero, 250-Hz filter enabled. Otherwise, 500-Hz filter selected.
 - UINT8* u8Offset: Pointer to initial step to load. Valid offset steps range from 0 - 15 and are described in the device's data sheet. An updated offset value is returned at the end of the function. In case the acceleration is too high or too low and function has run out of offset steps, a value of 255 ("0 - 1") or 16 ("15 + 1") shall be returned.
 - UINT16* Pointer to the Universal Uncompensated Measurement Array. Uncompensated acceleration will be updated accordingly.
- **Returns:**
 - UINT8 u8Status: Refer to TPMS_READ_ACCELERATION_Z for more information on the format of this status byte.

3.2.13 **UINT8 TPMS_COMP_ACCELERATION_Z(UINT16 *u16CompAccel, UINT16* u16UUMA)**

- **Description:** Performs an 9-bit compensated acceleration measurement. It is the user's responsibility to ensure that updated and valid uncompensated voltage, temperature and acceleration readings are available in the UUMA for this routine to return a meaningful value.
 - If u16CompAccel rails low, u16CompAccel will be forced to 1 and the "over/underflow" status flag will be set.
 - If u16CompAccel rails high, u16CompAccel will be forced to \$1FE and the "over/underflow" status flag will be set.
 - If the passed uncompensated voltage measurement is estimated to be under the guaranteed operational region, the routine will set the "Voltage" status flag. The accuracy of the returned value is not guaranteed.
 - For repeatability data, refer to the FXTH87xxxx family of data sheets.
- **Stack size:** 55 bytes
- **Approx. Duration:** 955 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await interrupts. It is not affected by interrupts either.
- **Resources:** UUMA.
- **Input Parameters:**
 - UINT16 *u16Accel: Updated 9-bit compensated acceleration.
 - UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Uncompensated voltage, temperature and acceleration will be taken from this array.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 18](#).

Table 18. Valid output conditions for TPMS_COMP_ACCELERATION_Z

u8Status Value	Measurement Value	Condition
\$01	\$01FE	Compensated acceleration reading outside of valid range (high).
\$01	\$0001	Compensated acceleration reading outside of valid range (low).
\$21	\$01FE	Compensated pressure reading outside of valid range (high), and uncompensated voltage suspected to be below valid operating range for this function.
\$21	\$0001	Compensated pressure reading outside of valid range (low), and uncompensated voltage suspected to be under below operating range for this function.
\$20	Between \$0001 - \$01FE	Uncompensated voltage suspected to be below valid operating range for this function; The compensated reading is not guaranteed for accuracy.
\$00	Between \$0001 - \$01FE	Valid compensated acceleration reading.

3.2.14 UINT8 TPMS_READ_ACCELERATION_XZ(UINT16 *u16UUMA, UINT8 u8Avg, UINT8 u8FiltSelect, UINT8 u8DynamicOffsetX, UINT8 u8DynamicOffsetZ)

- **Description:** Performs an uncompensated 10-bit measurement. While waiting for the ADC to converge, this function goes into STOP4. If the ADC, for an unexpected reason, fails to converge, this function has a built-in time-out: After five continuous non-ADC interrupts, the function will assume a failed ADC reading, flag it accordingly, and exit.
 - If the ADC value is over or under the normal operating condition, the “acceleration error” status flag will be set. The expected acceleration result will be forced to either “0” or “1023.” (rail high or rail low).
 - If the ADC times out with no result, the “ADC error” status flag will be set.
- **Stack size:** 34 bytes
- **Approx. Duration:** 5744 usec (500-Hz filter, 1 reading), 8477 usec (250-Hz filter, 1 reading).
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** SMI, ADC, internal bond wires.
- **Input Parameters:**
 - **UINT16 *u16UUMA:** Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Only the 10-bit uncompensated acceleration result will be updated.
 - **UINT8 u8Avg:** Number of measurements to average into one result. The value can be set to 1, 2, 4, 8, 16, or 32.
 - **UINT8 u8FiltSelect:** If non-zero, 250-Hz filter enabled. Otherwise, 500-Hz filter selected.
 - **UINT8 u8DynamicOffsetX:** Selects the offset setting for the appropriate acceleration reading. Refer to [Table 14](#) for more information.
 - **UINT8 u8DynamicOffsetZ:** Selects the offset setting for the appropriate acceleration reading. Refer to [Table 17](#) for more information.

- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 19](#).

Table 19. Valid output conditions for TPMS_READ_ACCELERATION_XZ

u8Status Value	Measurement Value	Condition
\$08	\$03FF	Uncompensated X acceleration reading outside of valid range (high).
\$08	\$0000	Uncompensated X acceleration reading outside of valid range (low).
\$28	\$03FF	Uncompensated X acceleration reading outside of valid range (high), and LVWF set.
\$28	\$0000	Uncompensated X acceleration reading outside of valid range (low), and LVWF set.
\$10	\$03FF	Uncompensated Z acceleration reading outside of valid range (high).
\$10	\$0000	Uncompensated Z acceleration reading outside of valid range (low).
\$30	\$03FF	Uncompensated Z acceleration reading outside of valid range (high), and LVWF set.
\$30	\$0000	Uncompensated Z acceleration reading outside of valid range (low), and LVWF set.
\$18	\$03FF	Uncompensated X and Z acceleration readings outside of valid range (high).
\$18	\$0000	Uncompensated X and Z acceleration readings outside of valid range (low).
\$38	\$03FF	Uncompensated X and Z acceleration readings outside of valid range (high), and LVWF set.
\$38	\$0000	Uncompensated X and Z acceleration readings outside of valid range (low), and LVWF set.
\$80	Undefined	Uncompensated acceleration reading not acquired.
\$A0	Undefined	Uncompensated acceleration reading not acquired, and LVWF set.
\$00	Between \$0001 - \$03FE	Valid uncompensated acceleration reading.
\$20	Between \$0001 - \$03FE	Valid uncompensated acceleration reading, but LVWF set.

3.2.15 UINT8 TPMS_READ_DYNAMIC_ACCEL_XZ(UINT8 u8Filter, UINT8* u8OffsetX, UINT8* u8OffsetZ, UINT16* u16UUMA)

- **Description:** This function automatically executes a TPMS_READ_DYNAMIC_ACCEL_X measurement, followed by a TPMS_READ_DYNAMIC_ACCEL_Z measurement with given initial dynamic offsets. Refer to the description of these functions for more information.
- **Stack size:** 60 bytes
- **Approx. Duration:** 50240 usec from one extreme to the center; 8200 usec best case.
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** SMI, ADC, internal bond wires.
- **Input Parameters:**
 - UINT8 u8FiltSelect: If non-zero, 250-Hz filter enabled. Otherwise, 500-Hz filter selected.

- UINT8* u8OffsetX: Pointer to initial offset level to load into SMI according to [Table 14](#). An updated offset value is returned at the end of the function.
- UINT8* u8OffsetZ: Pointer to initial offset level to load into SMI according to [Table 17](#). An updated offset value is returned at the end of the function.
- UINT16* Pointer to the Universal Uncompensated Measurement Array. Uncompensated acceleration for both axes will be updated accordingly.
- **Returns:**
 - UINT8 u8Status: Refer to TPMS_READ_ACCELERATION_Z for more information on the format of this status byte.

3.2.16 UINT8 TPMS_COMP_ACCELERATION_XZ(UINT16 *u16CompAccel, UINT16* u16UUMA)

- **Description:** This function internally calls TPMS_COMP_ACCELERATION_X followed by TPMS_COMP_ACCELERATION_Z. It places the compensated results in a 2-word array. For more information, refer to the functions afore mentioned.
- **Stack size:** 60 bytes
- **Approx. Duration:** 1910 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await interrupts. It is not affected by interrupts either.
- **Resources:** UUMA
- **Input Parameters:**
 - UINT16 *u16CompAccel: Updated 9-bit compensated X-axis acceleration followed by Z-axis acceleration.
 - UINT16 *u16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). Uncompensated voltage, temperature and acceleration will be taken from this array.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 20](#).

Table 20. Valid output conditions for TPMS_COMP_ACCELERATION_XZ

u8Status Value	Measurement Value	Condition
\$01	\$01FE	Compensated acceleration reading outside of valid range (high).
\$01	\$0001	Compensated acceleration reading outside of valid range (low).
\$21	\$01FE	Compensated pressure reading outside of valid range (high), and uncompensated voltage suspected to be below valid operating range for this function.
\$21	\$0001	Compensated pressure reading outside of valid range (low), and uncompensated voltage suspected to be under below operating range for this function.
\$20	Between \$0001 - \$01FE	Uncompensated voltage suspected to be below valid operating range for this function; The compensated reading is not guaranteed for accuracy.
\$00	Between \$0001 - \$01FE	Valid compensated acceleration reading.

3.2.17 UINT8 TPMS_READ_V0(UINT16 *u16Result, UINT8 u8Avg)

- **Description:** Performs an 10-bit uncompensated measurement at pin PTA0.
- **Stack size:** 23 bytes
- **Approx. Duration:** 107 usec
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** ADC, PTA0.
- **Input Parameters:**
 - UINT16 *u16Result: Updated 10-bit uncompensated measurement.
 - UINT8 u8Avg: Number of measurements to average into one result. The value can be set to 1, 2, 4, 8, or 16.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 21](#).

Table 21. Valid output conditions for TPMS_READ_V0 and TPMS_READ_V1

u8Status Value	Measurement Value	Condition
\$01	\$0000	Reading not acquired.
\$00	Between \$0000 - \$03FE	Valid reading.

3.2.18 UINT8 TPMS_READ_V1(UINT16 *u16Result, UINT8 u8Avg)

- **Description:** Performs an 10-bit uncompensated measurement at pin PTA1.
- **Stack size:** 23 bytes
- **Approx. Duration:** 107 usec
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- **Resources:** ADC, PTA1.
- **Input Parameters:**
 - UINT16 *u16Result: Updated 10-bit uncompensated measurement.
 - UINT8 u8Avg: Number of measurements to average into one result. The value can be set to 1, 2, 4, 8, or 16.
- **Returns:**
 - UINT8 u8Status: Valid error flags/outputs are described in [Table 21](#).

3.2.19 UINT8 TPMS_LFOCAL(void)

- **Description:** Performs PWU clock calibration. The wake-up and periodic reset time can be calibrated more accurately by using the TPMS_LFOCAL firmware subroutine. This subroutine turns on the RFM crystal oscillator and feeds a 500-Hz clock via the DX signal to the TPM1 for one cycle of the LFO. The measured time is used to calculate the correct value for the WDIV0:5-bits for a WCLK period of 1 second. The resulting value for use in the WDIV0:5-bits is returned in the accumulator. The user can decide whether to load the value to the WDIV0:5-bits or store for future reference. The TPMS_LFOCAL subroutine cannot be used while the RFM is transmitting or the TPM1 is being used for another task. This routine will also consume more power due to the crystal oscillator running. This function accesses and writes data to the **SIMOPT2** register. Since some of the bits in this register are write-once-only, it should be configured prior to calling this routine.
- **Stack size:** 9 bytes
- **Approx. Duration:** 1747 usec
- **Power Management:** This function executes entirely in RUN mode. It requires the MCU to be configured for 4 MHz bus clock.
- **Interrupt Management:** This function does not await any interrupts. It **WILL** be affected by interrupts.
- **Resources:** TPM, SIMOPT2, RFM
- **Input Parameters:**
 - None
- **Returns:**
 - UINT8 u8WDIV: WDIV compensated value.

WARNING

This routine writes to **SIMOPT2**. Any configuration involving this register must be performed before calling this routine.

3.2.20 UINT8 TPMS_MFOCAL(void)

- **Description:** Performs MFO cross-check verification. This function will measure the bus clock relative to Dx, but first executes a test to verify the presence of the external XTAL. When error is zero, it returns “128.” Any deviation from this value should be considered an error. This result can then be used to estimate the error in the RFBT setting. The TPMS_MFOCAL subroutine cannot be used while the RFM is transmitting or the TPM1 is being used for another task. This function accesses and writes data to the **SIMOPT2** register. Since some of the bits in this register are write-once-only, it should be configured prior to calling this routine.
- **Stack size:** 9 bytes
- **Approx. Duration:** 1825 usec
- **Power Management:** This function executes entirely in RUN mode. It requires the MCU to be configured for 4 MHz bus clock.

- **Interrupt Management:** This function does not await any interrupts. It **WILL** be affected by interrupts.
- **Resources:** TPM, SIMOPT2, RFM
- **Input Parameters:**
 - None
- **Returns:**
 - UINT8 u8Error: 128 when no error is found. Each LSB away from this value is equal to a 0.78% error. For example, if u8Error = 125, MFO has a -2.34% error, or is running at 122 kHz. 255 is reserved as an error code for when the external XTAL is not present.

WARNING

This routine writes to **SIMOPT2**. Any configuration involving this register must be performed before calling this routine.

3.2.21 void TPMS_RF_ENABLE(UINT8 u8Switch)

- **Description:** This function enables or disables the RF module in the FXTH87xx11 and FXTH87xx12 and transfers adequate PLL trim data to the module. It should be called prior to any other RF operation.
- **Stack size:** 4 bytes
- **Approx. Duration:** 378 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will be affected by interrupts.
- **Resources:** SIMOPT1, RFM
- **Input Parameters:**
 - UINT8 u8Switch: Enable (non-zero) or disable (zero) RFM.
- **Returns:**
 - void.

WARNING

This routine writes to **SIMOPT1**. Any configuration involving this register must be performed before calling this routine.

3.2.22 void TPMS_RF_RESET(void)

- **Description:** This function sends a master reset to the RFM and reloads PLL trim values into the module. It requires the RFM to have been enabled previously.
- **Stack size:** 3 bytes
- **Approx. Duration:** 228 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** RFM
- **Input Parameters:**
 - None
- **Returns:**
 - void

3.2.23 void TPMS_RF_READ_DATA(UINT8 u8Size, UINT8 *u8RAMBuffer, UINT8 u8RFMBuffer)

- **Description:** This function reads several consecutive bytes from the dedicated RFM buffer registers and copies them to a given address in RAM. It assumes that BUFF0 is location “0”. The data is transferred from the LSB bit of the RFM data registers to the LSB of the target memory address (standard data bit order). This function manages the RFM’s buffer paged memory.
 - In case the required buffer address is out of bounds, the routine will return “0” for that location.
- **Stack size:** 9 bytes
- **Approx. Duration:** 194 usec (for 8 bytes, switching pages included).
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** RFM
- **Input Parameters:**
 - UINT8 u8Size: Number of bytes to read.
 - UINT8 *u8RamBuffer: Target memory location.
 - UINT8 u8RFMBuffer: Buffer register (0 to 31) to read.
- **Returns:**
 - void

3.2.24 void TPMS_RF_READ_DATA_REVERSE(UINT8 u8Size, UINT8 *u8RAMBuffer, UINT8 u8RFMBuffer)

- **Description:** This function reads several consecutive bytes from the dedicated RFM buffer registers and copies them to a given address in RAM. It assumes that BUFF0 is location “0”. The data is transferred from the LSB bit of each byte of the RFM data registers to the MSB of each of the bytes of the target memory address (reversed data bit order). This function manages the RFM’s buffer paged memory.
 - In case the required buffer address is out of bounds, the routine will return “0” for that location.
- **Stack size:** 10 bytes
- **Approx. Duration:** 236 usec (for 8 bytes, switching pages included).
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** RFM
- **Input Parameters:**
 - UINT8 u8Size: Number of bytes to read.
 - UINT8 *u8RamBuffer: Target memory location.
 - UINT8 u8RFMBuffer: Buffer register (0 to 31) to read.
- **Returns:**
 - void

3.2.25 void TPMS_RF_WRITE_DATA(UINT8 u8Size, UINT8 *u8RAMBuffer, UINT8 u8RFMBuffer)

- **Description:** This function copies several consecutive bytes from RAM into the dedicated RFM Output Buffer. It assumes that BUFF0 is location “0”. The data is transferred from the LSB bit of RAM to the LSB of the RFM data register (standard data bit order). This function manages the RFM’s buffer paged-memory.
 - In case the destination buffer address is out of bounds, the register value will not be written.
- **Stack size:** 8 bytes
- **Approx. Duration:** 182 usec (for 8 bytes, switching pages included).
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** RFM
- **Input Parameters:**
 - UINT8 u8Size: Number of bytes to write.
 - UINT8 *u8RamBuffer: Source memory location.
 - UINT8 u8RFMBuffer: Starting buffer register (0 to 31) to write.
- **Returns:**
 - void

3.2.26 void TPMS_RF_WRITE_DATA_REVERSE(UINT8 u8Size, UINT8 *u8RAMBuffer, UINT8 u8RFMBuffer)

- **Description:** This function copies several consecutive bytes from RAM into the dedicated RFM Output Buffer. It assumes that BUFF0 is location “0”. The data is transferred from the LSB bit of each byte in RAM to the MSB of each byte in the RFM data register (reversed data bit order). This function manages the RFM’s buffer paged-memory.
— In case the destination buffer address is out of bounds, the register value will not be written.
- **Stack size:** 9 bytes
- **Approx. Duration:** 242 usec (for 8 bytes, switching pages included).
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** RFM
- **Input Parameters:**
 - UINT8 u8Size: Number of bytes to write.
 - UINT8 *u8RamBuffer: Source memory location.
 - UINT8 u8RFMBuffer: Starting buffer register (0 to 31) to write.
- **Returns:**
 - void

3.2.27 void TPMS_RF_CONFIG_DATA(UINT16 *u16RFParam)

- **Description:** This function is included for backward compatibility with the MPXY8300. This function configures the RFM for transmission. It does not configure inter-frame wait times, which must be configured manually.
- **Stack size:** 4 bytes
- **Approx. Duration:** 32 usec.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** RFM
- **Input Parameters:**
 - UINT16* u16RFParam Format as described in [Table 22](#).

Table 22. u16RFParam Array format

Index	Description
0	Refer to Table 23 for description.
1	PLLA value.
2	PLLB value

Table 23. Description of Element 0 in the u16RFParam Array

Bits	Description
15:8	Prescaler value. Described in Data Sheet as RFCR0.
7	End Of Message- If '1', EOM is set, if '0', it's not set.
6	Polarity Bit - If '1', polarity is inverted, If '0', it is non-inverted.
5:4	Not used.
2:3	Encoding value - Refer to the product spec for more information.
1	Frequency selection - If '1', RFM is configured for 434 MHz, if '0', it is configured for 315 MHz.
0	Modulation - If '1', RFM is configured for FSK, if '0' it is configured for OOK.

- **Returns:**
— void

3.2.28 void TPMS_RF_SET_TX(UINT8 u8BufferSize)

- **Description:** This function allows the RFM to transmit data previously loaded in the buffer. It should be called after the RF module has been enabled and configured.
- **Stack size:** 3 bytes
- **Approx. Duration:** 12 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** RFM
- **Input Parameters:**
— UINT8 u8BufferSize: Number of bits in the buffer -1 (for example, to transmit one bit, u8BufferSize should equal 0).
- **Returns:**
— void

3.2.29 void TPMS_RF_DYNAMIC_POWER(UINT8 u8CompT, UINT8 u8CompV, UINT8* pu8PowerManagement)

- **Description:** Depending on the passed parameters, this function can:
 - Force the RF power setting (RFCFR2_PWR) to a passed value (when BIT5 of u8PowerManagement is clear).
 - Set the RF power setting (RFCFR2_PWR) dynamically based on voltage, temperature, and current carrier frequency (when BIT5 of u8PowerManagement is set). The power domains for this function are described in the FXTH87xxx family of data sheets.
 - Similar to the case above, the user can specify a target power region with an offset.
- **Stack size:** 21 bytes
- **Approx. Duration:** 140 usec when calculating dynamic power; 20 usec when power setting is passed.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** RFM
- **Input Parameters:**
 - UINT8 u8CompT: Compensated temperature reading
 - UINT8 u8CompV: Compensated voltage reading
 - UINT8* pu8PowerManagement: This is a pointer to an array of five elements as described below.

Table 24. *pu8PowerManagement format

Index Value	Description
0	Dynamic Compensation switch as described in Table 25 .
1	Offset step for power target when temperature is lower than 0°C. Negative values admitted.
2	Offset step for power target when temperature is lower than 25°C and higher than 0°C. Negative values admitted.
3	Offset step for power target when temperature is lower than 60°C and higher than 25°C. Negative values admitted.
4	Offset step for power target when temperature is higher than 60°C. Negative values admitted.

Table 25. pu8PowerManagement[0] format

BIT	Description
MSB	Not used.
BIT6	Not used.
BIT5	Dynamic compensation enable. If set, the function will decide what the optimal power setting is based on voltage and temperature; In this case, values stored in the array will be added to the found target. If clear, BIT4:0 will be used to set the power level directly.
BIT4:0	When BIT5 is clear, the value passed here will be used to set the RF power step directly.

- **Returns:**
— void

WARNING

The RF Module must be turned on prior to calling this routine.

3.2.30 void TPMS_MSG_INIT(void)

- **Description:** This function is to be called before using any MSG routine. It initializes PTA1 and PTA0 to their correct initial state for a simulated SPI.
- **Stack size:** 2 bytes
- **Approx. Duration:** 4 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** Pins PTA1 and PTA0.
- **Input Parameters:**
— None
- **Returns:**
— void

3.2.31 UINT8 TPMS_MSG_READ(void)

- **Description:** This function is in charge to read any incoming message at a network level via an emulated serial interface on PTA1 and PTA0. As the master, the FXTH87xx11 and FXTH87xx12 manages the clock on PTA1. On falling edge of the clock, the module reads a new data bit on PTA0 (programmed as input), MSB first.
- **Stack size:** 2 bytes
- **Approx. Duration:** 80 usec.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** Pins PTA1 and PTA0.
- **Input Parameters:**
— None
- **Returns:**
— UINT8 u8ReadByte: Incoming byte from the emulated serial interface.

3.2.32 UINT8 TPMS_MSG_WRITE(UINT8 u8SendByte)

- **Description:** This function is in charge to write a message at a network level via an emulated serial interface on PTA1 and PTA0. As the master, the FXTH87xx11 and FXTH87xx12 manages the clock on PTA1. On rising edge of the clock, the module puts down a new data bit on PTA0 (programmed as output), MSB first.
- **Stack size:** 2 bytes
- **Approx. Duration:** 80 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** Pins PTA1 and PTA0.
- **Input Parameters:**
 - UINT8 u8SendByte: Byte to be outputted through the emulated serial interface.
- **Returns:**
 - UINT8 u8ReadByte: Incoming byte from the emulated serial interface.

3.2.33 UINT8 TPMS_CHECKSUM_XOR(UINT8 *u8Buffer, UINT8 u8Size, UINT8 u8Checksum)

- **Description:** Calculates a checksum for the given buffer based on XOR operations.
- **Stack size:** 5 bytes
- **Approx. Duration:** 80 usec for 8 bytes of data.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** N/A
- **Input Parameters:**
 - UINT8 *u8Buffer: Buffer where data is located.
 - UINT8 u8Size: Size of buffer (in bytes).
 - UINT8 u8Checksum: Previous checksum. This argument is useful when the function is used recursively. It must equal "0" if there is no previous data.
- **Returns:**
 - UINT8 u8NewChecksum: New calculated checksum.

3.2.34 **UINT8 TPMS_CRC8(UINT8 *u8Buffer, UINT16 u16SizeInBytes, UINT8 u8Remainder)**

- **Description:** Calculates a CRC8 on a portion of the designated area using polynomial $x^8 + x^5 + x^3 + x^2 + x + 1$.
- **Stack size:** 9 bytes
- **Approx. Duration:** 240 usec for 8 bytes of data.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** N/A
- **Input Parameters:**
 - **UINT8 *u8Buffer:** Buffer where data is located.
 - **UINT16 u16SizeInBytes:** Size of the designated buffer (in bytes).
 - **UINT8 u8Remainder:** Initial remainder. This argument is useful when the function is used recursively. It must equal “0” if there is no previous data.
- **Returns:**
 - **UINT8 u8NewCRC:** New calculated CRC8.

3.2.35 **UINT16 TPMS_CRC16(UINT8 *u8Buffer, UINT16 u16MByteSize, UINT16 u16Remainder)**

- **Description:** Calculates a CRC16 on a portion of the designated memory area by using a look-up table. Polynomial used is \$1021 (standard for CRC16-CCITT).
- **Stack size:** 13 bytes
- **Approx. Duration:** 226 usec for 8 bytes.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** N/A
- **Input Parameters:**
 - **UINT8 *u8Buffer:** Buffer where data is located.
 - **UINT16 u16MByteSize:** Size of the designated buffer (in bytes)
 - **UINT16 u16Remainder:** Initial remainder.
- **Returns:**
 - **UINT16 u16NewCRC:** New calculated CRC16.

3.2.36 UINT16 TPMS_SQUARE_ROOT(UINT16 u16Process)

- **Description:** Calculates a two-digit remainder of (square root * 10) using a fast algorithm.
- **Stack size:** 49 bytes
- **Approx. Duration:** 365 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** N/A
- **Input Parameters:**
 - UINT16 u16Process: The number from which to get the square root from.
- **Returns:**
 - UINT16 Root of the number * 10.

3.2.37 void TPMS_READ_ID(UINT8 *u8Code)

- **Description:** Copies the device's UniqueID and firmware version stored in firmware flash to RAM.
- **Stack size:** 2 bytes
- **Approx. Duration:** 32 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** N/A
- **Input Parameters:**
 - UINT8 *u8Code: RAM location where data will be copied. [Table 26](#) describes the format of the 6-bytes returned.

Table 26. u8Code format

Index	Description
0	Firmware version.
1	Derivative descriptor.
2:5	32-bit UniqueID.

- **Returns:**
 - void

3.2.38 void TPMS_LF_ENABLE(UINT8 u8Switch)

- **Description:** Enables/disables the LFR module.
- **Stack size:** 5 bytes
- **Approx. Duration:** 32 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** LFR
- **Input Parameters:**
 - UINT8 u8Switch: Enable (non-zero) or disable (zero) LFR.
- **Returns:**
 - void

3.2.39 UINT8 TPMS_LF_READ_DATA(UINT8 *u8Buffer, UINT8 u8Count)

- **Description:** Once the user has configured and enabled the LFR, it is customary to go into a low-power state mode and wait for a datagram. After the first byte of an incoming datagram is successfully received, this function should be called immediately; It will receive the complete datagram and place it in RAM. This function assumes that the LFR module is configured accordingly for a Manchester reception; that the module's interrupts are enabled; and that the first byte has already been received and is waiting in the LFR received buffer. While waiting for the next byte, this function goes into STOP4. If the byte, for an unexpected reason, is not received, this function has a built-in time-out: After five continuous non-LFR interrupts, the function will assume a failed LFR reception and exit.
- **Stack size:** 7 bytes
- **Approx. Duration:** Data dependant; ~2 msec per byte.
- **Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- **Interrupt Management:** This function utilizes the LFR interrupt to wake-up from STOP mode. It does not await any other interrupts and should not be affected by them.
- **Resources:** LFR
- **Input Parameters:**
 - UINT8 *u8Buffer: RAM Buffer where data will be placed.
 - UINT8 u8Count: Number of bytes expected.
- **Returns:**
 - UINT8 u8BytesReceived: Actual number of bytes received.

WARNING

This function requires ~24 usec from the moment it is called to the moment the first byte is copied into the RAM buffer. The user must consider this time when designing their firmware.

3.2.40 UINT8 TPMS_WIRE_AND_ADC_CHECK(UINT8 u8TestMask)

- Description:** This function will check if there is any bonding wire failure between the embedded core and the P-cell; or between the core and the g-cell. It will also perform an optional a g-cell self-test, and/or an ADC test. The latter will consist on taking two reference measurements (ground and Vdd) using internal channels and comparing them with the expected results. The optional g-cell self-test sends a self-test signal and verifies that the g-cell deflects as expected. It can only be called when the device is in *parking* or *static* mode. When configuring for a P-cell or g-cell wire check, Interrupts must be enabled before calling this routine. In case of no issues found, “0” will be returned, else it will set status flags as follows:
 - On P-cell wire-bond error, sets “pressure error” flag.
 - On g-cell wire-bond or Self-Test error, sets “acceleration error” flag.
 - On ADC error, sets the “ADCERR” flag.
- Stack size:** 36 bytes
- Approx. Duration:** 14,926 usec (all checks), 106 usec (ADC only), 3,089 usec (P-cell only), 3,087 usec (X-Axis 1 wire-bond only), 3,089 usec (Z-Axis 1 wire-bond only), 5622 usec (g-cell Self-Test only).
- Power Management:** This function requires the core to be configured for STOP4 mode and running at full bus speed.
- Interrupt Management:** This function utilizes the ADC interrupt to wake-up from STOP mode.
- Resources:** ADC, SMI, internal bond wires.
- Input Parameters:**
 - UINT8 u8TestMask: This variable determines what checks are performed as described by [Table 27](#).

Table 27. u8TestMask format

u8TestMask Bit	Description
BIT0	Reserved.
BIT1	If set, g-cell Self-test performed. Refer to warning below.
BIT2	If set, P-cell bond-wire check performed.
BIT3	If set, X-axis bond-wire check performed.
BIT4	If set, Z-axis bond-wire check performed.
BIT5:6	Reserved.
BIT7	If set, ADC check performed.

- Returns:**
 - UINT8 u8Status: Status flags as described in [Table 28](#).

Table 28. u8Status valid values for TPMS_WIRE_AND_ADC_CHECK

u8TestMask Bit	Description
BIT0:1	Always clear.
BIT2	If set, P-cell bond-wire error detected.
BIT3	If set, X-axis bond-wire error detected.
BIT4	If set, Z-axis bond-wire or Self-Test error detected.
BIT5:6	Always clear.
BIT7	If set, ADC error detected.

WARNING

The Self-Test option will only return valid readings when the device is static (i.e. the vehicle is not moving). It is the user's responsibility to ensure it is only called while in *parking* or *static* mode.

3.2.41 void TPMS_FLASH_WRITE(UINT16 u16Address, UINT8* u8Buffer, UINT8 u8Size)

- **Description:** This function writes consecutive bytes from a given address in memory to a specified location in FLASH.
- **Stack size:** 15 bytes
- **Approx. Duration:** 1336 usec for 8 bytes of data.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will be affected by interrupts.
- **Resources:** Global RAM locations \$0090 - \$00CA.
- **Input Parameters:**
 - UINT16 u16Address: Flash starting address.
 - UINT8 *u8Buffer: Source memory address.
 - UINT8 u8Size: Number of data bytes to be written.
- **Returns:**
 - void

WARNING

This routine will overwrite the contents of RAM locations \$0090 - \$00CA.

3.2.42 UINT16 TPMS_FLASH_CHECK(void)

- **Description:** This function calculates the CRC16 checksum for the Freescale firmware area (addresses \$E000 - FFAD) using the function TPMS_CRC16. It compares it with a pre-calculated stored value and reports if these two values match or not.
- **Stack size:** 17 bytes
- **Approx. Duration:** 214070 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** N/A
- **Input Parameters:**
 - None.
- **Returns:**
 - UINT16 u16Status: “0” in case the calculated checksum and the stored one are the same, or the calculated checksum in case they are different.

3.2.43 UINT8 TPMS_FLASH_ERASE(UINT16 u16Address)

- **Description:** This function erases 1 page (512 bytes) of flash at a time.
- **Stack size:** 11 bytes
- **Approx. Duration:** 22744 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It may be affected by interrupts.
- **Resources:** Global RAM locations \$0090 - \$00CA.
- **Input Parameters:**
 - UINT16 u16Address: any given address. The whole page where this address resides will be erased (i.e. if u16Address = \$D234, the contents of addresses \$D200 - \$D3FF will be erased).
- **Returns:**
 - Zero if the page was erased successfully; else, one.

WARNING

This routine will overwrite the contents of RAM locations \$0090- \$00CA.

3.2.44 UINT8 TPMS_FLASH_PROTECTION(UINT8 u8Range, UINT16 u16Key)

- **Description:** This function enables flash protection for a custom memory block. After its execution, both TPMS_FLASH_WRITE and TPMS_FLASH_ERASE will be unable to perform any operation in the protected blocks, but shall be operational in unprotected areas.
- **Stack size:** 11 bytes
- **Approx. Duration:** 736 usec if protecting; 20.4 usec for a failed attempt.
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will be affected by interrupts.
- **Resources:** Global RAM locations \$0090 - \$00CA.
- **Input Parameters:**
 - **UINT8 u8Range:** Byte determining the first address of protection, using the Freescale FPROT convention. Refer to product spec for a description of this register.
 - **UINT16 u16Key:** Due to the irreversible status after the execution of this routine, this argument is used as a fail-safe to guarantee desired execution of the function. Only when u16Key is equal to the least-significant word of the UniqueID will this function execute successfully.
- **Returns:** UINT8 u8Status: according to table below.

Table 29. Possible status values for TPMS_FLASH_PROTECTION

Return Value	Description
\$0	u16Key matches lower 16-bits of UniqueID; protection was disabled and now is enabled.
\$1	u16Key does not match lower 16-bits of UniqueID; protection was disabled and continues to be so.
\$2	u16Key matches lower 16-bits of UniqueID; protection was already enabled.
\$3	u16Key does not match lower 16-bits of UniqueID; protection was already enabled.
\$4	u16Key matches lower 16-bits of UniqueID; protection was disabled and continues to be so (Failed writing protection).
\$5 - \$FF	Reserved.

WARNING

This routine can only be executed once. After successful execution of this routine, TPMS_FLASH_WRITE and TPMS_FLASH_ERASE will be permanently disabled.

3.2.45 void TPMS_MULT_SIGN_INT16(INT16 i16Mult1, INT16 i16Mult2, INT32* pi32Result)

- **Description:** This function will multiply two signed 16-bit numbers together.
- **Stack size:** 17 bytes
- **Approx. Duration:** 60 usec
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It should not be affected by interrupts.
- **Resources:** N/A
- **Input Parameters:**
 - INT16 i16Mult1: First multiplier.
 - INT16 i16Mult2: Second multiplier.
 - INT32* pi32Result: Pointer to a 32-bit variable where the result will be stored.
- **Returns:**
 - void

3.2.46 UINT16 TPMS_WAVG(UINT8 u8PNew, UINT16 u16POld, UINT8 u8Avg)

- **Description:** This subroutine calculates a new weighed average value for a given new and old measurement readings by using the following equation:

$$u16NewAverage = ((u16POld \times (u8AVG - 1) + u8PNew) / (u8Avg)) \quad \text{Eqn. 1}$$

- **Stack size:** 12 bytes
- **Approx. Duration:** 38 usec (average of 2), 43 usec (average of 4), 48 usec (average of 8), 53 usec (average of 16), 56 usec (average of 32).
- **Power Management:** This function executes entirely in RUN mode.
- **Interrupt Management:** This function does not await any interrupts. It will not be affected by interrupts.
- **Resources:** N/A
- **Input Parameters:**
 - UINT8 u8PNew: new value to include in average.
 - UINT16 u16POld: Old average.
 - UINT8 u8Avg: Weight of the average. This value can be 2, 4, 8, 16, 32; any other value will return an incorrect response.
- **Returns:**
 - UINT16 u8NewAverage: resulting weighed average of both old average and the new value (refer to [Example 1](#)).

3.2.47 void TPMS_RDE_ADJUST_PRESSURE(UINT16* pu16UUMA, T_RDE* ptRDEValues)

- **Description:** This routine's functionality has been removed, but its prototype is still callable for backward compatibility. It always returns CLEAR, and doesn't affect any passed argument.
- **Stack size:** 4 bytes.
- **Approx. Duration:** 9 usec.
- **Power Management: Interrupt Management:** This function does not await any interrupts. It should not be affected by interrupts.
- **Resources:** Core
- **Input Parameters:**
 - UINT16 *pu16UUMA: Pointer to Universal Uncompensated Measurement Array (as described in [Section 2.3](#)). No values are affected.
 - T_RDE* ptRDEValues: Pointer to an array of elements. For more information on the RDE structure, refer to [Section 2.5](#).
- **Returns:** UINT8 u8Status: Always CLEAR.

How to Reach Us:**Home Page:**

freescale.com

Web Support:

freescale.com/support

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: freescale.com/SalesTermsandConditions.

Freescale, the Freescale logo and CodeWarrior are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners.

© 2014 Freescale Semiconductor, Inc.