

I

INSTALL Program
 Keyboard Functions 2-5
Install Program
 Running 2-4
ISA Card 1-1
 8- and 16- bit ISA and EISA expansion slots 1-1

M

Main Selection Menu 2-6
 Set Power-Up Configuration 2-7
Memory Aperture 2-12
Memory Upgrades 6-1
 Memory Chips 6-1
 Procedure 6-2
Micro Channel Card 1-2
Monitor
 Automatic Detection 1-6
 Custom Configuration 5-1
 Determining Resolution and Refresh Rates 5-1
 Selecting 1-6
 Setting Current Video Mode 5-4
Monitors
 Switching Between 5-8
Mouse
 Installation 1-7
Mouse Configuration 2-11

P

Power-Up Video Mode 2-11
Primary Card 5-7

S

Saving Your Configuration 2-13
Secondary Card
 VGA Disabled 5-8
 VGA Enabled 5-8
Set 2-7

Set Power-Up Configuration 2-7
Software Utilities 3-1
 Installing 3-1
Specifications B-1

T

Testing Your Card 2-13
 Automatic Power-Up Test 2-13

V

VGA
 Add-On 1-4
VGA Bus I/O 2-12
VGA Disable and ROM Address
 DIP Switch 5-5
VGA Memory Size 2-13
VGA ROM Configuration 2-11
VGA Zero Waitstate RAM 2-12

W

Warranty Registration Card 1-3

GRAPHICS ULTRA PRO User's Guide

Version: 1.0

P/N: 10701F1200

@ Copyright 1992, by: ATI Technologies Inc.

All rights reserved, including those to reproduce this manual or parts thereof, in any form without the express written permission of ATI Technologies Inc.