

1-1. Startup display when the stored parameter is not found or bypass



1-2. Startup display when the stored parameter is found.



2. While OCXO is warming up



3. Waiting for GPS valid after OCXO warmed up



4. Waiting for GPS 1PPS signal after GPS valid.



5-1. Normal-operation, display UTC



5-2. Normal-operation, display the integrated error freq (unit: 0.1Hz)



5-3. Normal-operation, display latitude and longitude



6. GPSDO parameter is saved when push switch is long pressed.

