


# REBAR QUANTITY RECORDER

## Quick User Manual

Version: 1.0  
Date: 18<sup>th</sup> May 2020

1. Click and run the .exe file.
2. After Installing the application Icon will appear on desktop. Double Click to Open the application.
3. Rebar Quantity Recorder main window.
4. Login Panel existing users can enter email ID/Password and login.
5. New users should register their email ID/Password by clicking Signup.  
[Note: Email IDs not ending in "@Shapoorji.com" will not be accepted]
6. Click "Keep me logged in" checkbox to keep your user ID always logged in your current PC.
7. Click "Forget Password" if you don't remember your password, to create a new one by entering the generated OTP.

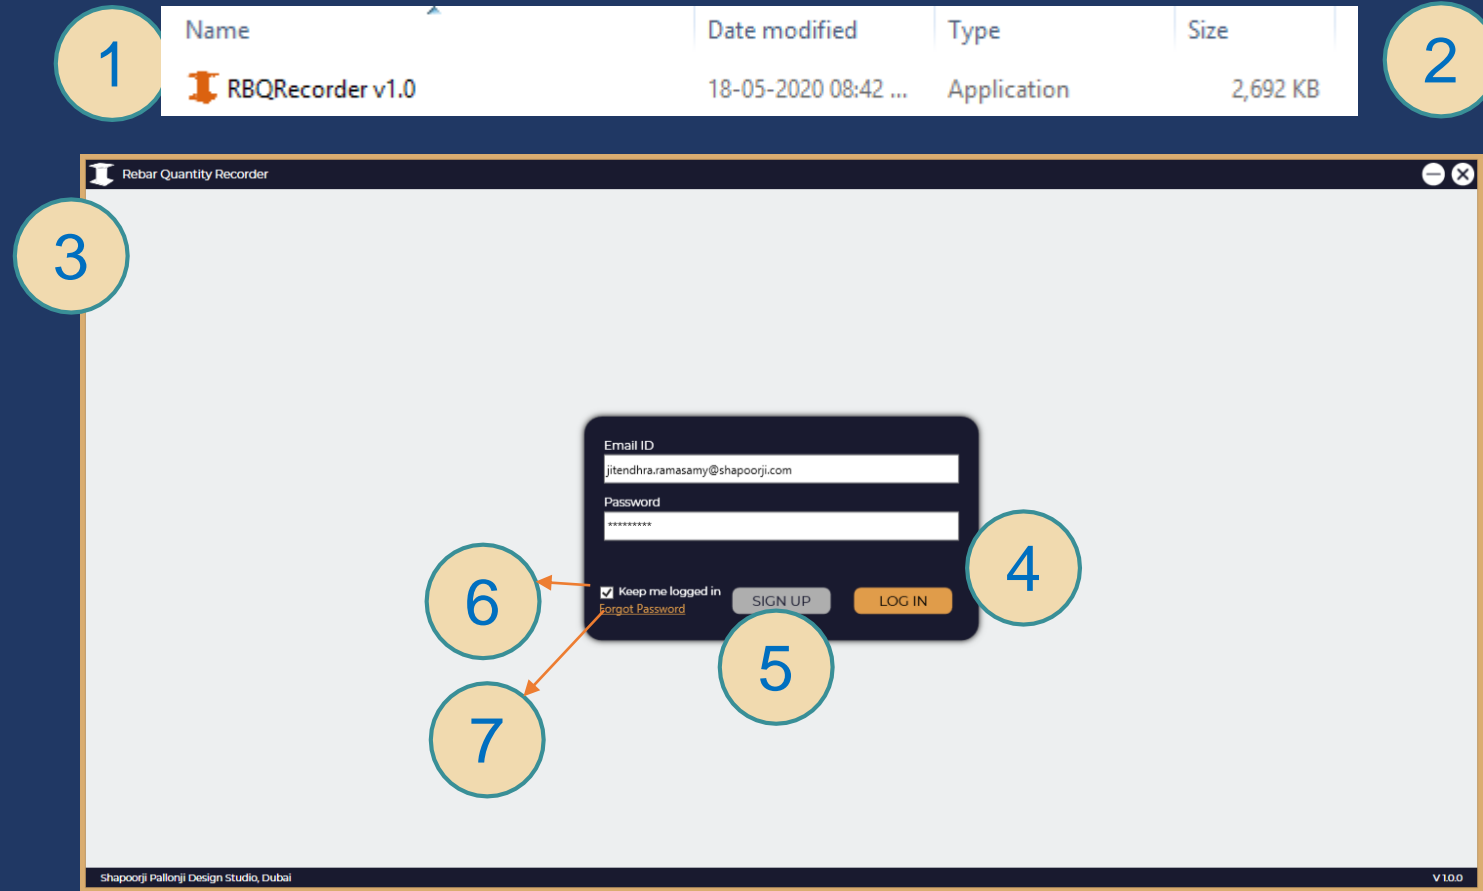

## INSTALLATION & OVERVIEW

1

Email ID

jitendhra.ramasamy@shapoorji.com

Password

Enter Password

☒ Keep me logged in

[Forgot Password](#)

SIGN UP

LOG IN

2

First Name

Last Name

First name

Last Name

Email ID

jitendhra.ramasamy@shapoorji.com

Password

Enter Password

Confirm Password

Enter Password

CANCEL

REGISTER

3

Email ID

jitendhra.ramasamy@shapoorji.com

New Password

Enter Password

Confirm Password

Enter Password

OTP (One time password)

Enter Reset OTP

Haven't received OTP email yet?


[Request OTP](#)

CANCEL


RESET

1. Login Panel
2. Register Panel
3. Forgot Password Panel

REGISTRATION & LOGIN

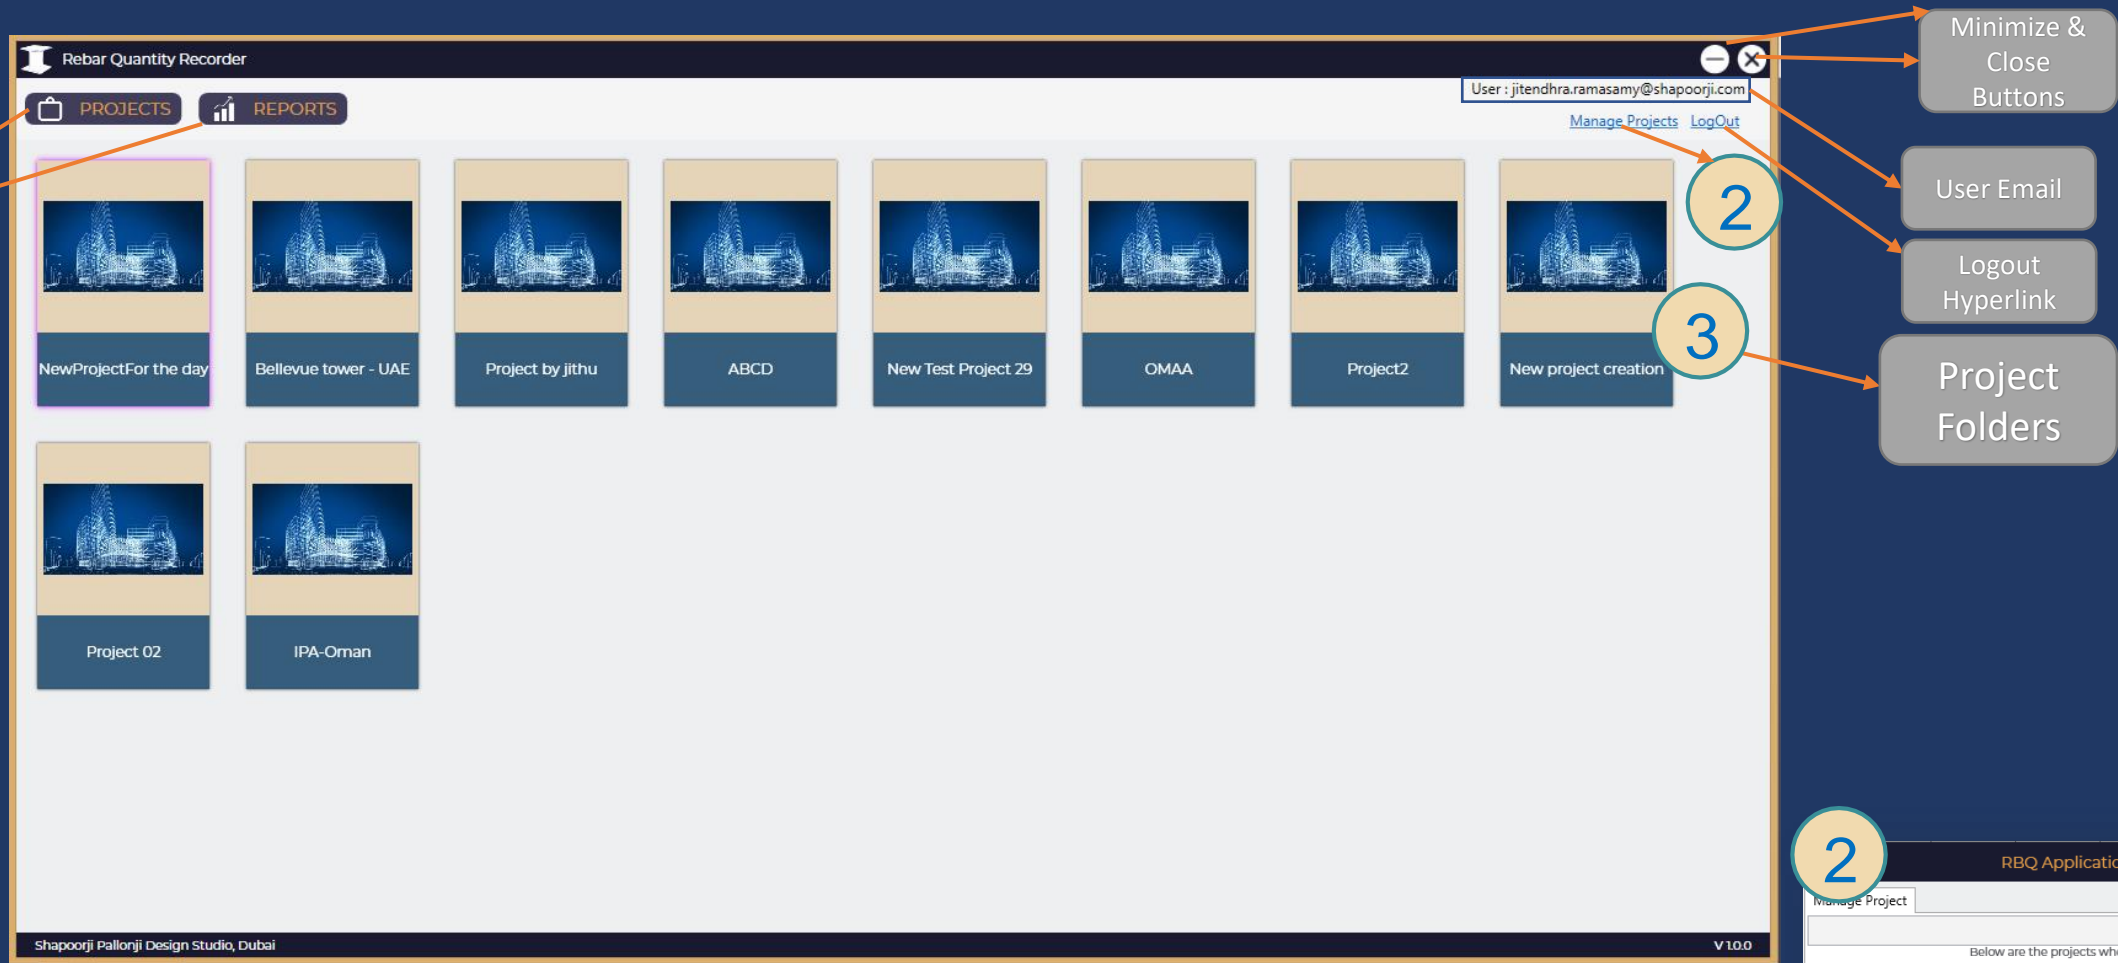

1. Tab menu for changing pages between Project and Report page.
2. "Manage Project" Dialog box for adding, editing and deleting Project Folder.
3. "Project Folder" - We have an Entry Page inside all the Folders.

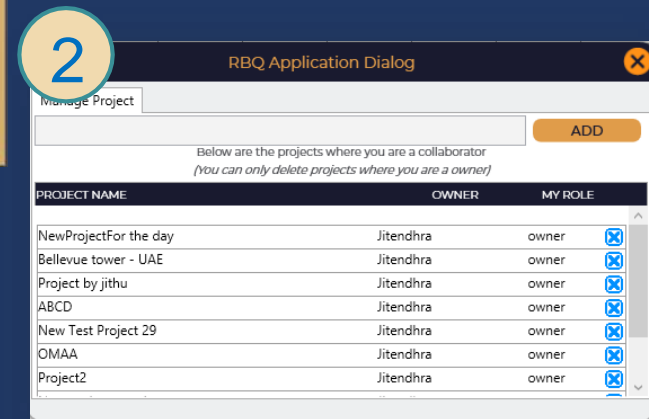

MAIN PAGE



**1 RBQ Application Dialog**

Manage Project

Below are the projects where you are a collaborator  
(You can only delete projects where you are a owner)

PROJECT NAME	OWNER	MY ROLE
NewProjectFor the day	Jitendhra	owner
Bellevue tower - UAE	Jitendhra	owner
Project by jithu	Jitendhra	owner
ABCD	Jitendhra	owner
New Test Project 29	Jitendhra	owner
OMAA	Jitendhra	owner
Project2	Jitendhra	owner

**2 RBQ Application Dialog**

ADD HEADERS INVITE MEMBERS

ROWS	COLUMNS	COLUMN TYPES
Basement-3	Raft Foundation	Tender
Basement-2	Retaining Wall	IFC
Basement-1	Columns	
Ground Floor	Water-Tank Wall	
1st Floor	Core-Wall	
2nd Floor	Shear-Wall	
3rd Floor	Ramp-Wall	
4th Floor	Parapet-Wall	
5th Floor		
6th Floor		
7th Floor		
8th Floor		

Edit & Delete  
Projects or Headers  
or Members

**3 RBQ Application Dialog**

ADD HEADERS INVITE MEMBERS

Below are the projects where you are a collaborator  
(You can only unassign user where you are add that user)

USER NAME	ADDED BY	ROLE
NITHIN THOMAS	JITENDHRA R	Owner
ASHISH GANESAN JEYAMATHY	JITENDHRA R	Editor
KRISHNA PRASAD JINKA PRAHLADA	JITENDHRA R	Viewer

1. "Manage Project" Dialog control for managing all Project Details .
2. "Add Headers" Dialog control for adding row and column Headers in Entry sheet page
3. "Invite Members" Dialog control for adding new user to the current project.

**Note:** New user is added by project admin(One who created the project).

DIALOG CONTROLS