 
 


- Option to use RTS pin as A17

www.smbaker.com
Digitalker Board



Digitaltalker



DB9
2 = DB_RX = from modem to computer
3 = DB_TX = from computer to modem

Populate MAX202 ot ESP8266, but not both!!