
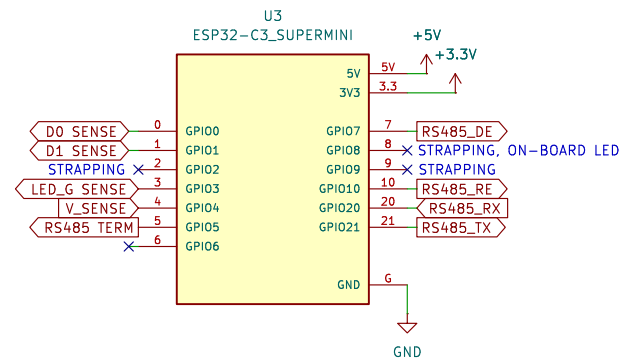


must be powered from reader OR battery  
(no protection against powering from both, battery will blow)

Conn\_01x03\_Pin  
J2

GND

J1  
Conn\_01x03

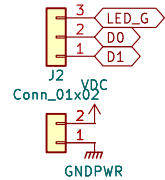

Id: 1/1