

Modes:
 1 = Off
 2 = Auto (Computer Control)
 3 = Thermostat
 4 = ON (Continuous)

Note: The computer control of Zone 4 (Hot Water) does not directly switch on the zone, but instead enables control via the cylinder stat. This is because the cylinder temperature monitoring is not sufficiently reliable to control the system directly.

Sheet: /
 File: Central_Heating_Controls.kicad_sch


Title: Boiler Control Panel 1

Size: A4 Date: 11/12/2024

KiCad E.D.A. 8.0.6

Rev: 3

Id: 1/3

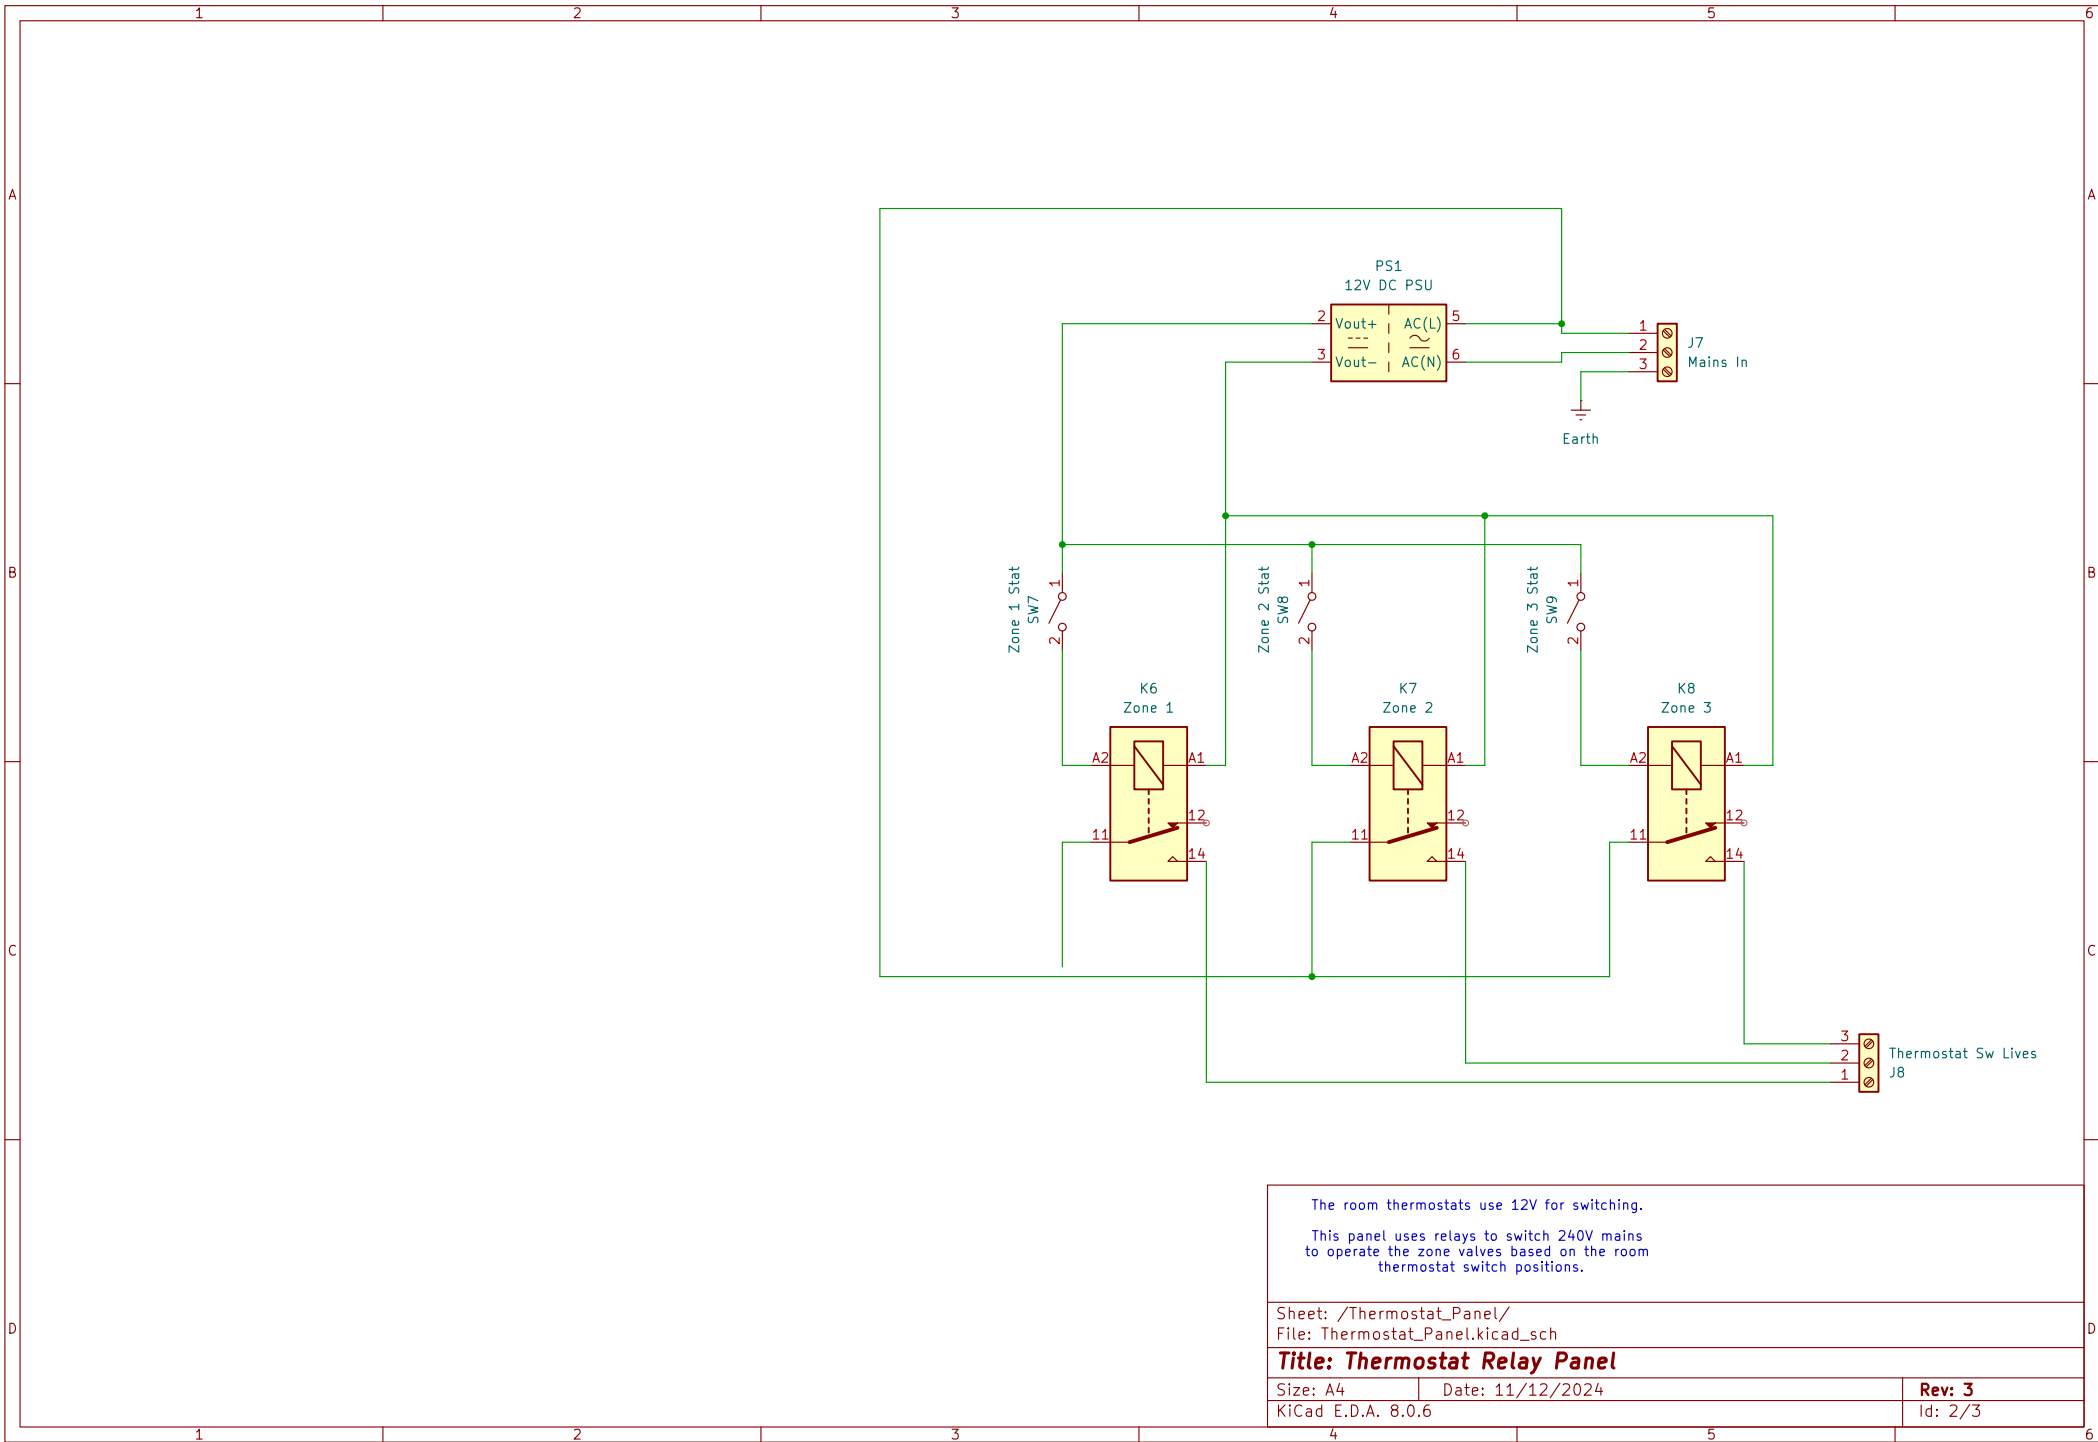

1	2	3	4	5	6
A					A
B					B
C					C
D					D
1	2	3	4	5	6

Sheet: /Valves_Junction_Box/ File: Valves_Junction_Box.kicad_sch		
Title:		
Size: A4	Date: 11/12/2024	Rev: 3
KiCad E.D.A. 8.0.6		Id: 3/3