

### Below are the commands that can be given through the serial port using hyper terminal

#### Commands:

- BL**      **Boot load command**  
Reloads the firmware in your timer – requires a Micro Wizard file with a hex extension.
- M(A-G)**      **Mask unused lanes**  
**MA** would mask out lane A. **MB** would mask out lane B and so on. **MG** would enable all lanes by clearing the mask.
- RL (0-6\*)**      **Reverse lane if 0 is set to normal** \* Number of Lanes of your track  
This command reverses the data stream sent from our timer to your computer or remote time display – ie- Lane ABC becomes CBA on your computer.
- RE**      **Reset Eliminator mode**  
If the timer is in the Eliminator mode it will reset back to the standard mode of racing.
- RF**      **Return Features in binary**  
This command will return 8 binary bits like 0011 0111. A 1 means the option is enabled (see next page for definition):  
1111 1111 all feature bits set. 0000 0000 all feature bits clear
- RS**      **Return Serial Number**
- RA**      **Reset Lane – Force Results**  
Force the timer to end the race and send the results of all lanes that have finished. This is great feature for when a car crashes, burns and falls off the track.
- LR**      **Reset Laser gate**  
When the race is over, the computer can reset the laser gate. This can work like the RA command, but does nothing if the customer does not have a Laser Gate.
- LE**      **Set timer for Eliminator mode**  
Eliminator will score only a first and second place, for lane pairs. Makes 3 races on a 6 lane tracks or 2 races on a 4 lane track.
- LF**      **Load Feature**  
This feature is enabled only with a password – guessing a serial number will give you an error and may disable features in your timer.
- LX (A-O)**      **Change Time or Disable Automatic Reset**  
In the command line, each of the letters of the alphabet A through O will add 2 seconds to the reset time. So to change the automatic reset time to 6 seconds enter: LXC, and to change the automatic reset time to 25 seconds enter: LXO  
To disable the automatic reset enter: LXP
- N0**      **Old Format**  
Converts the race time data to the old timer format:  
A=3.001! B=3.002 C=3.003 D=3.004 E=3.005 F=3.006 <LF> <CR>
- N1**      **New Format**  
Converts the race time data to the new timer format:  
A=3.001! B=3.002" C=3.003# D=3.004\$ E=3.005% F=3.006& <CR> <LF>
- RM**      **Read Mode**  
Shows the current modes set for the timer:  
6 000011 0 0 0  
Number of lanes used in reverse order mode - 6  
Lanes E and F are masked - 000011  
Lanes are not reversed - 0  
Not in eliminator mode – 0  
Old data format - 0
- PCXX**      **Count Down Timer** XX=00-99  
Enter the minutes you want the timer to count down from

#### Race Data Finish Order Punctuation:

- 21h** - ! - First Place  
**22h** - " - Second Place  
**23h** - # - 3rd  
**24h** - \$ - 4th  
**25h** - % - 5th  
**26h** - & - 6<sup>th</sup>