

1. PESUKONE 1st WASH MACHINE

BLACK
RED
WHITE
GREEN

RED

SCREEN

GREEN

BLACK

WHITE

LOOP DRIVER

J2/8 +24V

J2/7 +24V

J2/6 0V

J2/5 RL+

J2/4 RL-

J2/3 TL+

J2/2 TL-

J2/1 0V

ACCESS CODES

TO ENTER ACCESS CODES PRESS '*' KEY
UNTIL DISPLAY READS 'ACCESS CODE ='
THEN ENTER ACCESS CODE FOLLOWED BY 'E'.
A LIST OF ACCESS CODE IS SHOWN BELOW.

2361 - ENABLE MACHINE LINK
2362 - DISABLE MACHINE LINK
2363 - SHOW DATABASE ERRORS COUNT
2364 - ENTER SYSTEM SET-UP MODE
2365 - SELECT CARWASH - ULTRA / ULTRALUX
2366 - ENTER MACHINE PROGRAMS SET-UP
2369 - EXIT TEST MODE

NOTE

SET MACHINE PROGRAMS FOR BINARY OUTPUT
DRIVE/WAIT SIGNAL NOT USED ON ULTRALUX

=BACKLITE
-H32

24 VAC
10 W

=RED
-H33

24 VAC
21 W

=GREEN
-H34

24 VAC
21 W

SEIS
-S3

10

10

10

-X2

LL

11

11

11

-X2

KK

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE

PE


PE

PE

PE

PE

PE

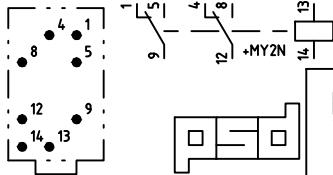

PSD CODAX - CABLE LESS
TAMMERmatic

ACCESS TERMINAL

AL- J2/7

SCRN J2/6

AL+ J2/5

I/- J2/4

I/+ J2/3

0V J2/2

+24V J2/1

0V J4/4

CTS J4/3

RX J4/2

TX J4/1

+24V J1/2

0V J1/1

J3/11 0V

J3/10 IP3

J3/9 IP2

J3/8 IP1

J3/7 DP6

J3/6 DP5

J3/5 DP4

J3/4 DP3

J3/3 DP2

J3/2 DP1

J3/1 DP1-6

0,75 grey

455

4

4

4

-X2

8

BIT COMMON

502

5

5

5

-X2

67

471

6

6

6

-X2

71

BIT 0

470

7

7

7

-X2

70

BIT 1

469

8

8

8

-X2

69

BIT 2

468

9

9

9

-X2

68

BIT 3

CONTROL BOX HX700

0,75 brown

-K401

4

8

12



SUUNN JTO

PIIRT JTO

TARK

HYV

PVM 07.08.2013

KOHDE

UB x 2

HX700

SISÄLTÖ

CODAX DUAL

KAPELOINTI

WIRING

PIIR NO

5560470

PIIR NO

5560470a.dwg

LEHTI

01 / 03

TAMPERE

FINLAND

MUUTOS

A

2. PESUKONE 2nd WASH MACHINE

BLACK
RED
WHITE
GREEN

RED

SCREEN

GREEN

BLACK

WHITE

LOOP DRIVER

J2/8 +24V

J2/7 +24V

J2/6 0V

J2/5 RL+

J2/4 RL-

J2/3 TL+

J2/2 TL-

J2/1 0V

ACCESS CODES

TO ENTER ACCESS CODES PRESS '*' KEY
UNTIL DISPLAY READS 'ACCESS CODE ='
THEN ENTER ACCESS CODE FOLLOWED BY 'E'.
A LIST OF ACCESS CODES IS SHOWN BELOW.

2361 - ENABLE MACHINE LINK
2362 - DISABLE MACHINE LINK
2363 - SHOW DATABASE ERRORS COUNT
2364 - ENTER SYSTEM SET-UP MODE
2365 - SELECT CARWASH - ULTRA / ULTRALUX
2366 - ENTER MACHINE PROGRAMS SET-UP
2367 - EXIT TEST MODE

NOTE

SET MACHINE PROGRAMS FOR BINARY OUTPUT
DRIVE/WAIT SIGNAL NOT USED ON ULTRALUX

ACCESS TERMINAL

AL- J2/7

SCRN J2/6

AL+ J2/5

I/- J2/4

I/+ J2/3

0V J2/2

+24V J2/1

0V J4/4






CTS J4/3

RX J4/2

TX J4/1

+24V J1/2

0V J1/1

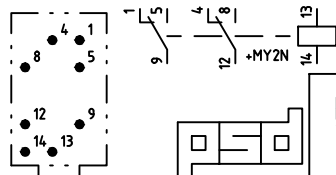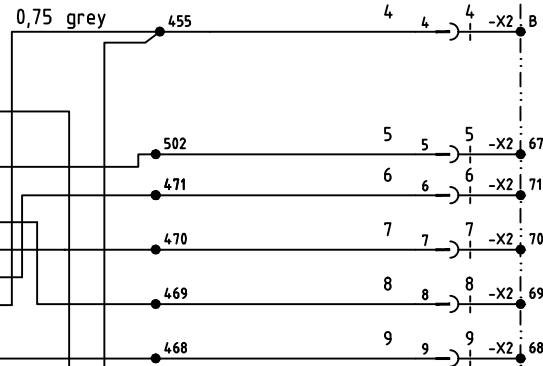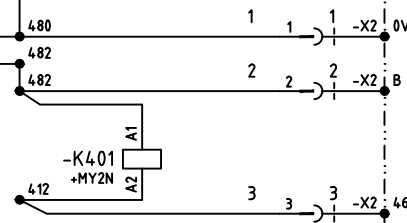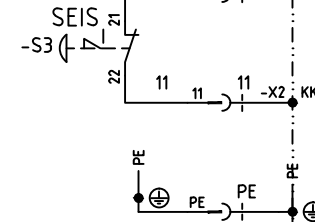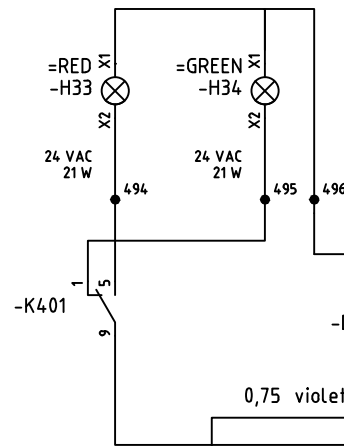

PSD CODAX - CABLE LESS
TAMMERmatic



SUUNN	JTO
PIIRT	JTO
TARK	
HYV	
PVM	07.08.2013

KOHDE
UB x 2
HX700

SISÄLTÖ
CODAX DUAL
KAAPELOINTI
WIRING

PIIR NO
5560470

PIIR NO

5560470a.dwg

LEHTI 02 / 03

MUUTOS A TAMPERE FINLAND

