

MZ - MZ_ETS_250_1972_Manual_de_reparatie

Index

Foreword

To give explanations about MZ motorcycles, we consider it unnecessary. In the far north of Finland, under the scorching sun of Africa, under the most contrasting operating conditions, the MZs roll to the satisfaction of their owners! To ensure that the vehicles remain ready for use and reliable even after prolonged operation and the associated wear, we provide the necessary instructions for our MZ workshops at home and abroad with these repair instructions. Repair is a matter of trust in several respects: The safety of the driver depends on the reliable work of the mechanic.

Recognizing the actual fault, thus no unnecessary use of materials and less labor.

Resulting from this: no rework, short downtime and lower repair costs!

In order to make this possible, we do not describe pure locksmith work (we take handicraft skills for granted), but above all the distinguishing features of various damages and their causes.

A prerequisite for professional repair is to always work with the special tools and aids recommended by MZ. We would like to emphatically point out this recommendation, especially to self-service workshops and hobbyists, so that considerable additional effort in working time and material does not arise due to false optimism.

Our MZ contract workshops can obtain the special tools from the MZ spare parts sales department, but for hobbyists there is the possibility of self-construction with the help of the sketches provided in the appendix.

We hope to impart the necessary knowledge to the employees of our contract workshops at home and abroad, as well as to our MZ friends all over the world, with this reference work and wish them every success.

VEB MOTORRADWERK ZSCHOPAU

Customer Service Department

TABLE OF CONTENTS

1 Technical Data

1.1 Engine

1.2 Carburetor

1.3 Electrical System

1.4 Transmission

1.5 Power Transmission

1.6 Chassis

1.7 Dimensions and Mass (Weight)

1.8 Filling Quantities

1.9 Maximum Speed

1.10 Braking Deceleration

1.11 Diagrams

Repair Instructions for MZ Motorcycle ES 175/2 & 250/2

<http://www.mzVb.de/miraculis/aw/mz/text/es252r/es252rep.html>

1 of 107 03.11.2008 00:18

2 Operating Resources

2.1 Fuel

2.2 Engine Oil

2.2.1 Mixing Ratio

2.3 Lubricant for Power Transmission

2.4 Lubricant for Chassis

2.5 Shock Absorber Filling

3 Disassembly of the Engine

3.1 Removing the Engine from the Chassis

3.2 Disassembling the Engine

4 Assembling the Engine

4.1 Crankshaft

4.2 Transmission

4.3 Shift Adjustment

4.4 Attaching the Right Housing Half

4.5 Aligning the Connecting Rod

4.6 Installing Piston and Cylinder

4.7 Clutch and Primary Drive

5 Electrical System

5.1 Checking the Generator

5.2 Checking and Adjusting the Ignition Interrupter

5.3 Spark Plug and Spark Plug Connector

5.4 Ignition Coil and Signal Horn

5.5 Headlight

5.6 Flasher System

5.7 Battery

5.8 Reversing the Polarity of the Generator

5.9 Regulator

5.10 Brake Light Switch

5.11 Brake/Tail/License Plate Light

6 Intake System

6.1 Intake Silencer with Dry Air Filter

6.2 Troubleshooting (Lean Mixture)

6.3 Troubleshooting (Rich Mixture)

7 Carburetor BVF N 26 N 1-1 and 28 N 1-1

7.1 General

7.2 Description of BVF Carburetors 26 N 1-1 and 28 N 1-1

7.3 Troubleshooting and Adjustment

7.4 Carburetor Basic Setting

8 Chassis

- 8.1 Removing the Fuel Tank (Installing Leg Protection Panels)
- 8.2 Checking and Adjusting the Steering Bearing
- 8.3 Removing the Handlebar
- 8.4 Replacing the Swing Arm Bearing Bolt
- 8.5 Replacing the Front Silent Blocks
- 8.6 Elastic Engine Mounting at the Rear
- 8.7 Repairing Brakes
- 8.8 Disassembling the Rear Wheel Drive
- 8.9 Replacing Wheel Bearings
- 8.10 Installing or Replacing the Secondary Chain
- 8.11 Speedometer Drive
- 8.12 Cleaning the Silencer
- 8.13 Checking Chain Slack
- 8.14 Aligning the Rear Wheel

9 Repairing Shock Absorbers

10 List of Special Tools

Repair Instructions for MZ Motorcycle ES 175/2 & 250/2

<http://www.mzVb.de/miraculis/aw/mz/text/es252r/es252rep.html>

2 of 107 03.11.2008 00:18

11 Self-Construction Sketches for Special Tools

12 Conversion Table

Appendix

Wiring Diagram (Electrical)

Exploded View Engine ES/TS 125/150

Exploded View Engine ES 250/2

Image 1. ES 175/2 and ES 250/2 (de Luxe) with Bench Seat

Image 2. ES 175/2 and ES 250/2 with Single Seats

Repair Instructions for MZ Motorcycle ES 175/2 & 250/2

<http://www.mzVb.de/miraculis/aw/mz/text/es252r/es252rep.html>

3 of 107 03.11.2008 00:18

Image 3. Engine in Cross-Section

Image 4. Engine in Longitudinal Section

1 Technical Data

Repair Instructions for MZ Motorcycle ES 175/2 & 250/2

<http://www.mzVb.de/miraculis/aw/mz/text/es252r/es252rep.html>

4 of 107 03.11.2008 00:18

1.1 Engine

next point ; Index

BL Motorcycles Ltd

Professional Workshop Manual - English Translation

	ES 175/2	ES 250/2
Operating Principle	Two-stroke (loop scavenging)	Two-stroke (loop scavenging)
Cooling Type	Air (ram air)	Air (ram air)
Number of Cylinders	1	1
Stroke / Bore (in mm)	65 / 58	65 / 69
Displacement	172 ccm	243 ccm
Compression Ratio	9:1	8.5:1
Compression Chamber of Cylinder Head (in assembled condition)	21 +/- 0.5 ccm	33 + 1 ccm
Max. Power at	5200...5500 rpm 13.5 DIN hp = 9.9 kW or 15 SAE hp	5000...5300 rpm 17.5 DIN hp = 12.9 kW or 19.5 SAE hp
Max. Torque	1.85 kpm at 5000...5100 rpm	2.5 kpm at 4500...4700 rpm
Lubrication	Mixing ratio 33:1 with two-stroke engine oil	
Connecting Rod Bearing	Caged needle bearing for crank pin (KN 28x35x20) and piston pin (KKN 18x22x24 NF)	
Crankshaft Main Bearing	2 bearings 6305 c 003 f (low noise), 1 bearing 6302	
Lubrication of Crankshaft Main Bearings	By transmission lubricant	
Piston	With 2 piston rings, upper ring chromed	With 3 piston rings, upper ring chromed
Piston Mass with Rings, Pin and Clips	240 + 5g	360 + 5g
Cylinder	(Wide finned) with cast-in liner made of special gray cast iron	
Valve Timing in Degrees Crank Angle		
Intake	140°	140°
Transfer	113°	113°
Exhaust	165°	160°

1.2 Carburetor

next point ; Index

	ES 175/2	ES 250/2
Type	BVF N 26 N 1-1	BVF N 28 N 1-1
Repair Instructions for MZ Motorcycle ES 175/2 & 250/2		
http://www.mzVb.de/miraculis/aw/mz/text/es252r/es252rep.html		
5 of 107 03.11.2008 00:18		
Bore	26 mm	28 mm
Main Jet	100	107
Needle Jet	65	67
Part Throttle Needle No.	K 2 with 5 notches	K 3 with 5 notches
Needle Position from Top	3...4 *	3...4 *
Starting Jet	90	100
Idle Jet	35	40
Float Needle Valve	18	18
Idle Air Screw	1 1/2 ... 2 1/2 turns open	2 ... 3 turns open
Transition Bore	1.5 mm	1.5 mm

BL Motorcycles Ltd

Professional Workshop Manual - English Translation

| Idle Bore | 0.8 mm | 0.8 mm |

| *) For the adjustment, in addition to the driving behavior, the spark plug appearance is decisive! | | |

1.3 Electrical System

next point ; Index

| ES 175/2 | ES 250/2 |

| ----- | ----- | ----- |

| Ignition | Battery Ignition | Battery Ignition |

| Ignition Timing | 3.0 +/- 0.5 mm before TDC with fully extended centrifugal weights = 22° 15' crank angle | 3.0 +/- 0.5 mm before TDC with fully extended centrifugal weights = 22° 15' crank angle |

| Breaker Point Gap | 0.3 + 0.1 mm | 0.3 + 0.1 mm |

| Spark Plug | Isolator M 14/260 | Isolator M 14/260 |

| Electrode Gap | 0.6 mm | 0.6 mm |

| Generator | DC, 6V, 60W, Short-term 90W |

| Charge Control Lamp | (Red) in the speedometer |

| Regulator | RSC 60/6, under the left fairing |

| Battery | 6V, 12Ah (lead-acid flat battery) |

| Ignition Coil | 6V, under the left fairing |

| Headlight | Fixed, 170 mm light exit, low beam asymmetrical |

| Dimmer Switch | On the left handlebar |

| Brake/Tail/License Plate Light | |

| Brake Light Contact | On the rear brake lever |

Repair Instructions for MZ Motorcycle ES 175/2 & 250/2

<http://www.mzVb.de/miraculis/aw/mz/text/es252r/es252rep.html>

6 of 107 03.11.2008 00:18

| Turn Signals | On both sides of the handlebar ends (switch on the right handlebar) |

| Flasher Relay | In the headlight housing |

| Signal Horn | Under the fuel tank |

| High Beam | Is activated by push button under the dimmer switch |

| Bulbs | |

| Bilux | 6V, 45/40W, low beam asymmetrical |

| Parking Light | 6V, 4W, socket BA 9s |

| Brake Light | 6V, 18W, socket SN 8.5 |

| Tail Light | 6V 5W, socket SN 8 |

| Turn Signal | 6V, 18W, socket SN 8.5 |

| Charge Control | 6V, 1.2W |

| Neutral Indicator | 6V, 1.2W |

| Speedometer Illumination | 6V, 1.2W |

1.4 Transmission

next point ; Index

| ES 175/2 | ES 250/2 |

| ----- | ----- | ----- |

BL Motorcycles Ltd

Professional Workshop Manual - English Translation

Shifting	Foot shift (ratchet, segment, cam drum)	
Number of Gears	4	
Gear Ratio		
1st Gear	2.77:1 = 13:36 teeth	
2nd Gear	1.63:1 = 19:31 teeth	1.8:1 = 15:27 teeth (from engine no. 4512291 and engine no. 4623112)
3rd Gear	1.23:1 = 22:27 teeth	
4th Gear	0.92:1 = 25:23 teeth	
Bearing on Drive Shaft	6204 (20x47x14) and 6203 (17x40x12)	
Bearing on Output Shaft	6203 (17x40x12) and 6204 (20x47x14)	
Neutral Indicator	Electrical control lamp (green) in the speedometer	

1.5 Power Transmission

Repair Instructions for MZ Motorcycle ES 175/2 & 250/2

<http://www.mzVb.de/miraculis/aw/mz/text/es252r/es252rep.html>

7 of 107 03.11.2008 00:18

next point ; Index

	ES 175/2	ES 250/2
Clutch	On left crankshaft stub, in oil bath. 5 friction discs with cork content	
Ratio Engine/Transmission	By helical spur gears 2.43 : 1 = 28 : 68 teeth	
Ratio Transmission/Rear Wheel	By roller chain 2.65 : 1 = 17 : 45 teeth 12.7x7.75x8.51 mm (1/2x5/16 inch) 116 links	
	2.14 : 1 = 21 : 45 teeth 118 links (With sidecar: 2.65 : 1 = 17 : 45 teeth)	

1.6 Chassis

next point ; Index

	ES 175/2	ES 250/2
Frame	Closed single-tube frame, welded, steering head brazed. Intake air through upper frame tube, elastic engine mounting in silent blocks	
Steering Angle	63°	
Trail	105 mm	
Trail with Sidecar	65 mm	
Suspension Type	Long swingarm front and rear	
Front Suspension	Telescopic fork with oil-hydraulic damping, travel 142 mm	
Rear Suspension	Strut with oil-hydraulic damping, spring hardness adjustable, travel 115 mm	
Wheels	Wire-spoke wheels with uncranked spokes	
Rim Size	Front 1.85 Bx16 Rear 2.15 Bx16	
Tires	Front 3.25-16 (or 3.00-16) Rear 3.50-16	
Tire Pressure (Gauge Pressure)		

BL Motorcycles Ltd

Professional Workshop Manual - English Translation

Front	1.4 atm	
Rear	1.9 atm for solo ride 1.9 atm for solo ride	
	2.1 atm for passenger ride 2.1 atm for passenger ride and sidecar operation 2.6 atm for fully occupied team	