


# Smart Thermostat

## Hardware Control Map

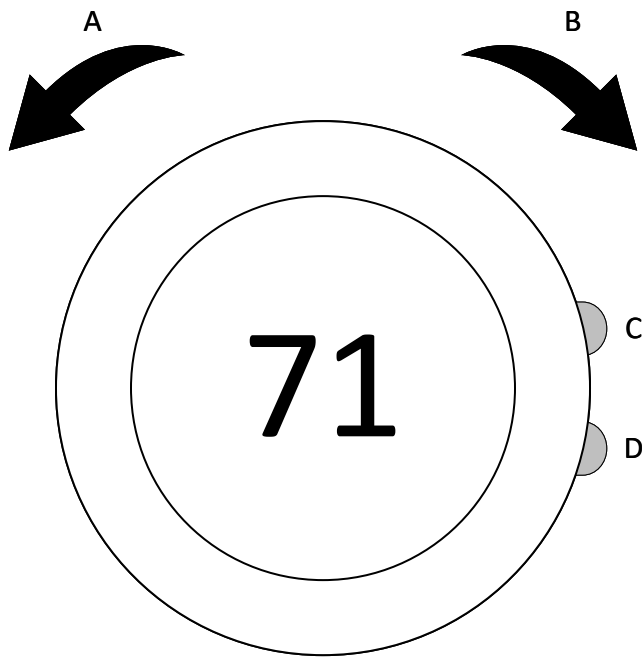

**A** – Turn the outer wheel of the Thermostat counter-clockwise to reduce temperature, and to move left or up within menus.

**B** – Turn the outer wheel of the Thermostat clockwise to increase temperature, and to move right or down within menus.

**C** – Pressing the upper button opens the menu, and is used as the “Yes” button, used to save or confirm selections in menus.

**D** – Pressing the lower button is the “No” or “Cancel” button, used to reject changes or exit from menus.

**Screen** – The screen displays the current temperature and basic system behavior, as well as menu options, mode selections, and other available settings.