

## Set Serial Number Request

### Setup Packet

0x21	Request Type	0..... .01..... ...00001	Direction: Host to Device Type: Class Recipient: Interface
0x09	Request	00001001	Set Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x0018	Length - Report Length	0x0018	Data Length 24 Bytes

### Data Packet

0x01	Command Number	0x01	Set Property
0x07	Data Length	0x07	Data Length 7 Bytes (incl ID)
0x01	Data	0x01	Serial Number Property ID
...		...	Serial Number Value

## Set Serial Number Response

### Setup Packet

0xA1	Request Type	1..... .01..... ...00001	Direction: Device to Host Type: Class Recipient: Interface
0x01	Request	00000001	Get Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x0018	Length - Report Length	0x0018	Data Length 24 Bytes

### Data Packet

0x00	Result Code	0x00	Success
0x00	Data Length	0x00	Data Length 0 Bytes
0x00	Data	0x00	

## Get Serial Number Request

### Setup Packet

0x21	Request Type	0..... .01..... ...00001	Direction: Host to Device Type: Class Recipient: Interface
0x09	Request	00001001	Set Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x0018	Length - Report Length	0x0018	Data Length 24 Bytes

### Data Packet

0x00	Command Number	0x00	Get Property
0x01	Data Length	0x01	Data Length 1 Bytes (incl ID)
0x01	Data	0x01	Serial Number Property ID

## Get Serial Number Response

### Setup Packet

0xA1	Request Type	1..... .01..... ...00001	Direction: Device to Host Type: Class Recipient: Interface
0x01	Request	00000001	Get Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x0018	Length - Report Length	0x0018	Data Length 24 Bytes

### Data Packet

0x00	Result Code	0x00	Success
0x06	Data Length	0x06	Data Length 6 Bytes (no ID)
...	Data	...	Serial Number Value