

Set USB Serial Number Request

Setup Packet

0x21	Request Type	0..... .01..... ...00001	Direction: Host to Device Type: Class Recipient: Interface
0x09	Request	00001001	Set Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x003c	Length - Report Length	0x003c	Data Length 60 Bytes

Data Packet

0x01	Command Number	0x01	Set Property
0x10	Data Length	0x10	Data Length 16 Bytes (incl ID)
0x01	Data	0x01	USB Serial Number Property ID
...		...	USB Serial Number Value

Set USB Serial Number Response

Setup Packet

0xA1	Request Type	1..... .01..... ...00001	Direction: Device to Host Type: Class Recipient: Interface
0x01	Request	00000001	Get Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x003c	Length - Report Length	0x003c	Data Length 60 Bytes

Data Packet

0x00	Result Code	0x00	Success
0x00	Data Length	0x00	Data Length 0 Bytes
0x00	Data	0x00	

Get USB Serial Number Request

Setup Packet

0x21	Request Type	0..... .01..... ...00001	Direction: Host to Device Type: Class Recipient: Interface
0x09	Request	00001001	Set Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x003c	Length - Report Length	0x003c	Data Length 60 Bytes

Data Packet

0x00	Command Number	0x00	Get Property
0x01	Data Length	0x01	Data Length 1 Bytes (incl ID)
0x01	Data	0x01	USB Serial Number Property ID

Get USB Serial Number Response

Setup Packet

0xA1	Request Type	1..... .01..... ...00001	Direction: Device to Host Type: Class Recipient: Interface
0x01	Request	00000001	Get Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x003c	Length - Report Length	0x003c	Data Length 60 Bytes

Data Packet

0x00	Result Code	0x00	Success
0x0F	Data Length	0x0F	Data Length 15 Bytes (no ID)
...	Data	...	USB Serial Number Value

Set Device Serial Number Request

Setup Packet

0x21	Request Type	0..... .01..... ...00001	Direction: Host to Device Type: Class Recipient: Interface
0x09	Request	00001001	Set Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x003c	Length - Report Length	0x003c	Data Length 60 Bytes

Data Packet

0x01	Command Number	0x01	Set Property
0x10	Data Length	0x10	Data Length 16 Bytes (incl ID)
0x03	Data	0x01	Device Serial Number Property ID
...		...	Device Serial Number Value

Set Device Serial Number Response

Setup Packet

0xA1	Request Type	1..... .01..... ...00001	Direction: Device to Host Type: Class Recipient: Interface
0x01	Request	00000001	Get Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x003c	Length - Report Length	0x003c	Data Length 60 Bytes

Data Packet

0x07	Result Code	0x00	Invalid Operation
0x00	Data Length	0x00	Data Length 0 Bytes
0x00	Data	0x00	

Get Device Serial Number Request

Setup Packet

0x21	Request Type	0..... .01..... ...00001	Direction: Host to Device Type: Class Recipient: Interface
0x09	Request	00001001	Set Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x003c	Length - Report Length	0x003c	Data Length 60 Bytes

Data Packet

0x00	Command Number	0x00	Get Property
0x01	Data Length	0x01	Data Length 1 Bytes (incl ID)
0x03	Data	0x01	Device Serial Number Property ID

Get Device Serial Number Response

Setup Packet

0xA1	Request Type	1..... .01..... ...00001	Direction: Device to Host Type: Class Recipient: Interface
0x01	Request	00000001	Get Report
0x0300	Value - Report Type and ID	0x03 0x00	Feature Report No Report ID
0x0000	Index - Interface Number	0x0000	Interface 0
0x003c	Length - Report Length	0x003c	Data Length 60 Bytes

Data Packet

0x00	Result Code	0x00	Success
0x0F	Data Length	0x0F	Data Length 15 Bytes (no ID)
...	Data	...	Device Serial Number Value