



Pin Wiring 1 - 20

1 – LCD SCL
 2 – LCD SDA
 3 - Ground
 4 – Menu Button
 5 – Select Button
 6 – Up Button
 7 – Down Button
 8 – Ground
 9 – Left Button
 10 – Right Button
 11 – F1 Button
 12 – F2 Button
 13 – Ground – Button board
 14 – F3 Button
 15 – Fault LED
 16 – LED 1
 17 – LED 2
 18 – Ground - LEDs
 19 – LED 3
 20 – LED 4

Pin Wiring 21 - 40

40 - LCD VCC
 39 - Open
 38 – Ground - LCD
 37 - Open
 36 – Expression Pedal Tip
 35 - Open
 34 – Footswitch MODE
 33 – Ground – Expression Pedal
 32 – Footswitch 6
 31 – Expression Pedal Sleeve
 30 – F4 Button
 29 – Footswitch 5
 28 – Ground - Footswitches
 27 – Footswitch 4
 26 – Footswitch 3
 25 – Footswitch 2
 24 – Footswitch 1
 23 - Ground
 22 – LED 6
 21 – LED 5