

VME64x Core Specifications

March 31, 2010

1 Introduction

This document provides an overview of the features VME64x slave supports. All implemented functionalities conform to the standards defined by ANSI/VITA VME64x Standard [1] [2], but not all are implemented. It also provides an overview of the default power-up configuration and configuration procedure.

The implementation follows the design rules set by Design rules for custom VME modules in CMS [3].

2 VME64x features

This chapter lists and explains features that VME64x slave implements.

2.1 CR/CSR space

For the sake of a “plug and play” capability CR/CSR space is implemented as defined by ANSI/VITA Standards for VME64 Extensions [2].

In order to provide “plug and play” capability VME64x provides a mechanism very similar to PCI. A dedicated “Configuration ROM / Control & Status Register” (CR/CSR) address space has been introduced. It consists of ROM and RAM regions with a set of well defined registers. It is addressed with the address modifier 0x2F in the A24 address space.

Every VME module occupies a 512 kB page in this address space. The location of this page in the A24 space is defined by geographical address lines on the backplane: each slot is provided with a unique geographical five bit address at the J1 connector (row d). From these bits A23...A19 of the CR/CSR page are derived. If the geographical address is not available (GA parity bit does not match), base address is set to 0x00, which indicates a faulty condition.

The CR/CSR space can be accessed with the data width D08(E0). Please note that in compliance with the CR/CSR definition, only every fourth location in the CR/CSR space is used.

In addition to the standard CSR space, user CSR space is also implemented and it contains IRQ Status/ID registers. User CSR space is located in address space from 0x7FBFF to 0x7FBE7.

Configuration ROM (CR) and Configuration RAM (CRAM) are implemented externally. Designers should see to it that data contained in the CR depicts the correct VME64x core specifications as presented in this document.

The layout of the configuration space is depicted in Figure 1. The location of the user defined CR and CSR regions as well as the CRAM region are programmable. For each of these, six bytes defining the start and the end address (with respect to the start of the configuration space) are reserved in the CR region. Designers are free to use these regions for module specific purposes. Dedicated software must deal with the content. If a user defined region is not implemented the start and end address must be set to 0x000000.

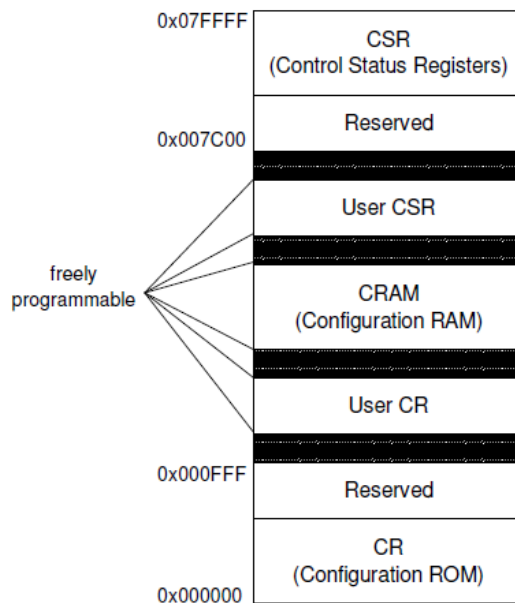


Figure 1: Configuration space organization in VME64x

Please refer to ANSI/VITA VME64 Extensions [2] for further information on the CR/CSR space.

2.2 Data types

This VME64x core supports D08(OE), D16, D32, D64 and unaligned data transfers. The implementation assumes that the target data memory is 8-bit wide. Upon D16 access, only every other byte is addressed, upon D32 every fourth and upon D64 data access only every eighth byte is addressed. Designers who do not need the 8-bit granularity and would prefer bigger data widths can choose to ignore least significant bits of the local address.

2.3 Addressing types

Table 1 lists supported addressing types with their address modifier codes:

Mnemonic	AM code (hex)	Description
A24	3D	24-bit addressing
A24_BLT	3B	24-bit addressing block read/write (limited to 256 cycles)
A24_MBLT	3C	24-bit addressing multiplexed block read/write for D64 data access
A24_LCK	32	24-bit addressing ADOH lock cycle
A16	2D	16-bit addressing
A16_LCK	2C	16-bit addressing ADOH lock cycle
A32	0D	32-bit addressing
A32_BLT	0F	32-bit addressing block read/write (limited to 256 cycles)
A32_MBLT	0C	32-bit addressing multiplexed block read/write for D64 data access
A32_LCK	05	32-bit addressing ADOH lock cycle
A64	01	64-bit addressing
A64_BLT	03	64-bit addressing block read/write (limited to 256 cycles)
A64_MBLT	03	64-bit addressing multiplexed block read/write for D64 data access
A64_LCK	04	64-bit addressing ADOH lock cycle
CR_CSR	2F	24-bit addressing for CR/CSR access

Table 1: Supported addressing types

Lock ADOH (address only with handshake) cycles are used to lock out the addressed resource for the period of the current VME bus grant (during which BBSY signal is low).

2.4 2e transfers

In addition to the addressing and transfer types listed in Table 1, two edge transfers are also supported (2eVME and 2eSST transfers). Address modifier 0x20 is used for these transfers.

With 2e transfers, master supplies the address along with some additional data in three address phases as depicted in Table 2.

Signal Line	Address Phase 1	Address Phase 2	Address Phase 3	Data Phase
AM[5:0]	0x20	0x20	0x20	0x20
A[7:0]	XAM Code	A[3:0] = 0 Device Address A[7:4]	Reserved	D[39:32]
A[15:8]	Device Address A[15:8]	Beat count for 2eVME transfers Cycle Count for 2eSST transfers	Reserved	D[47:40]
A[23:16]	Device Address A[23:16]	A[23:21] = 0 A[20:16] = GA of Master	Reserved	D[55:48]
A[31:24]	Device Address A[31:24]	Subunit Number in Master	Reserved	D[63:56]
D[31:0]	Device Address A[63:32] (= 0 for A32)	D[3:0] = Transfer Rate for 2eSST D[4] = Odd Bit for 2eSST D[31:5] = Reserved	Reserved	D[31:0]

Table 2: 2e address cycles

Address bits 7 down to 0 (note: signal LWORD is regarded as address bit 0) in the first address phase carry an extended address modifier or XAM. Table 3 shows the supported XAMs.

Extended Address Modifier Code (XAM)	Address/Data Mode
0x01	A32/D64 2eVME
0x02	A64/D64 2eVME
0x11	A32/D64 2eSST
0x12	A64/D64 2eSST

Table 3: Supported extended address modifiers

Please note, that in order to use these types of transfer, ADER registers in CSR space have to be configured accordingly.

2.5 Signals

This section focuses on functionality of certain VME bus signals.

2.5.1 RESET

RESET resets the entire core to the default configuration. Auto reset is performed on power-up.

2.5.2 BERR

BERR signal is used to signal a bus error. A transfer cycle is terminated with assertion of this signal if the VME64x slave does not recognize the data or addressing type used in the transfer cycle, if master attempts to write to a read-only memory (CR) or if error is received from the module which is addressed.

2.5.3 RETRY

RETRY signal terminates the transfer cycle if VME64x slave receives a retry request from the addressed module, signaling that the read/write request cannot be completed at this time.

2.6 Interrupts

Interrupt controller is a ROACK type controller.

Upon detecting a rising edge on the interrupt request signal input, the VME64x core drives the IRQ request line on the VME bus low thus issuing an interrupt request. VME master acknowledges the interrupt in a form of an IACK cycle. After the interrupt is acknowledged, the VME IRQ line is released.

There are seven VME IRQ lines but only one interrupt request input. For the purpose of configuring which of the seven IRQ lines the VME64x core will drive (in response to a rising edge on the IRQ input), an IRQ Level register has been implemented in the user CSR space. The value of this register corresponds to the number of the IRQ line on the VME bus that is to be used (note that on the VME master side priorities are taken into an account, IRQ7 having the highest priority and IRQ1 the lowest). If the IRQ level register is set to 0x00 or values above 0x07, interrupts are disabled (which is also the default power-up and reset configuration).

After each IACK cycle, 8-bit Status/ID register is presented on the data bus by the VME64x slave. IRQ Status/ID register is located in the user CSR space and can be written or read by the VME master as any other register in the CSR space.

Register	Address
IRQ Status/ID	0x7FBFF
IRQ Level	0x7FBFB

Table 4: IRQ-related registers memory mapping

3 Configuration

Upon power-up or reset, module is disabled and only it's CR/CSR space can be accessed. Software must then first map the module memory in the 64-bit address space by setting Address Decoder Compare (ADER) registers in CSR, which, together with Address Decoder Mask (ADEM) registers in CR relocate the module memory to the desired address range. Please note that since 64-bit address space is supported, two consecutive ADEMs and ADERs form address relocation for one "function", so designers can implement up to four different memory relocations, but addressing which ever one of them will trigger a memory request to the module. ADER for each function also contains an AM or XAM code to which it responds.

After the module has been placed in the desired address space, it can be enabled by writing into Bit Set Register in the CSR and thus setting the correct enable bit.

4 References

- [1] ANSI/VITA, American National Standard for VME64, April 1995.
- [2] ANSI/VITA, American National Standards for VME64 Extensions, October 1998.
- [3] ANSI/VITA, American National Standards for 2eSST, December 1999.
- [4] VME64x in CMS, Design rules for custom VME modules in CMS, January 2004.