



Strength Reduction Method for Slope Stability

Introduction

The strength reduction method in combination with finite element analysis is a tool to find the factor of safety (FOS) in geomechanics, particularly for the stability of slopes and embankments. In the strength reduction method, the characteristic material properties are gradually reduced until failure occurs. Although the definition of an FOS depends on the context, in geotechnical problems it is defined with respect to the strength parameters of the soil, as discussed in [Ref. 1](#).

The strength reduction method is applicable to linear failure criteria, like the Mohr–Coulomb criterion. When the Mohr–Coulomb criterion is used with the strength reduction method, the cohesion, the angle of internal friction, and the dilatation angle are simultaneously reduced until mechanical equilibrium is lost. Decreasing the material parameters results in a reduction of the shear strength of the soil, which eventually becomes unstable. This phenomena produces a collapse of the slope for a certain combination of loads, material parameters, and boundary conditions. The ratio between the initial cohesion and the cohesion at failure gives the FOS. More details of the method are given in [Ref. 1](#) and [Ref. 2](#).

The geometry, boundary conditions, loading conditions, and material parameters in this example are the same as discussed in [Ref. 1](#). A similar example model can be found in *Slope Stability in an Embankment Dam*.

Model Definition

[Figure 1](#) shows a cross section of the soil embankment. The lengths L_1 and L_2 are 85 m, and 20 m, respectively, and the heights of the embankment H_1 and H_2 are 20 m and 10 m, respectively. The slope angle α varies from 15° to 45° .

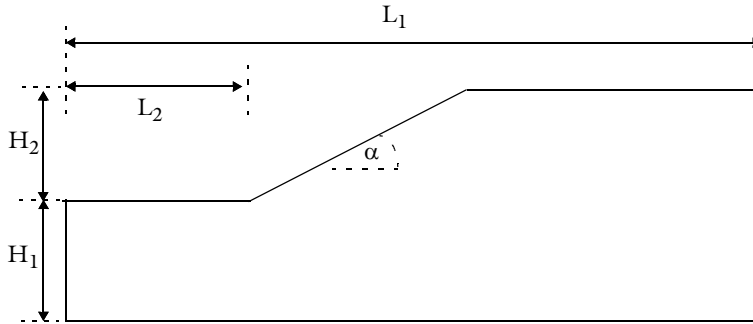


Figure 1: Geometry of the cross-section of an embankment.

The material properties for both associative and nonassociative plasticity are summarized in [Table 1](#), and taken from [Ref. 1](#)

TABLE 1: MATERIAL PROPERTIES.

PROPERTY	MATERIAL CASE 1	MATERIAL CASE 2
E	20 MPa	20 MPa
ν	0.3	0.3
c	20 kPa	20 kPa
ϕ	25°	25°
ψ	0°	25°
ρ	1940 kg/m ³	1940 kg/m ³

A plane strain approximation is used to model the soil embankment in 2D. The effect of gravity is included. The material properties for the Mohr–Coulomb model are parameterized with respect to a factor of safety parameter, FOS. A parametric study increases the FOS parameter, thereby reducing the strength of the soil with every parameter step. The actual factor of safety is the value of the FOS parameter at which the model no longer converges, which is an indication of the collapse of the slope.

The Mohr–Coulomb yield function F and plastic potential Q are

$$F = m\sqrt{J_2} + \frac{\sin\Phi}{3}I_1 - C\cos\Phi \quad (1)$$

$$Q = m_q\sqrt{J_2} + \frac{\sin\Psi}{3}I_1 - C\cos\Psi \quad (2)$$

where I_1 is the first stress invariant and J_2 is the second deviatoric stress invariant. The parameterized cohesion C , parameterized angle of internal friction Φ , and parameterized dilatation angle Ψ are given in terms of the FOS,

$$C = \frac{c}{\text{FOS}}, \Phi = \text{atan}\left(\frac{\tan\phi}{\text{FOS}}\right), \Psi = \text{atan}\left(\frac{\tan\psi}{\text{FOS}}\right) \quad (3)$$

where c is the cohesion, ϕ is the angle of internal friction, and ψ is the dilatation angle. Note that c , ϕ , and ψ are initial, unreduced material parameters. For the associative flow rule, $\phi = \psi$.

For the nonassociative flow rule, ψ is kept constant as long as it is smaller than Φ , see [Ref. 2](#) for details. However, in this example, ψ is zero when using the nonassociative flow rule, so no special treatment is needed, and [Equation 3](#) is applicable to the associative as well as the nonassociative flow rule.

For the nonassociative flow rule, the strength reduction method might trigger numerical instabilities, which in turn can result in a nonunique failure surface and corresponding FOS. To avoid potential instabilities and convergence issues, the *Davis procedure B* approach, as suggested in Ref. 1 and Ref. 2, is used. In this approach, the associative flow rule is applied with reduced values of the cohesion and the angle of internal friction to capture the effects of the nonassociative flow rule. The reduced cohesion c' and the reduced angle of internal friction ϕ' are given by

$$c' = \beta c, \phi' = \text{atan}(\beta \tan \phi) \quad (4)$$

where the *reduction factor* β is

$$\beta = \frac{\cos\left(\text{atan}\left(\frac{\tan \phi}{\text{FOS}}\right)\right) \cos\left(\text{atan}\left(\frac{\tan \psi}{\text{FOS}}\right)\right)}{1 - \sin\left(\text{atan}\left(\frac{\tan \phi}{\text{FOS}}\right)\right) \sin\left(\text{atan}\left(\frac{\tan \psi}{\text{FOS}}\right)\right)}$$

Hence, Equation 3 is rewritten in terms of the reduced cohesion c' and the reduced angle of internal friction ϕ' for the associative and nonassociative flow rules, as the reduction factor β is unity for the associative flow rule.

Results and Discussion

The factor of safety (FOS) for different slope angles is shown in Figure 2. The FOS decreases as the slope angle increases, which is expected. The FOS for the same slope inclination with the nonassociative flow rule (material case 1) is always smaller than for the associative flow rule (material case 2), but the influence of the nonassociative flow rule is marginal for the material parameters chosen. The results presented in Figure 2 are in good agreement with the results presented in Figure 4 of Ref. 1. As a verification that we have reached failure, the maximum displacement of the soil embankment is shown in Figure 3 as a function of the FOS for all analyzed cases.

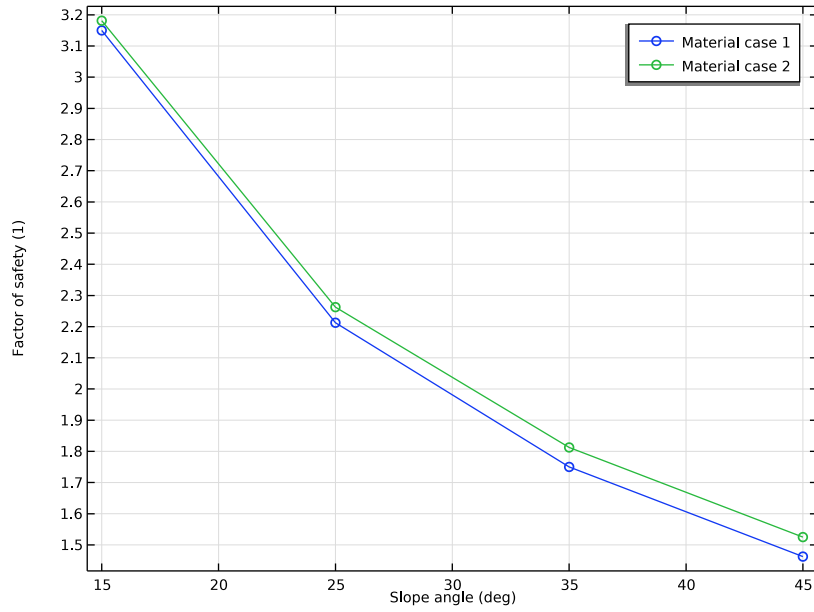


Figure 2: Factor of safety versus slope angle.

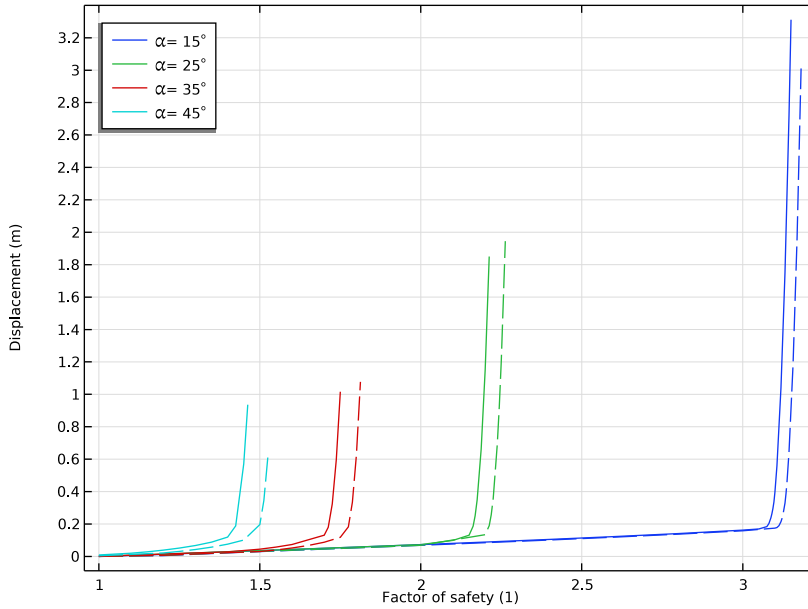


Figure 3: Maximum displacement in the soil embankment versus the factor of safety for material case 1 (solid) and material case 2(dashed).

The equivalent plastic strain for different slope angles just before collapse is shown in Figure 4 and Figure 5 for the two material sets. The localization of plastic strains in the figures gives an indication of the failure surface for different slope angles. It is evident that for lower slope angles, multiple failure surfaces develop in the embankment.

A 3D visualization of the displacement for a slope angle equal to 45° is shown in Figure 6. The results are qualitatively in good agreement with the results presented in Figure 2 of Ref. 1. The figures also clearly show how parts of the embankment outside the slip surface start sliding once the material becomes unstable.

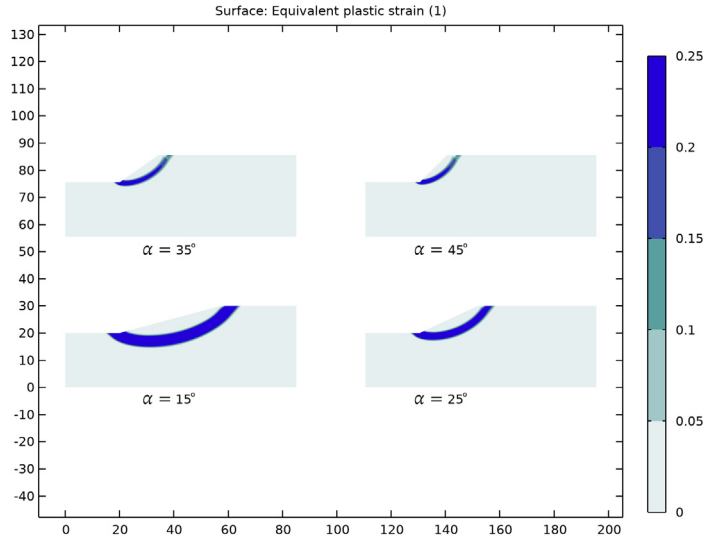


Figure 4: Equivalent plastic strain just before collapse for material case 1 (nonassociative flow).

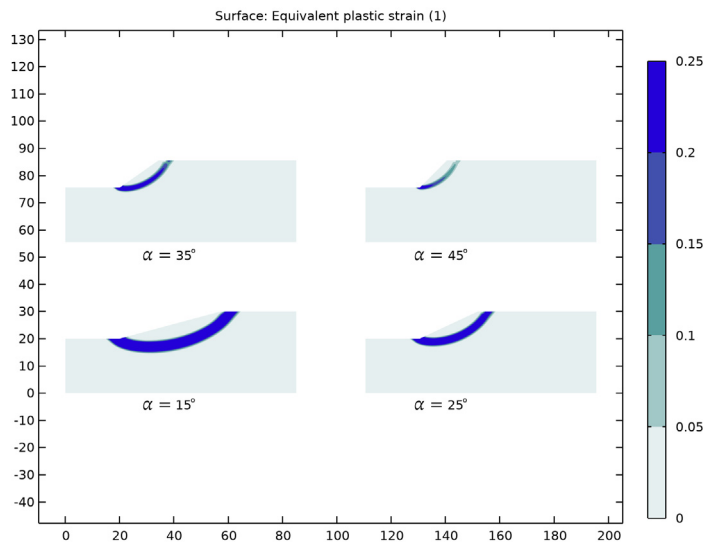


Figure 5: Equivalent plastic strain just before collapse for material case 2 (associative flow).

Case 2, $\alpha=45$ deg FOS(10)=1.525 1 Surface: Displacement magnitude (m)

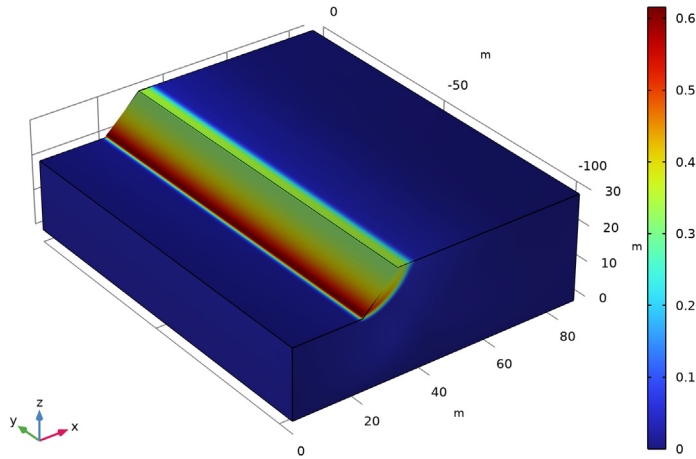


Figure 6: Displacement magnitude in the soil embankment.

Notes About the COMSOL Implementation

A **Mesh Control Domain** is added to the **Geometry** node in order to assign a denser mesh in the region where soil slippage is expected. The mesh control domain is removed from the geometry sequence once the mesh is generated, so this virtual domain is not visible in the physics selections.

Two stationary study steps are added. The first study step computes the in-situ stresses due to gravity. The Mohr–Coulomb criterion is added in the second study to compute the elastoplastic failure due to the combined effect of gravity and the reduction in strength, where the initial stresses generated in the first step are incorporated in the analysis with the help of an **Initial Stress and Strain** node.

Two outer parametric sweeps are added to change the slope angle and the set of material parameters. A **Stop Condition** is added to the continuation parameter sweep such that the solution stops when the maximum displacement in the embankment exceeds a tenth of the length of the slope.

References


1. H.F.Schweiger “Strength reduction technique with finite element method for slopes without stabilization measures,” *Benchmark, International Magazine for Engineers, Designers and Analysts from NAFEMS*, pp. 51–58, 2020.
2. S. Oberhollenzer, F. Tschuchnigg, and H.F.Schweiger “Finite element analysis of slope stability problems using non-associated plasticity,” *Journal of Rock Mechanics and Geotechnical Engineering*, vol. 10, pp. 1091–1101, 2018.

Application Library path: Geomechanics_Module/Verification_Examples/
strength_reduction_method




Modeling Instructions

From the **File** menu, choose **New**.

NEW

In the **New** window, click  **Model Wizard**.

MODEL WIZARD

- 1 In the **Model Wizard** window, click  **2D**.
- 2 In the **Select Physics** tree, select **Structural Mechanics>Solid Mechanics (solid)**.
- 3 Right-click and choose **Add Physics**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies>Stationary**.
- 6 Click  **Done**.

Parameters for the model geometry, material, and solver are available in the appended text files.






GLOBAL DEFINITIONS

Geometry and Solver Parameters

- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters 1**.
- 2 In the **Settings** window for **Parameters**, type Geometry and Solver Parameters in the **Label** text field.

- 3 Locate the **Parameters** section. Click  **Load from File**.
- 4 Browse to the model's Application Libraries folder and double-click the file `strength_reduction_method_parameters.txt`.

Material Parameters

- 1 In the **Home** toolbar, click  **Parameters** and choose **Add>Parameters**.
- 2 In the **Settings** window for **Parameters**, type **Material Parameters** in the **Label** text field.
- 3 Locate the **Parameters** section. Click  **Load from File**.
- 4 Browse to the model's Application Libraries folder and double-click the file `strength_reduction_method_material_parameters1.txt`.
- 5 In the **Home** toolbar, click  **Parameter Case**.
- 6 In the **Home** toolbar, click  **Parameter Case**.
- 7 In the **Settings** window for **Case**, locate the **Parameters** section.
- 8 Click  **Load from File**.
- 9 Browse to the model's Application Libraries folder and double-click the file `strength_reduction_method_material_parameters2.txt`.

DEFINITIONS

Define the parameterized cohesion and angle of internal friction for the Mohr–Coulomb criterion.

Variables 1



- 1 In the **Model Builder** window, expand the **Component 1 (comp1)>Definitions** node.
- 2 Right-click **Definitions** and choose **Variables**.
- 3 In the **Settings** window for **Variables**, locate the **Variables** section.
- 4 In the table, enter the following settings:

Name	Expression	Unit	Description
beta_f	$\cos(\text{atan}(\tan(\phi)/FOS)) * \cos(\text{atan}(\tan(\psi)/FOS)) / (1 - \sin(\text{atan}(\tan(\phi)/FOS)) * \sin(\text{atan}(\tan(\psi)/FOS)))$		Reduction factor
c_r	$\text{beta_f} * c$	Pa	Reduced cohesion
phi_r	$\text{atan}(\text{beta_f} * \tan(\phi))$	rad	Reduced friction angle


Name	Expression	Unit	Description
c_p	c_r/FOS	Pa	Parameterized cohesion
phi_p	atan(tan(phi_r)/FOS)	rad	Parameterized friction angle

GEOMETRY I


Polygon 1 (pol1)

- 1 In the **Geometry** toolbar, click  **Polygon**.
- 2 In the **Settings** window for **Polygon**, locate the **Coordinates** section.
- 3 From the **Data source** list, choose **Vectors**.
- 4 In the **x** text field, type 0, L1,L1,L2+Lslope,L2,0.
- 5 In the **y** text field, type 0, 0, H1+H2,H1+H2,H1,H1.
- 6 Click  **Build Selected**.



Polygon 2 (pol2)

In the **Geometry** toolbar, click  **Polygon**.

Split the geometry with a polygon to add a **Mesh Control Domain**.

- 1 In the **Settings** window for **Polygon**, locate the **Object Type** section.
- 2 From the **Type** list, choose **Open curve**.
- 3 Locate the **Coordinates** section. From the **Data source** list, choose **Vectors**.
- 4 In the **x** text field, type 0.8*L2,0.8*L2,1.3*L2+Lslope,1.3*L2+Lslope.
- 5 In the **y** text field, type H1,H1/2,H1/2,H1+H2.
- 6 Click  **Build Selected**.

Mesh Control Domains 1 (mcd1)

- 1 In the **Geometry** toolbar, click  **Virtual Operations** and choose **Mesh Control Domains**.
- 2 On the object **fin**, select Domain 2 only.
- 3 In the **Settings** window for **Mesh Control Domains**, click  **Build Selected**.


SOLID MECHANICS (SOLID)

Linear Elastic Material 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Solid Mechanics (solid)** click **Linear Elastic Material 1**.
- 2 In the **Settings** window for **Linear Elastic Material**, locate the **Quadrature Settings** section.

3 Select the **Reduced integration** check box.


Soil Plasticity I

- 1 In the **Physics** toolbar, click  **Attributes** and choose **Soil Plasticity**.
- 2 In the **Settings** window for **Soil Plasticity**, locate the **Soil Plasticity** section.
- 3 From the **Material model** list, choose **Mohr–Coulomb**.
- 4 From the **Plastic potential** list, choose **Associated**.
- 5 Click to expand the **Nonlocal Plasticity Model** section. From the list, choose **Implicit gradient**.
- 6 In the l_{int} text field, type 0.05.

Linear Elastic Material I

In the **Model Builder** window, click **Linear Elastic Material 1**.

Initial Stress and Strain I


- 1 In the **Physics** toolbar, click  **Attributes** and choose **Initial Stress and Strain**.
Add two study steps in order to account for the in situ stresses due to gravity. Add the in situ stresses computed in the first study step as initial stresses for the second study step. You can access these stresses using the `withsol` operator as follows:
- 2 In the **Settings** window for **Initial Stress and Strain**, locate the **Initial Stress and Strain** section.
- 3 In the S_0 table, enter the following settings:

<code>withsol('sol2', solid.sxx)</code>	<code>withsol('sol2', solid.sxy)</code>	<code>withsol('sol2', solid.sxz)</code>
<code>withsol('sol2',solid.sxy)</code>	<code>withsol('sol2', solid.syy)</code>	<code>withsol('sol2', solid.syz)</code>
<code>withsol('sol2',solid.sxz)</code>	<code>withsol('sol2',solid.syz)</code>	<code>withsol('sol2', solid.szz)</code>

Gravity I

In the **Physics** toolbar, click  **Global** and choose **Gravity**.

Roller I

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Roller**.
- 2 Select Boundaries 1 and 6 only.

Fixed Constraint I

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Fixed Constraint**.

- 2 Select Boundary 2 only.

MATERIALS


Soil Material

- 1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Materials** and choose **Blank Material**.
- 2 In the **Settings** window for **Material**, type Soil Material in the **Label** text field.
- 3 Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	E	E_soil	Pa	Young's modulus and Poisson's ratio
Poisson's ratio	nu	nu_soil	I	Young's modulus and Poisson's ratio
Density	rho	rho_soil	kg/m ³	Basic
Cohesion	cohesion	c_p	Pa	Mohr-Coulomb
Angle of internal friction	internalphi	phi_p	rad	Mohr-Coulomb

MESH 1

Mapped 1


- 1 In the **Mesh** toolbar, click  **Mapped**.
- 2 In the **Settings** window for **Mapped**, locate the **Domain Selection** section.
- 3 From the **Geometric entity level** list, choose **Domain**.
- 4 Select Domain 2 only.

Size 1

- 1 Right-click **Mapped 1** and choose **Size**.
- 2 Select Domain 2 only.
- 3 In the **Settings** window for **Size**, locate the **Element Size** section.

- 4 Click the **Custom** button.
- 5 Locate the **Element Size Parameters** section.
- 6 Select the **Maximum element size** check box. In the associated text field, type 0.5.

Free Quad 1

- 1 In the **Mesh** toolbar, click  **Free Quad**.
- 2 In the **Settings** window for **Free Quad**, click to expand the **Control Entities** section.
- 3 Clear the **Smooth across removed control entities** check box.

Size

- 1 In the **Model Builder** window, click **Size**.
- 2 In the **Settings** window for **Size**, locate the **Element Size** section.
- 3 From the **Predefined** list, choose **Finer**.
- 4 In the **Model Builder** window, right-click **Mesh 1** and choose **Build All**.

The material strengths are parameterized with the help of the FOS parameter. Add an auxiliary sweep for FOS in the second study step.


Add two **Parametric Sweep** nodes to change the slope angle and the material parameters.

STUDY 1

Step 1: Stationary

- 1 In the **Model Builder** window, under **Study 1** click **Step 1: Stationary**.
- 2 In the **Settings** window for **Stationary**, locate the **Physics and Variables Selection** section.
- 3 Select the **Modify model configuration for study step** check box.
- 4 In the tree, select **Component 1 (comp1)>Solid Mechanics (solid)>Linear Elastic Material 1>Soil Plasticity 1** and **Component 1 (comp1)>Solid Mechanics (solid)>Linear Elastic Material 1>Initial Stress and Strain 1**.
- 5 Right-click and choose **Disable**.

Step 2: Stationary 2


- 1 In the **Study** toolbar, click  **Study Steps** and choose **Stationary>Stationary**.
- 2 In the **Settings** window for **Stationary**, click to expand the **Values of Dependent Variables** section.
- 3 Find the **Initial values of variables solved for** subsection. From the **Settings** list, choose **User controlled**.
- 4 Click to expand the **Study Extensions** section. Select the **Auxiliary sweep** check box.

5 Click  **Add**.

6 In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
FOS (Factor of safety)	1 4	1

Parametric Sweep

1 In the **Study** toolbar, click  **Parametric Sweep**.


2 In the **Settings** window for **Parametric Sweep**, locate the **Study Settings** section.

3 Click  **Add**.

4 In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
alpha (Slope angle)	range (15, 10, 45)	deg

Parametric Sweep 2

1 In the **Study** toolbar, click  **Parametric Sweep**.

2 In the **Settings** window for **Parametric Sweep**, locate the **Study Settings** section.

3 From the **Sweep type** list, choose **Parameter switch**.

4 Click  **Add**.

5 In the table, enter the following settings:

Switch	Cases	Case numbers
Material Parameters	All	range(1,1,2)

Solution I (sol1)

1 In the **Study** toolbar, click  **Show Default Solver**.

2 In the **Model Builder** window, expand the **Solution I (sol1)** node.

3 In the **Model Builder** window, expand the **Study I>Solver Configurations> Solution I (sol1)>Stationary Solver 2** node, then click **Parametric 1**.

4 In the **Settings** window for **Parametric**, locate the **General** section.

5 From the **On error** list, choose **Skip parameter step**.

6 Click to expand the **Continuation** section. Select the **Tuning of step size** check box.

7 In the **Initial step size** text field, type 0.2.

8 In the **Maximum step size** text field, type 0.2.

9 From the **Predictor** list, choose **Constant**.

- 10 Click to expand the **Output** section. From the **Parameters to store** list, choose **Steps taken by solver**.

Add a **Stop Condition** to stop the solution when the maximum displacement in the embankment exceeds a tenth of the length of the slope.

- 11 Right-click **Study 1>Solver Configurations>Solution 1 (sol1)>Stationary Solver 2>Parametric 1** and choose **Stop Condition**.


DEFINITIONS


Maximum 1 (maxop1)


- 1 In the **Definitions** toolbar, click  **Nonlocal Couplings** and choose **Maximum**.
- 2 Select Domain 1 only.

STUDY 1

Solution 1 (sol1)

- 1 In the **Model Builder** window, under **Study 1>Solver Configurations>Solution 1 (sol1)>Stationary Solver 2>Parametric 1** click **Stop Condition 1**.
- 2 In the **Settings** window for **Stop Condition**, locate the **Stop Expressions** section.
- 3 Click  **Add**.
- 4 In the table, enter the following settings:


Stop expression	Stop if	Active	Description
comp1.maxop1(comp1.solid.disp)>Lslope/10	True (>=1)		Stop expression 1

- 5 In the **Model Builder** window, under **Study 1>Solver Configurations>Solution 1 (sol1)>Stationary Solver 2** click **Fully Coupled 1**.
- 6 In the **Settings** window for **Fully Coupled**, click to expand the **Method and Termination** section.
- 7 From the **Nonlinear method** list, choose **Constant (Newton)**.
- 8 In the **Maximum number of iterations** text field, type 8.
- 9 In the **Home** toolbar, click  **Compute**.

Create a plot showing the FOS as a function of the slope angle for the two sets of material parameters.

RESULTS

Evaluation Group 1

- 1 In the **Results** toolbar, click  **Evaluation Group**.
- 2 In the **Settings** window for **Evaluation Group**, click to expand the **Format** section.
- 3 From the **Include parameters** list, choose **Off**.

Global Evaluation 1

- 1 Right-click **Evaluation Group 1** and choose **Global Evaluation**.
- 2 In the **Settings** window for **Global Evaluation**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Parametric Solutions 1 (sol3)**.
- 4 From the **Material Parameters** list, choose **From list**.
- 5 In the **Material Parameters** list, select **Case 1**.
- 6 From the **Parameter selection (FOS)** list, choose **Last**.
- 7 Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
alpha	deg	Slope angle

- 8 Right-click **Global Evaluation 1** and choose **Duplicate**.


Global Evaluation 2

- 1 In the **Model Builder** window, click **Global Evaluation 2**.
- 2 In the **Settings** window for **Global Evaluation**, locate the **Expressions** section.
- 3 In the table, enter the following settings:

Expression	Unit	Description
FOS	1	Factor of safety

- 4 Right-click **Global Evaluation 2** and choose **Duplicate**.

Global Evaluation 3

- 1 In the **Model Builder** window, click **Global Evaluation 3**.
- 2 In the **Settings** window for **Global Evaluation**, locate the **Data** section.
- 3 In the **Material Parameters** list, select **Case 2**.
- 4 In the **Evaluation Group 1** toolbar, click  **Evaluate**.

FOS vs. Slope Angle

- 1 In the **Home** toolbar, click  **Add Plot Group** and choose **1D Plot Group**.

- 2 In the **Settings** window for **ID Plot Group**, type FOS vs. Slope Angle in the **Label** text field.
- 3 Locate the **Plot Settings** section.
- 4 Select the **y-axis label** check box. In the associated text field, type Factor of safety (1).

Table Graph 1


- 1 Right-click **FOS vs. Slope Angle** and choose **Table Graph**.
- 2 In the **Settings** window for **Table Graph**, locate the **Data** section.
- 3 From the **Source** list, choose **Evaluation group**.
- 4 Locate the **Coloring and Style** section. Find the **Line markers** subsection. From the **Marker** list, choose **Circle**.
- 5 Click to expand the **Legends** section. Select the **Show legends** check box.
- 6 From the **Legends** list, choose **Manual**.
- 7 In the table, enter the following settings:

Legends
Material case 1
Material case 2

- 8 In the **FOS vs. Slope Angle** toolbar, click  **Plot**.

Create a plot showing the maximum displacement in the embankment as a function of the FOS for all analysis cases.

Displacement vs. FOS

- 1 In the **Home** toolbar, click  **Add Plot Group** and choose **ID Plot Group**.
- 2 In the **Settings** window for **ID Plot Group**, type Displacement vs. FOS in the **Label** text field.
- 3 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 4 Locate the **Legend** section. From the **Position** list, choose **Upper left**.
- 5 Locate the **Plot Settings** section.
- 6 Select the **x-axis label** check box. In the associated text field, type Factor of safety (1).

Global 1


- 1 Right-click **Displacement vs. FOS** and choose **Global**.
- 2 In the **Settings** window for **Global**, click to expand the **Legends** section.

- 3 Locate the **Data** section. From the **Dataset** list, choose **Study 1/ Parametric Solutions 1 (sol3)**.
- 4 From the **Material Parameters** list, choose **From list**.
- 5 In the **Material Parameters** list, select **Case 1**.
- 6 Locate the **y-Axis Data** section. In the table, enter the following settings:

Expression	Unit	Description
maxop1(solid.disp)	m	Displacement


- 7 Locate the **Legends** section. From the **Legends** list, choose **Evaluated**.
- 8 In the **Legend** text field, type $\alpha = \text{eval}(\alpha, \text{deg})^{\circ}$.
- 9 Right-click **Global 1** and choose **Duplicate**.

Global 2

- 1 In the **Model Builder** window, click **Global 2**.
- 2 In the **Settings** window for **Global**, locate the **Data** section.
- 3 In the **Material Parameters** list, select **Case 2**.
- 4 Click to expand the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **Dashed**.
- 5 From the **Color** list, choose **Cycle (reset)**.
- 6 Locate the **Legends** section. Clear the **Show legends** check box.
- 7 In the **Displacement vs. FOS** toolbar, click  **Plot**.

Add plots to visualize the failure of the embankment for all cases.

ADD PREDEFINED PLOT

- 1 In the **Home** toolbar, click  **Windows** and choose **Add Predefined Plot**.
- 2 Go to the **Add Predefined Plot** window.
- 3 In the tree, select **Study 1/Parametric Solutions 1 (sol3)>Solid Mechanics> Equivalent Plastic Strain (solid)**.
- 4 Click **Add Plot** in the window toolbar.

RESULTS

Equivalent Plastic Strain (Case 1)

- 1 In the **Settings** window for **2D Plot Group**, type **Equivalent Plastic Strain (Case 1)** in the **Label** text field.

- 2 Locate the **Data** section. From the **Dataset** list, choose **None**.
- 3 Click to expand the **Title** section. From the **Title type** list, choose **Custom**.
- 4 Find the **Solution** subsection. Clear the **Solution** check box.
- 5 Locate the **Plot Settings** section. Clear the **Plot dataset edges** check box.
- 6 Click to expand the **Plot Array** section. Select the **Enable** check box.
- 7 From the **Array shape** list, choose **Square**.

Surface 1

- 1 In the **Model Builder** window, expand the **Equivalent Plastic Strain (Case 1)** node, then click **Surface 1**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Parametric Solutions 1 (sol3)**.
- 4 From the **Material Parameters** list, choose **Case 1**.
- 5 From the **Parameter value (alpha (deg))** list, choose **15**.
- 6 Right-click **Surface 1** and choose **Duplicate**.

Surface 2

- 1 In the **Model Builder** window, click **Surface 2**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Parameter value (alpha (deg))** list, choose **25**.
- 4 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 5 Click to expand the **Inherit Style** section. From the **Plot** list, choose **Surface 1**.
- 6 Right-click **Surface 2** and choose **Duplicate**.

Surface 3

- 1 In the **Model Builder** window, click **Surface 3**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Parameter value (alpha (deg))** list, choose **35**.
- 4 Right-click **Surface 3** and choose **Duplicate**.


Surface 4

- 1 In the **Model Builder** window, click **Surface 4**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Parameter value (alpha (deg))** list, choose **45**.

Equivalent Plastic Strain (Case 1)

In the **Model Builder** window, click **Equivalent Plastic Strain (Case 1)**.

Table Annotation 1

- 1 In the **Equivalent Plastic Strain (Case 1)** toolbar, click  **More Plots** and choose **Table Annotation**.
- 2 In the **Settings** window for **Table Annotation**, locate the **Data** section.
- 3 From the **Source** list, choose **Local table**.
- 4 In the table, enter the following settings:

x-coordinate	y-coordinate	Annotation
25	0	$\alpha = 15^\circ$
125	0	$\alpha = 25^\circ$
25	55	$\alpha = 35^\circ$
125	55	$\alpha = 45^\circ$

- 5 Select the **LaTeX markup** check box.
- 6 Locate the **Coloring and Style** section. Clear the **Show point** check box.

Set all plots to show the last parameter step.

Surface 1

- 1 In the **Model Builder** window, click **Surface 1**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Parameter value (FOS (1))** list, choose **3.15**.
- 4 Click to expand the **Range** section. Select the **Manual color range** check box.
- 5 In the **Maximum** text field, type 0.25.
- 6 Locate the **Coloring and Style** section. In the **Number of bands** text field, type 5.



Surface 2

- 1 In the **Model Builder** window, click **Surface 2**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Parameter value (FOS (1))** list, choose **2.2125**.

Surface 3

- 1 In the **Model Builder** window, click **Surface 3**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Parameter value (FOS (1))** list, choose **1.75**.

Surface 4

- 1 In the **Model Builder** window, click **Surface 4**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Parameter value (FOS (1))** list, choose **1.4625**.
- 4 In the **Equivalent Plastic Strain (Case 1)** toolbar, click  **Plot**.
- 5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Set up a duplicate plot group for the second material parameter case.

Equivalent Plastic Strain (Case 1)

In the **Model Builder** window, right-click **Equivalent Plastic Strain (Case 1)** and choose **Duplicate**.

Equivalent Plastic Strain (Case 2)

- 1 In the **Model Builder** window, under **Results** click **Equivalent Plastic Strain (Case 1) 1**.
- 2 In the **Settings** window for **2D Plot Group**, type Equivalent Plastic Strain (Case 2) in the **Label** text field.

Surface 1

- 1 In the **Model Builder** window, expand the **Equivalent Plastic Strain (Case 2)** node, then click **Surface 1**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Material Parameters** list, choose **Case 2**.

Surface 2



- 1 In the **Model Builder** window, click **Surface 2**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Material Parameters** list, choose **Case 2**.

Surface 3

- 1 In the **Model Builder** window, click **Surface 3**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Material Parameters** list, choose **Case 2**.


- 4 From the **Parameter value (FOS (1))** list, choose **1.8125**.

Surface 4


- 1 In the **Model Builder** window, click **Surface 4**.
- 2 In the **Settings** window for **Surface**, locate the **Data** section.
- 3 From the **Material Parameters** list, choose **Case 2**.
- 4 In the **Equivalent Plastic Strain (Case 2)** toolbar, click  **Plot**.
- 5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Create a 3D visualization of the displacements in the embankment at failure.

Extrusion 2D 1

- 1 In the **Results** toolbar, click  **More Datasets** and choose **Extrusion 2D**.
- 2 In the **Settings** window for **Extrusion 2D**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Parametric Solutions 1 (sol3)**.
- 4 Locate the **Extrusion** section. In the **z maximum** text field, type L1+L2.
- 5 Find the **Embedding** subsection. From the **Map plane to** list, choose **xz-plane**.



Displacement

- 1 In the **Results** toolbar, click  **3D Plot Group**.
- 2 In the **Settings** window for **3D Plot Group**, type Displacement in the **Label** text field.

Surface 1

Right-click **Displacement** and choose **Surface**.

Deformation 1

- 1 In the **Model Builder** window, right-click **Surface 1** and choose **Deformation**.
- 2 In the **Settings** window for **Deformation**, locate the **Scale** section.
- 3 Select the **Scale factor** check box. In the associated text field, type 1.
- 4 In the **Displacement** toolbar, click  **Plot**.
- 5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

