

Testcase ID	Test scenario	Pre condition	Expected Result
1	Verify whether elevetor goes to all the building floors from 1 to 13 or not	Elevetor should be in a working condition.	Elevetor should goes to all the floors from 1 to 13.
2	Verify whether elevetor moves up or down without pressing floor numbers keys or not.	Elevetor should have number pressing keys.	Elevetor should not moves up and down without pressing floor numbers key.
3	Verify whether elevetor door opens or not when power supply is irrerrupted.	Elevetor should have power supply connction.	Elevetor door should be open if power supply is irrerrupted.
4	Verify whether all the bulding floors are accessible with staff key card or not.	Staff Key cards should be present.	All floors should be accesssible with staff key so elevetor should move to selected floor.
5	Verify whether floor 10 to 13 are accessible with private key card	Private key card should the present.	Floor 10,11,12 and 13 should be accessible with Private Key card
6	Verify whether floor 10 to 13 are accessible without private key card	No key present	Floor 10,11,12 and 13 should not be accessible without atleast a Private Key card
7	Verify whether floor 10 to 13 are accessible with Staff key card	Staff Key cards should be present.	Floor 10,11,12 and 13 should be accessible with Staff Key card
8	Verify whether floor 7 is accessible with Staff key card	Staff Key cards should be present.	Floor 7 should be accessible with Staff key card.
9	Verify whether floor 7 is non accessible with private key card or not.	Private key card should the present.	Floor 7 should not be accessible for private key card.
10	Verify whether Elevetor moves from floor 3 to floor 5	Person is in 3rd floor right now	Elevetor should be allowed to move to floor 5 when 5th floor button is selected.
11	Verify whether Elevetor moves from floor 3 to any floor in the building	Person is in 3rd floor right now	Elevetor should not be allowed to move to any floor axcept floor 3
12	Verify whether Elevetor moves from any floor to floor 3	Person is in any floor	Elevetor should be allowed to move to floor 3
13	Verify whether elevetor stops and opens the door on the correct floors on pressing the floor number keys or not.	Pressing number keys should be present.	Elevetor should stop and open the door on the correct floors on pressing the floor number keys.