


1 To Program Up to 3 Presets: Use the up/down arrows to find desired height, then press "M" followed by the number 1, 2, or 3.

2 To Test Programmed Height: Use the up/down arrows to adjust the table to a height other than the preset height. Then push and hold the number you programmed to see if it automatically adjusts to the height programmed in Step 1.

Note: If it does not adjust to the programmed height, repeat Step 1 followed by Step 2.



Caution: Once the preset number is pushed, the base will automatically moved to the programmed height.

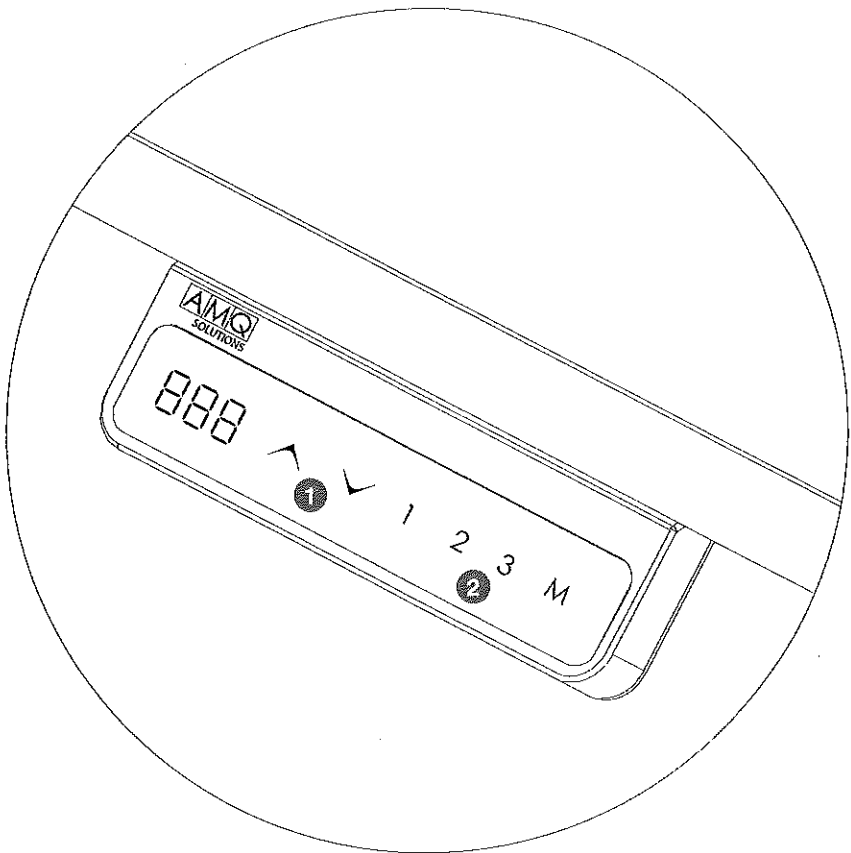

ASR/RST Error Code

- 1 Reset the Base by holding the down arrow for 10-15 seconds until it reaches its lowest point and numbers appear on the handset.

No Power

- 1 If there is no power in the Base, the Control Box may be damaged – contact us at cc@amqsolutions.com to order your replacement.

E07/E08 Error Code: Legs Not Moving Uniformly

- 1 If the legs are not moving uniformly, or the Base goes up when the down arrow is pressed, reset the Base by holding the down arrow for 10-15 seconds until it reaches its lowest point and numbers appear on the handset.
- 2 If the issue persists, swap the legs. (The legs with the pre-assembled screws should be facing the user.)

If your issue persists, please contact AMQ Customer Care at cc@amqsolutions.com or (877) 801-0370.

